


SHOCK ASSEMBLY

STEP 1

SHOCK ABSORBERS

Fill ALL 4 shock absorbers with shock oil using the following steps

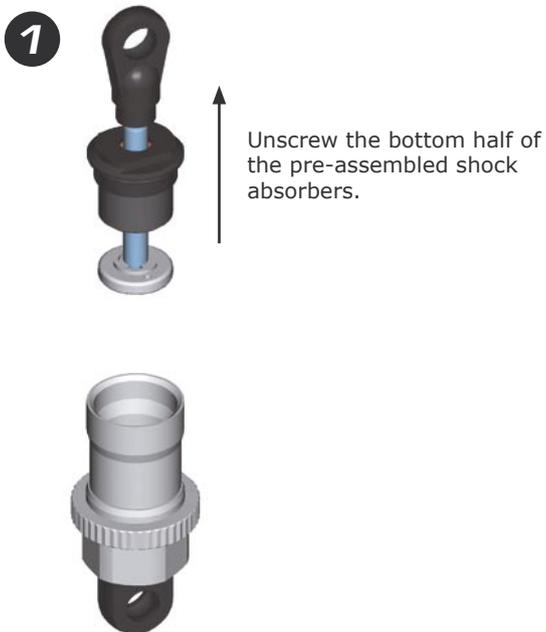

STEP 2

