


Stiffener set rr 748 TQ # 804377

STEP
1

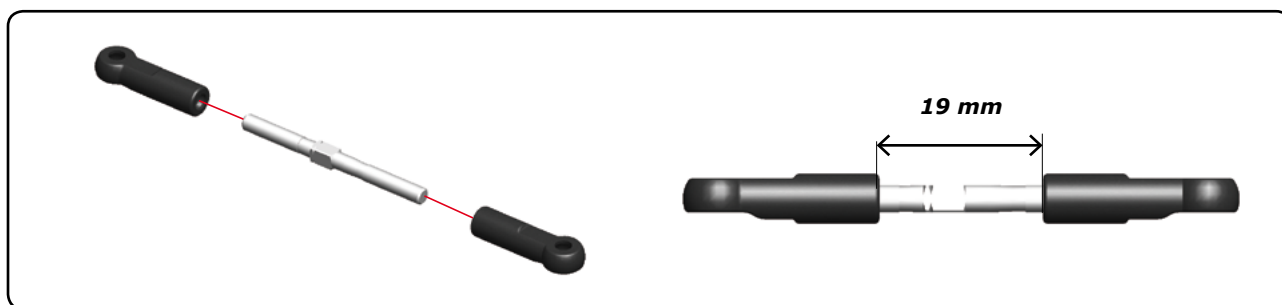

STEP
2

NOTE:
Before assembling the stiffener it is needed to remove the CS M3x10 screw

