


SHOCK ONROAD SET BIG BORE LONG (2) #160152

977
EVO
VAPER



STEP 1

1.1

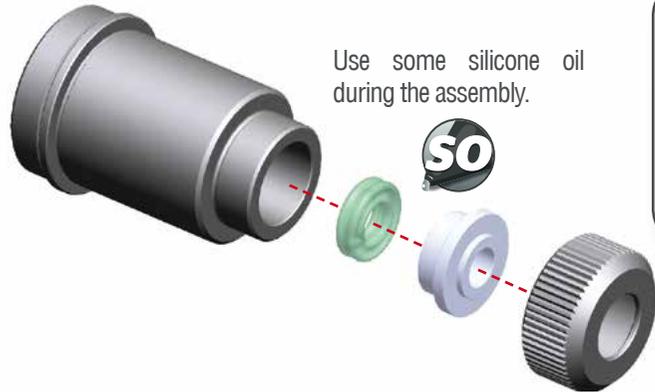

1.2




STEP 2

2.1



For the correct piston holes please check the default setupsheet.

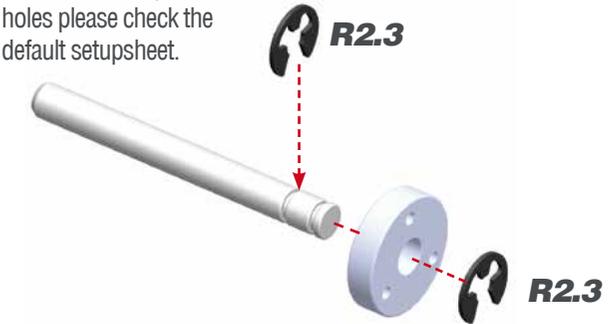

2.2 FRONT



REAR



STEP 3

3.1

Push the shock top and the membrane into the shock cap.



1-Bleed: push the shockrod all the way in slowly, to allow excessive oil to escape.

2- Close completely the shock cap.



3.2

1- Fill up with silicone oil fully using the silicone oil supplied in the kit. For the correct cst value please check the default setupsheet.

2- Extend the shockrod fully

3- Move the shockrod slowly up and down to let ALL air bubbles escape.

4- Close top only 3/4.



SHOCKS LENGTH:
Measure the shock length fully extended.


FRONT
14 mm

REAR
14.5 mm


STEP 4


Assemble the spring and spring-cup (align correctly) to complete the shock.

FRONT

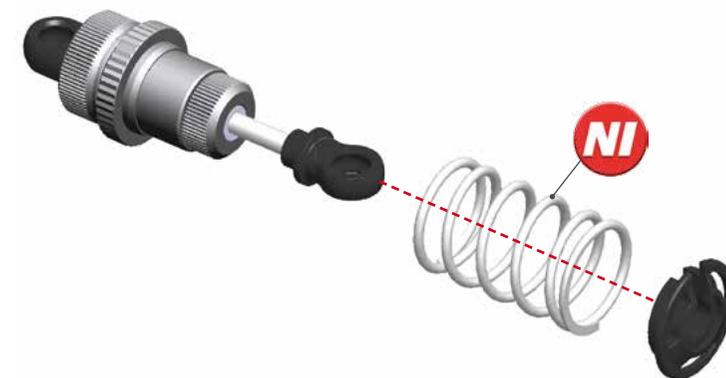

REAR

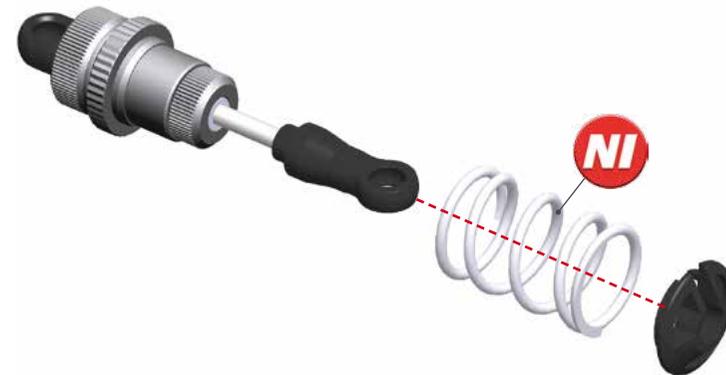

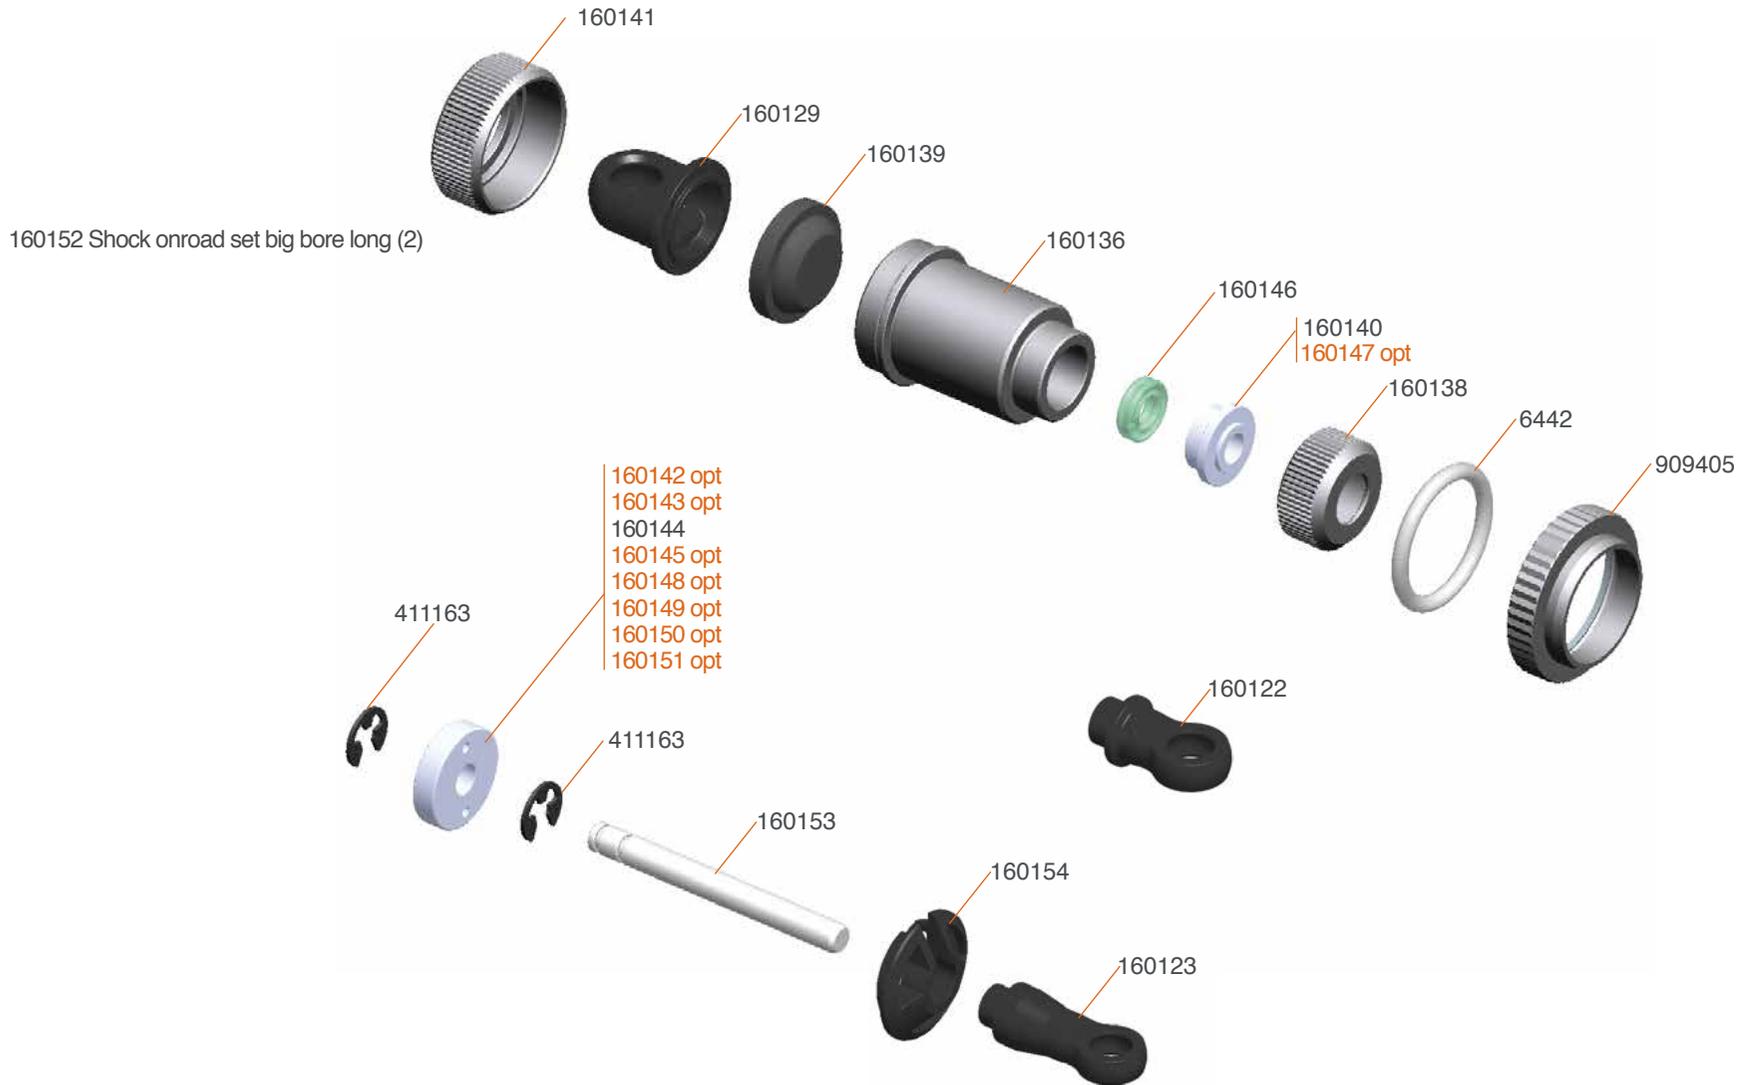

160142 Shock onroad big bore piston 1 hole (4)
 160143 Shock onroad big bore piston 2 hole (4)
 160145 Shock onroad big bore piston 4 hole (4)

160148 Shock onroad big bore piston 1 hole LF (2)
 160149 Shock onroad big bore piston 2 hole LF (2)
 160150 Shock onroad big bore piston 3 hole LF (2)

160151 Shock onroad big bore piston 4 hole LF (2)
 160147 Shock onroad big bore bushing LF (4)