


STEP 1


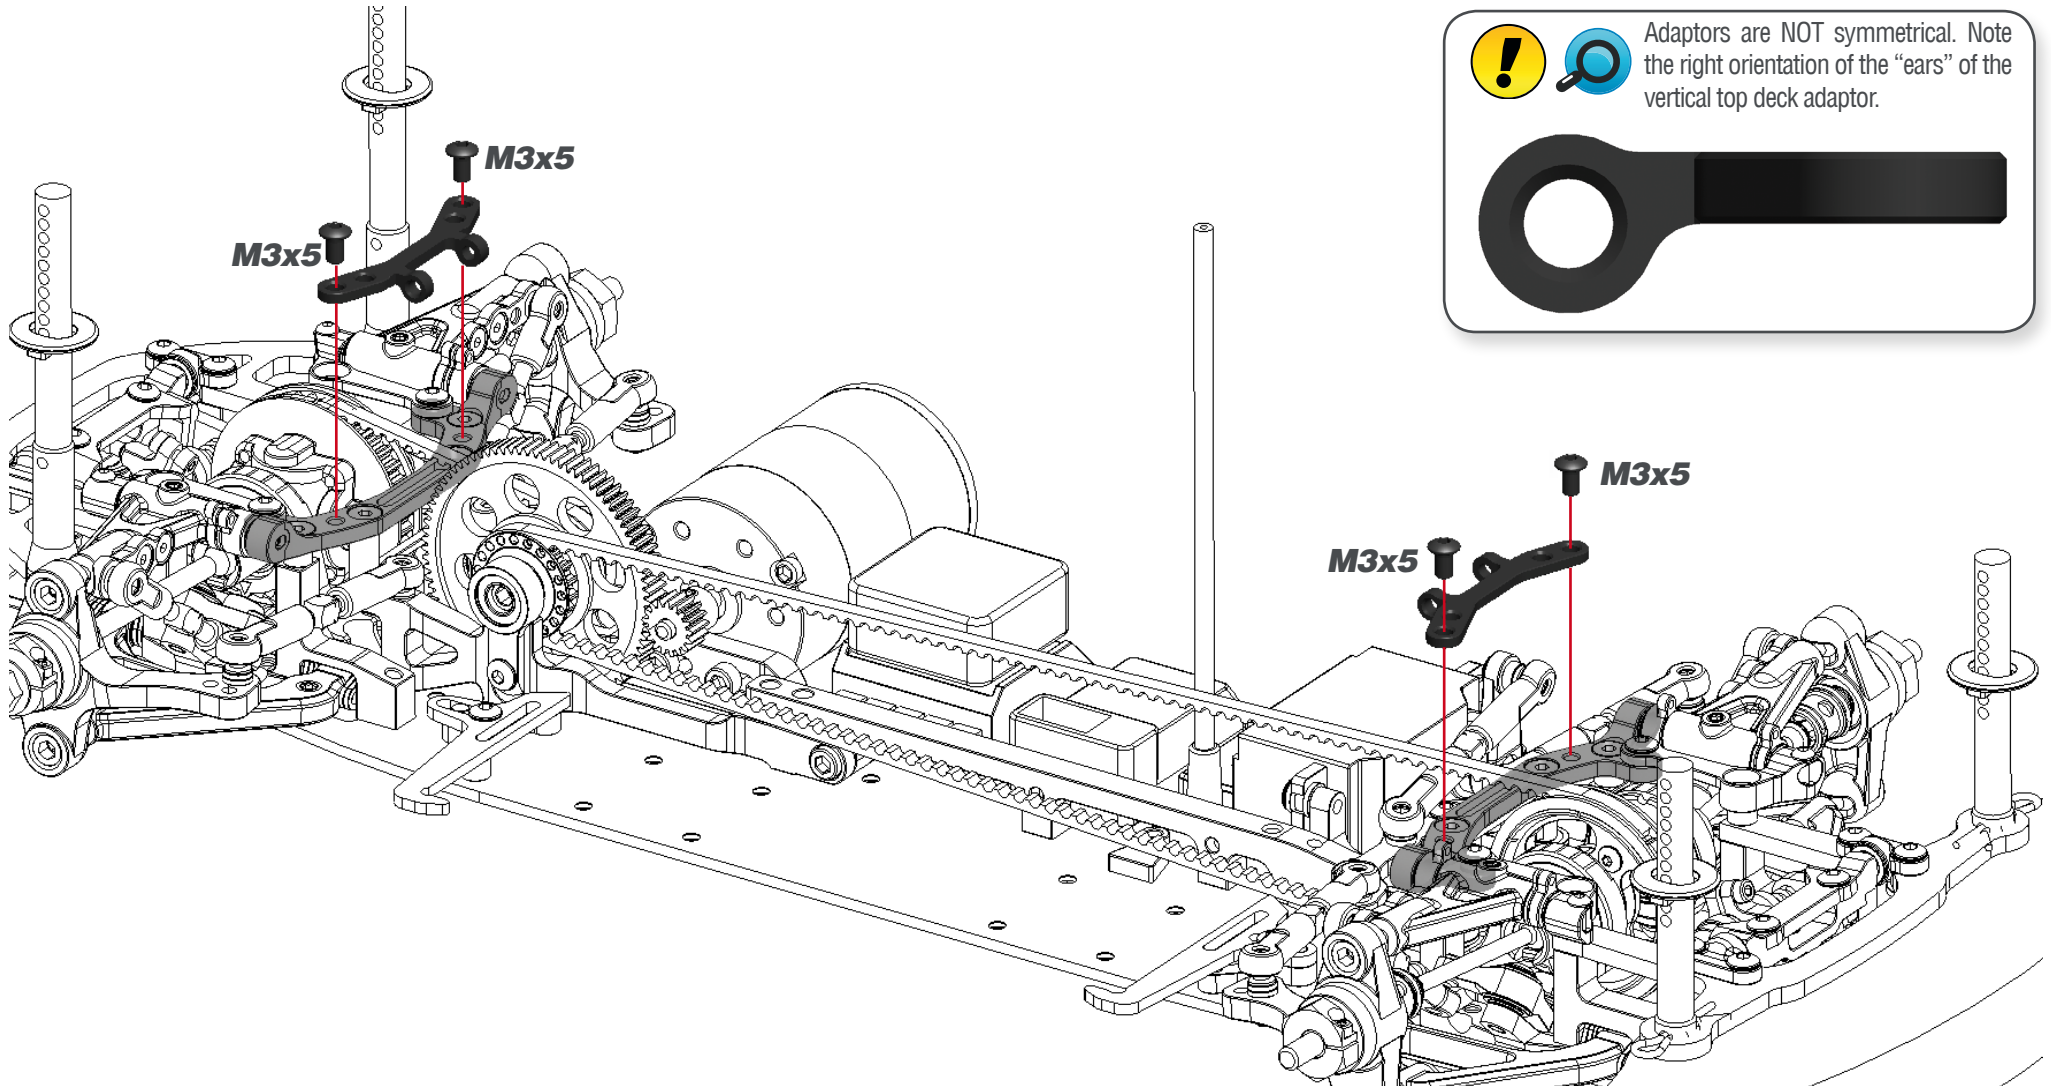


Adaptors are NOT symmetrical. Note the right orientation of the “ears” of the vertical top deck adaptor.







M3x5


STEP 2

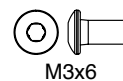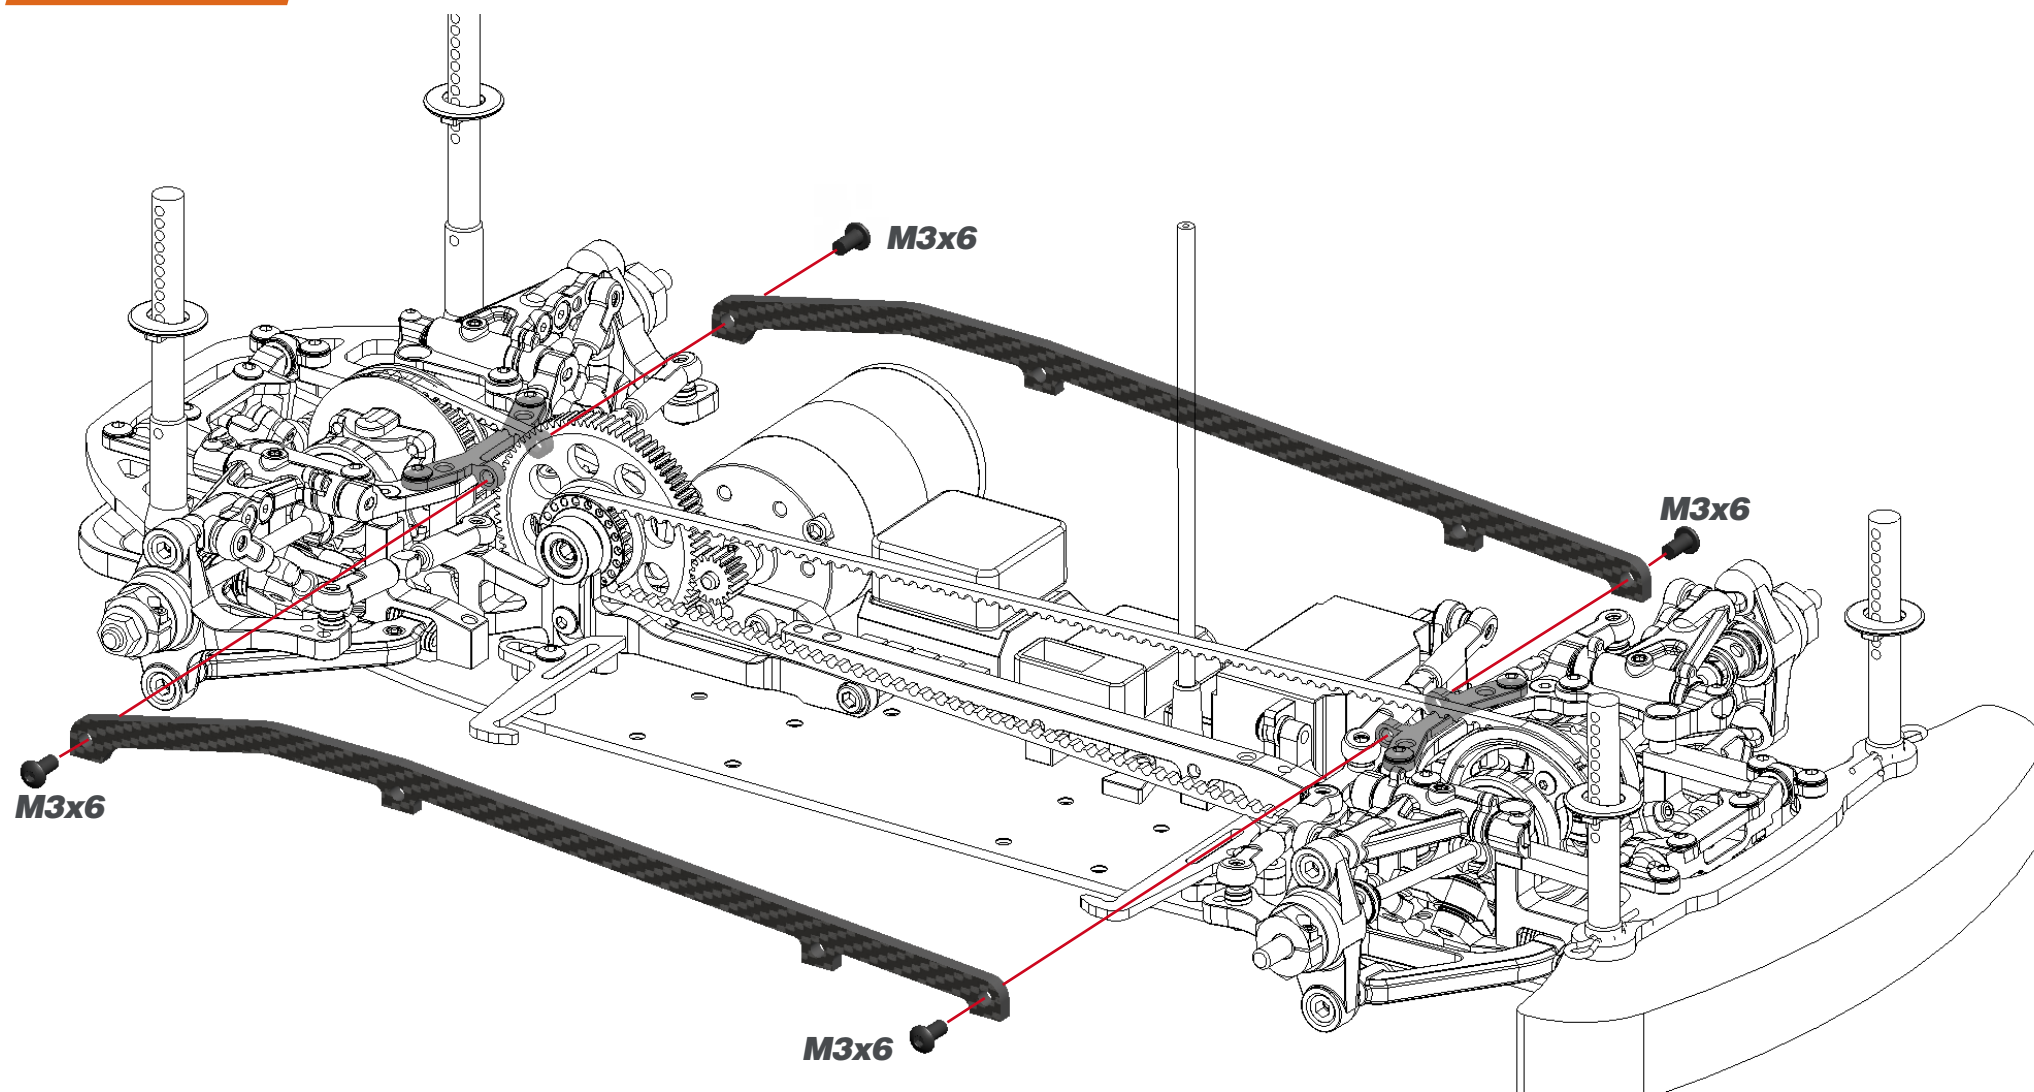

STEP 3A

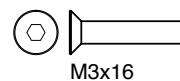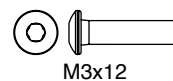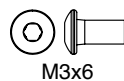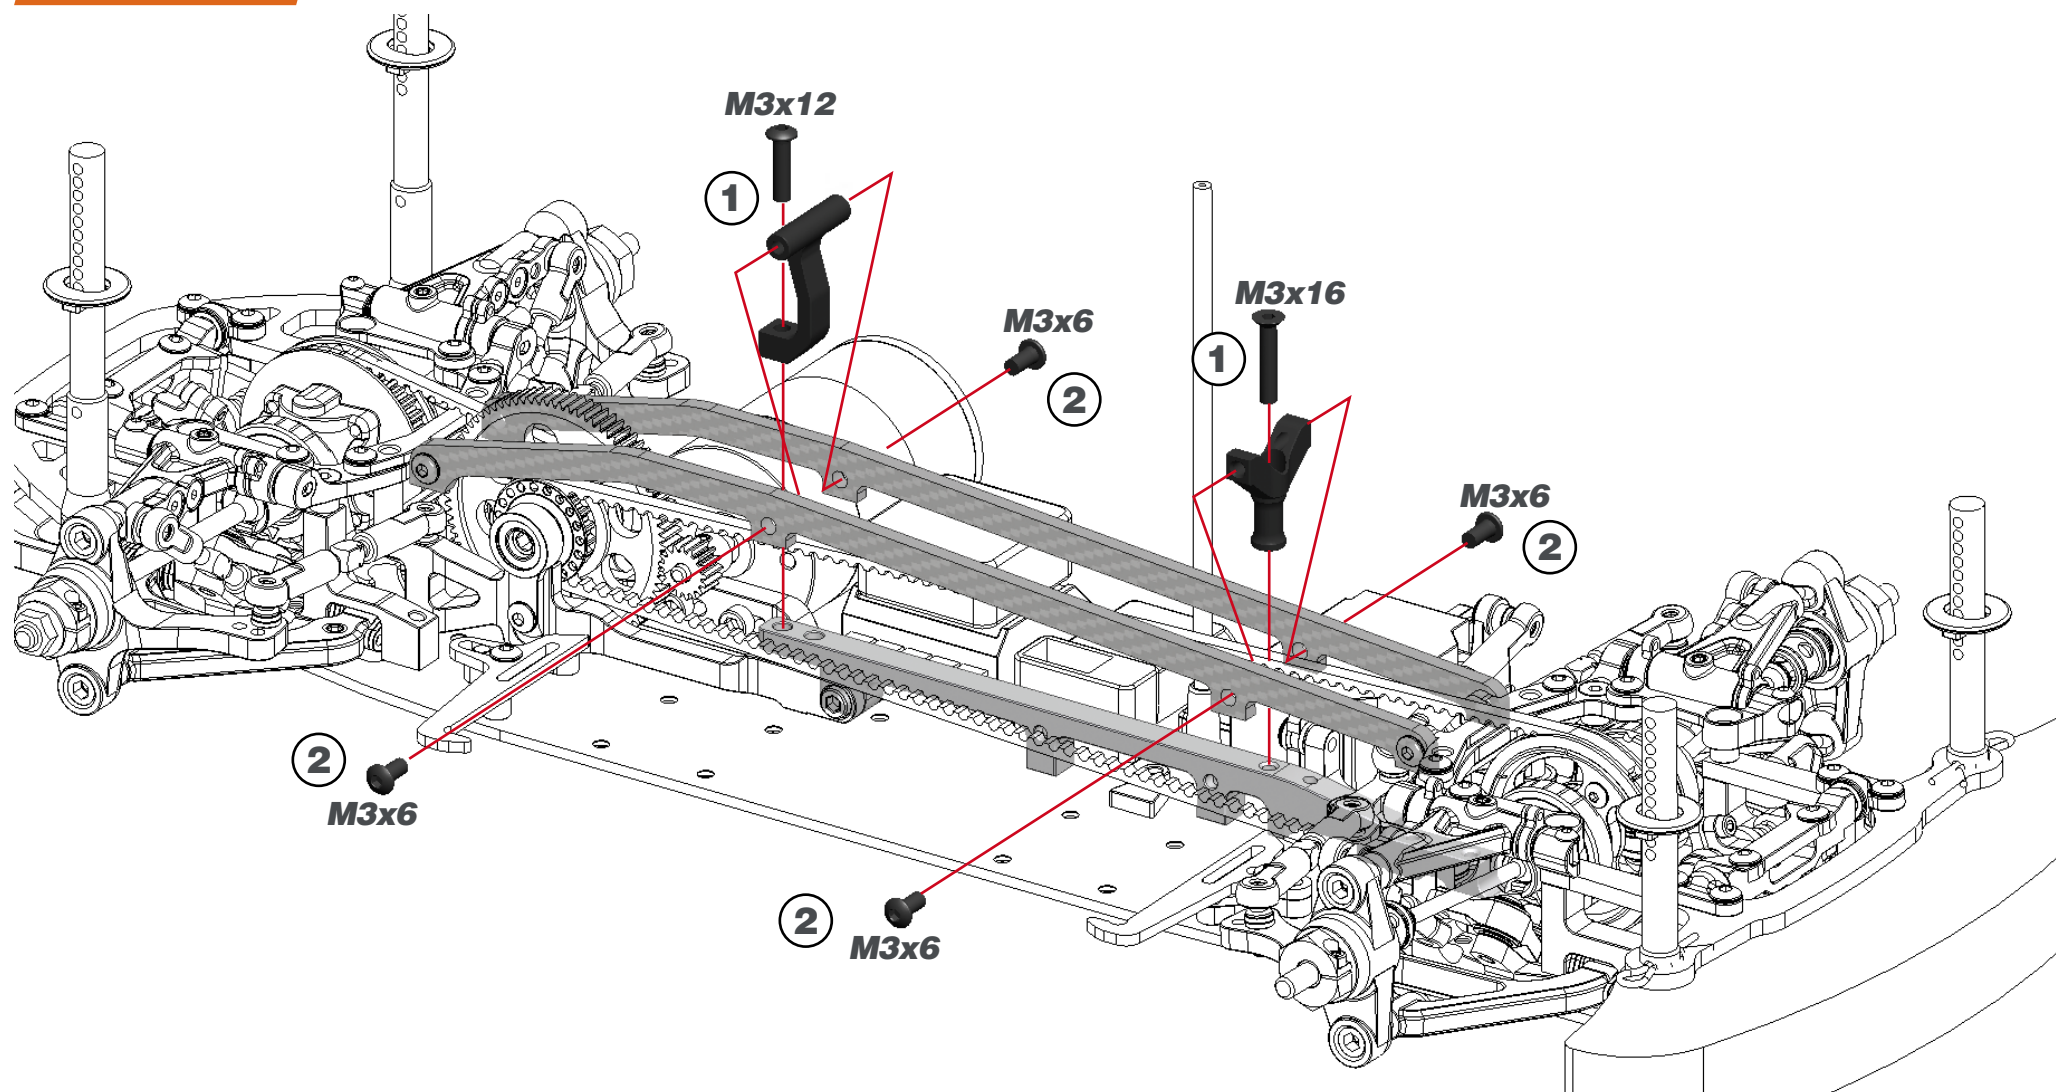

STEP 3B

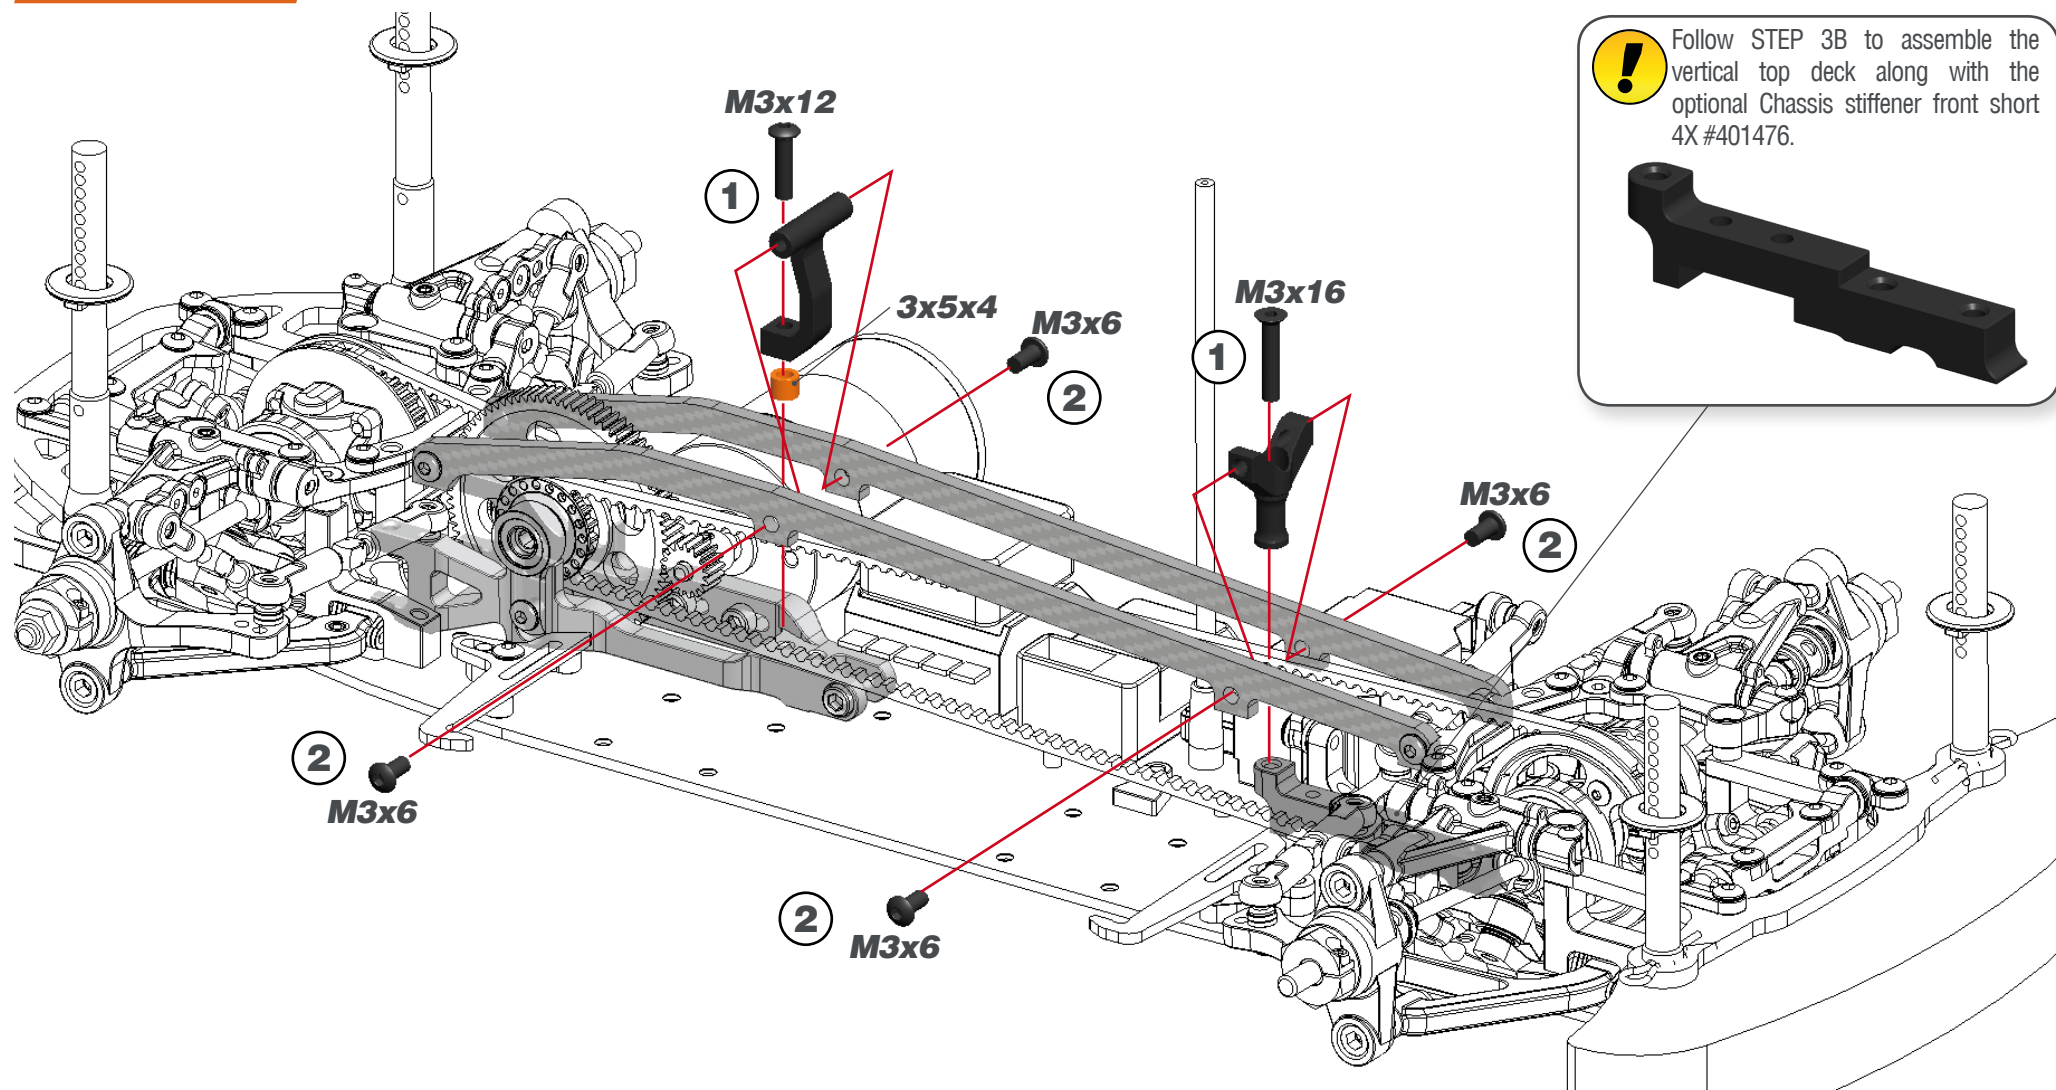

Follow STEP 3B to assemble the vertical top deck along with the optional Chassis stiffener front short 4X #401476.

