


FRONT HEAVE DAMPER ASSEMBLY #903781




STEP 1

1.1

Use some silicone oil

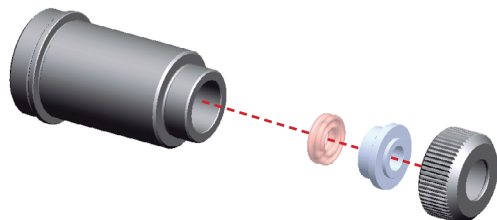


Note the correct orientation of the shock spacers .

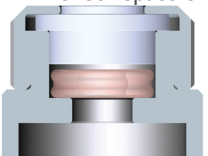

1.2

Insert the o-ring inside the spring collar.

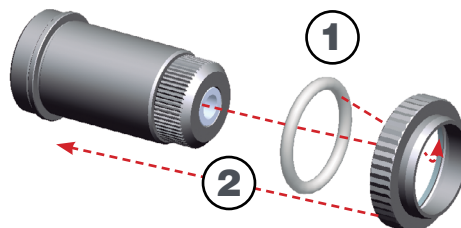

Note the correct position of the o-ring .




STEP 2

2.1




For the correct piston holes please check the default setupsheet.

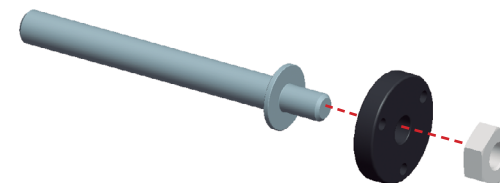

2.2



Use some silicone oil during the assembly.

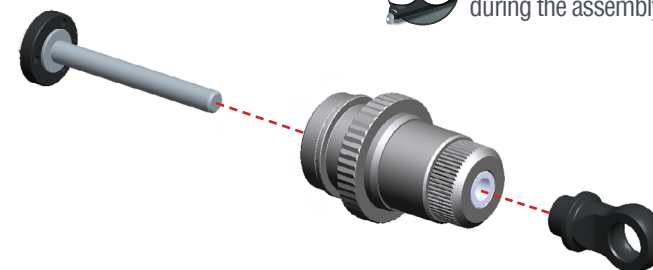


STEP 3

- 3.1** Push the shock top and the membrane into the shock cap.



3.2

- 1- Fill up with silicone oil fully using the silicone oil supplied in the kit. For the correct cst value please check the default setupsheet.
- 2- Extend the shockrod fully
- 3- Move the shockrod slowly up and down to let ALL air bubbles escape.
- 4- Close top only 3/4.

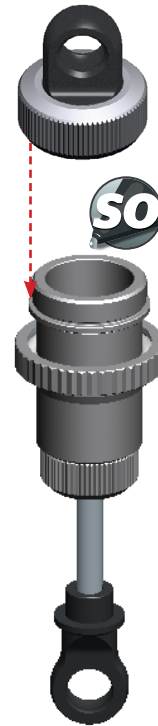


3.3




- 1-Bleed: push the shockrod all the way in slowly, to allow excessive oil to escape.
- 2- Close the shock cap completely.



SHOCKS LENGTH:
Measure the shock length fully extended.

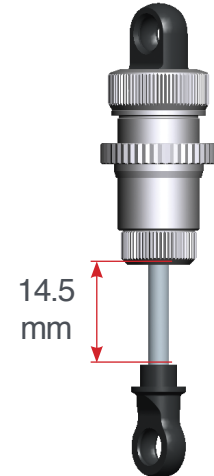

STEP 5

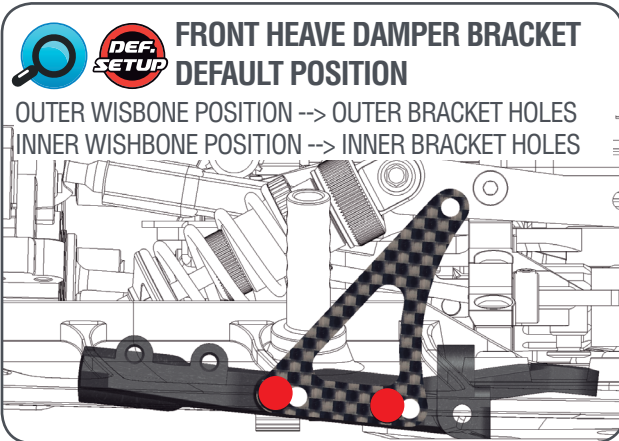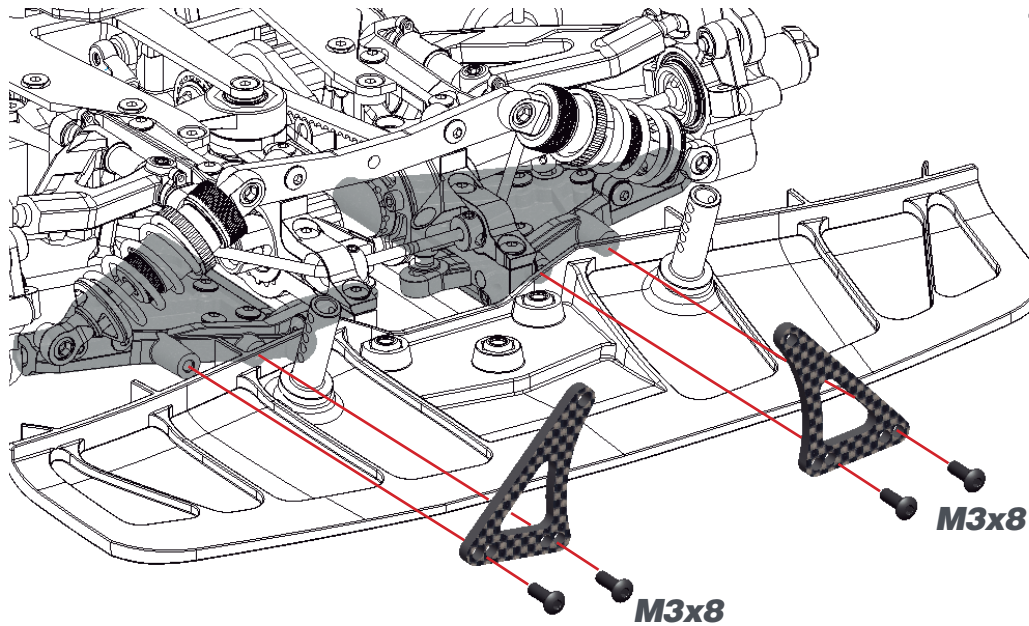

STEP 6

