


# 903857 SHOCKMOUNT SET FR FLEX S990

VIPER  
990

SERPENT




## STEP 1

**!** First of all replace standard bulkheads by the ones included in this set..

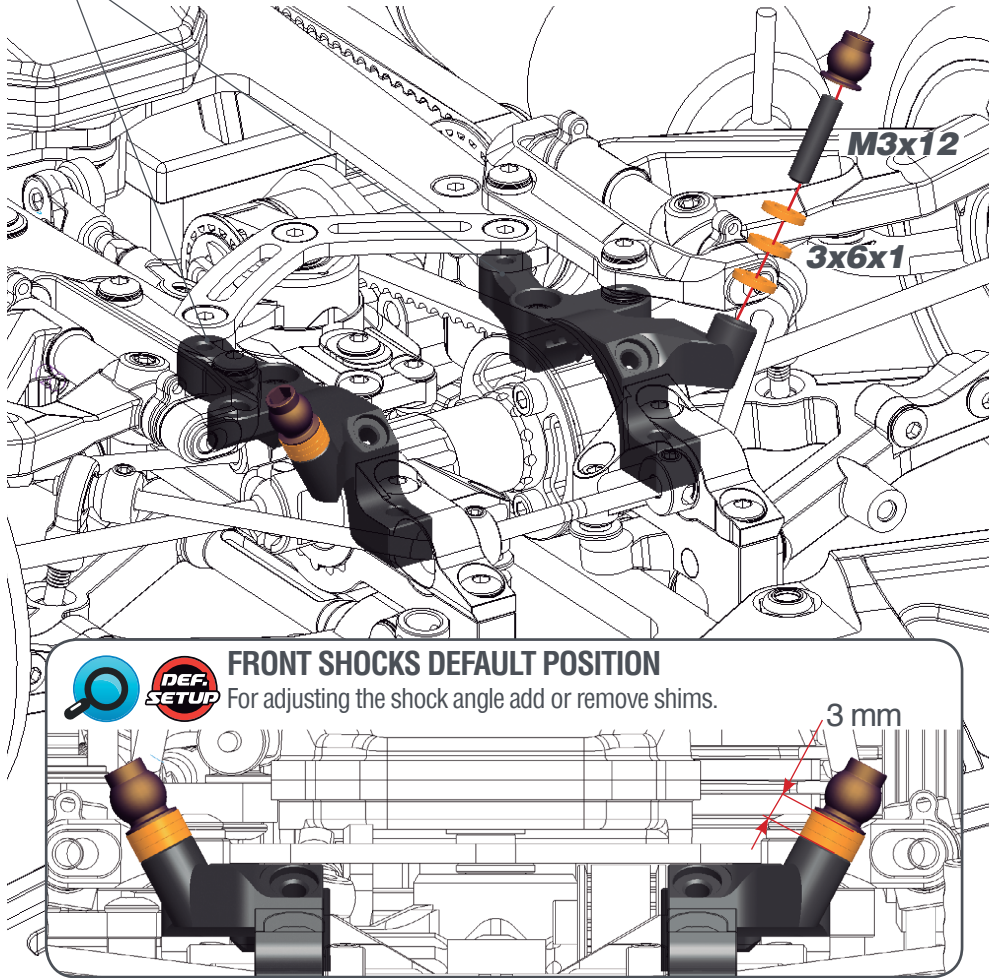

## STEP 2

**!** For adjusting the front flex characteristics add (rigid) or remove (flex) the carbon bracket.

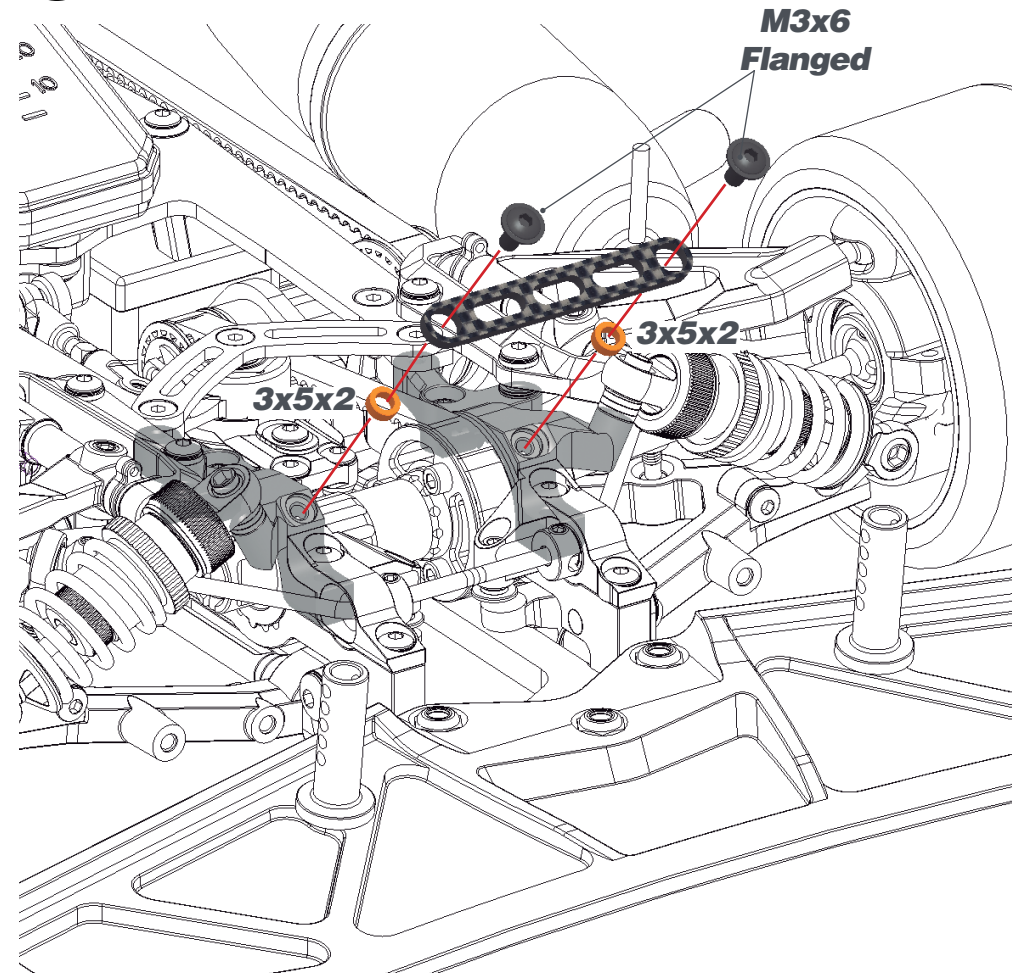

# 903857 SHOCKMOUNT SET FR FLEX S990 EXP VIEW

**VIPER**  
**990**

**SERPENT**

