



903858 SHOCKMOUNT SET RR FLEX S990

VIPER
990


SERPENT

STEP 1


! First of all replace standard camberlink bracket by the one included in this set.

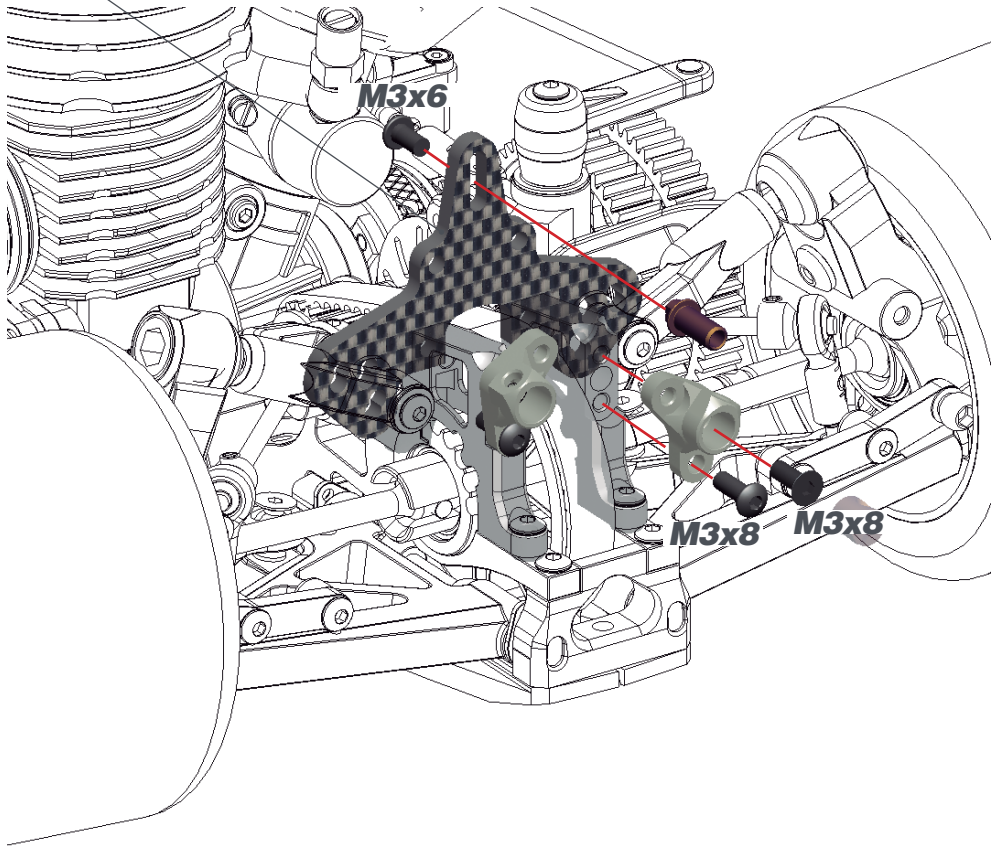

M3x6




M3x8



M3x8


STEP 2

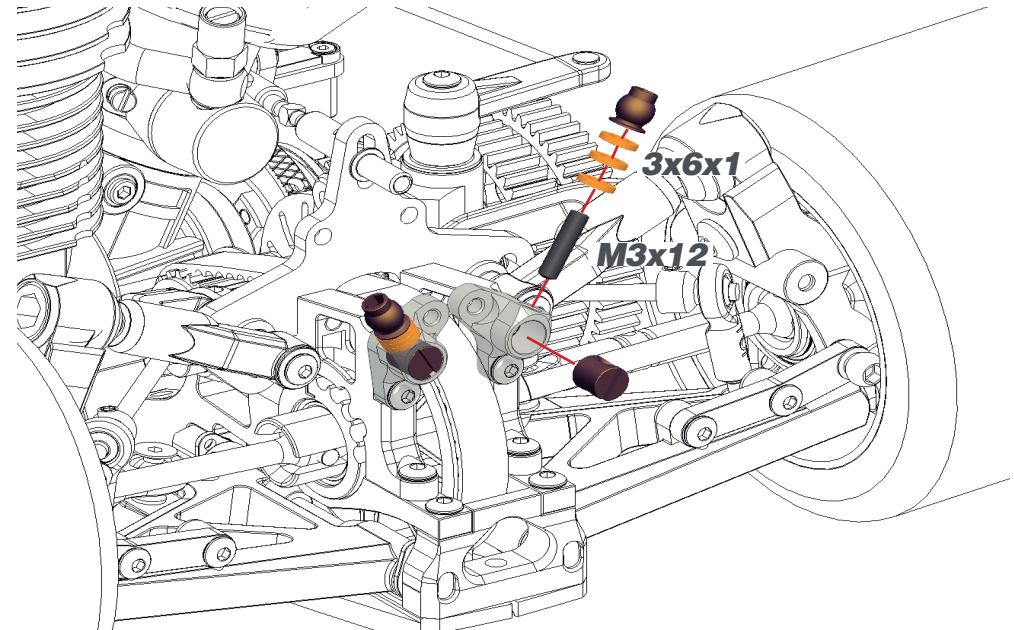

DEF.
SETUP

REAR SHOCKS DEFAULT POSITION

For adjusting the shock angle add or remove shims.

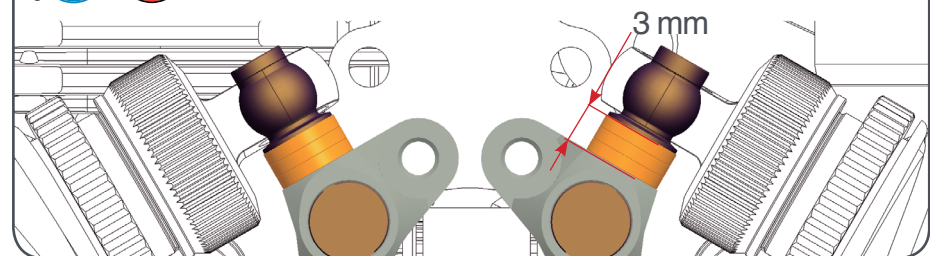

3x6x1



M3x12

STEP 3

! For adjusting the rear flex characteristics add (rigid) or remove (flex) the carbon bracket.

