

# 903845 BODYMOUNT CARBON SET S9XX




# SERPENT

## STEP 1A




Use this configuration when using the rear standard shocks mountings.

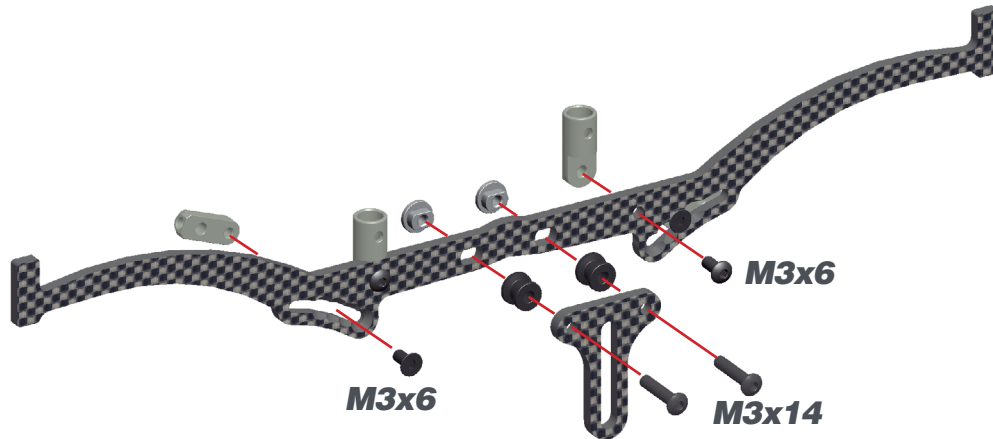



## STEP 1B




Use this configuration when using the rear flex shocks mountings.

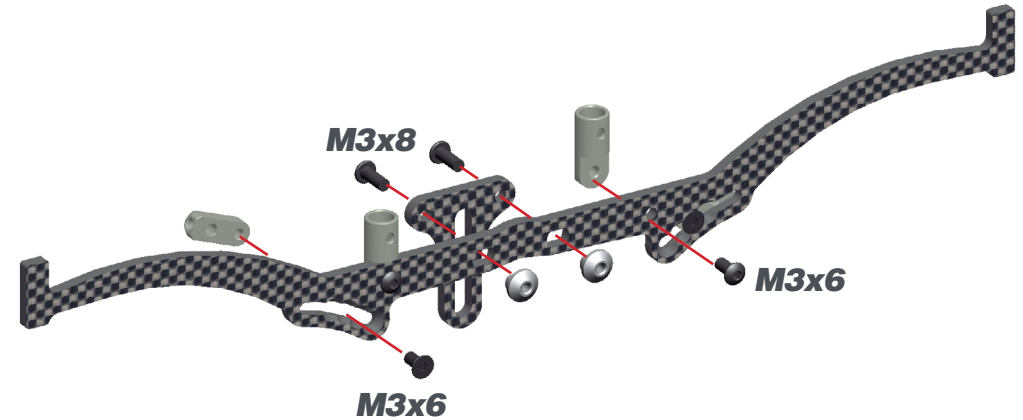

### REAR BODYMOUNT DEFAULT POSITION

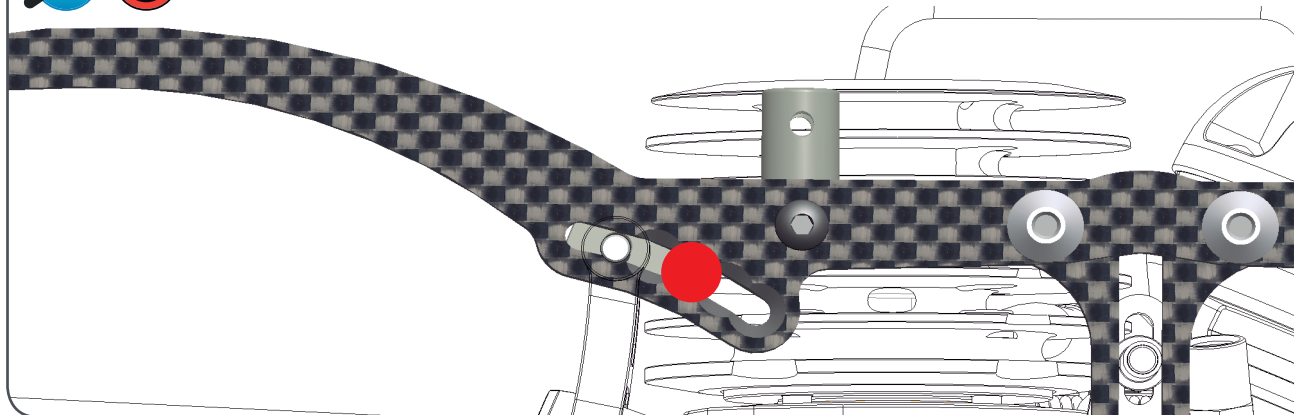

M3x6



M3x16



M3x6




M3x6



M3x8

## STEP 2

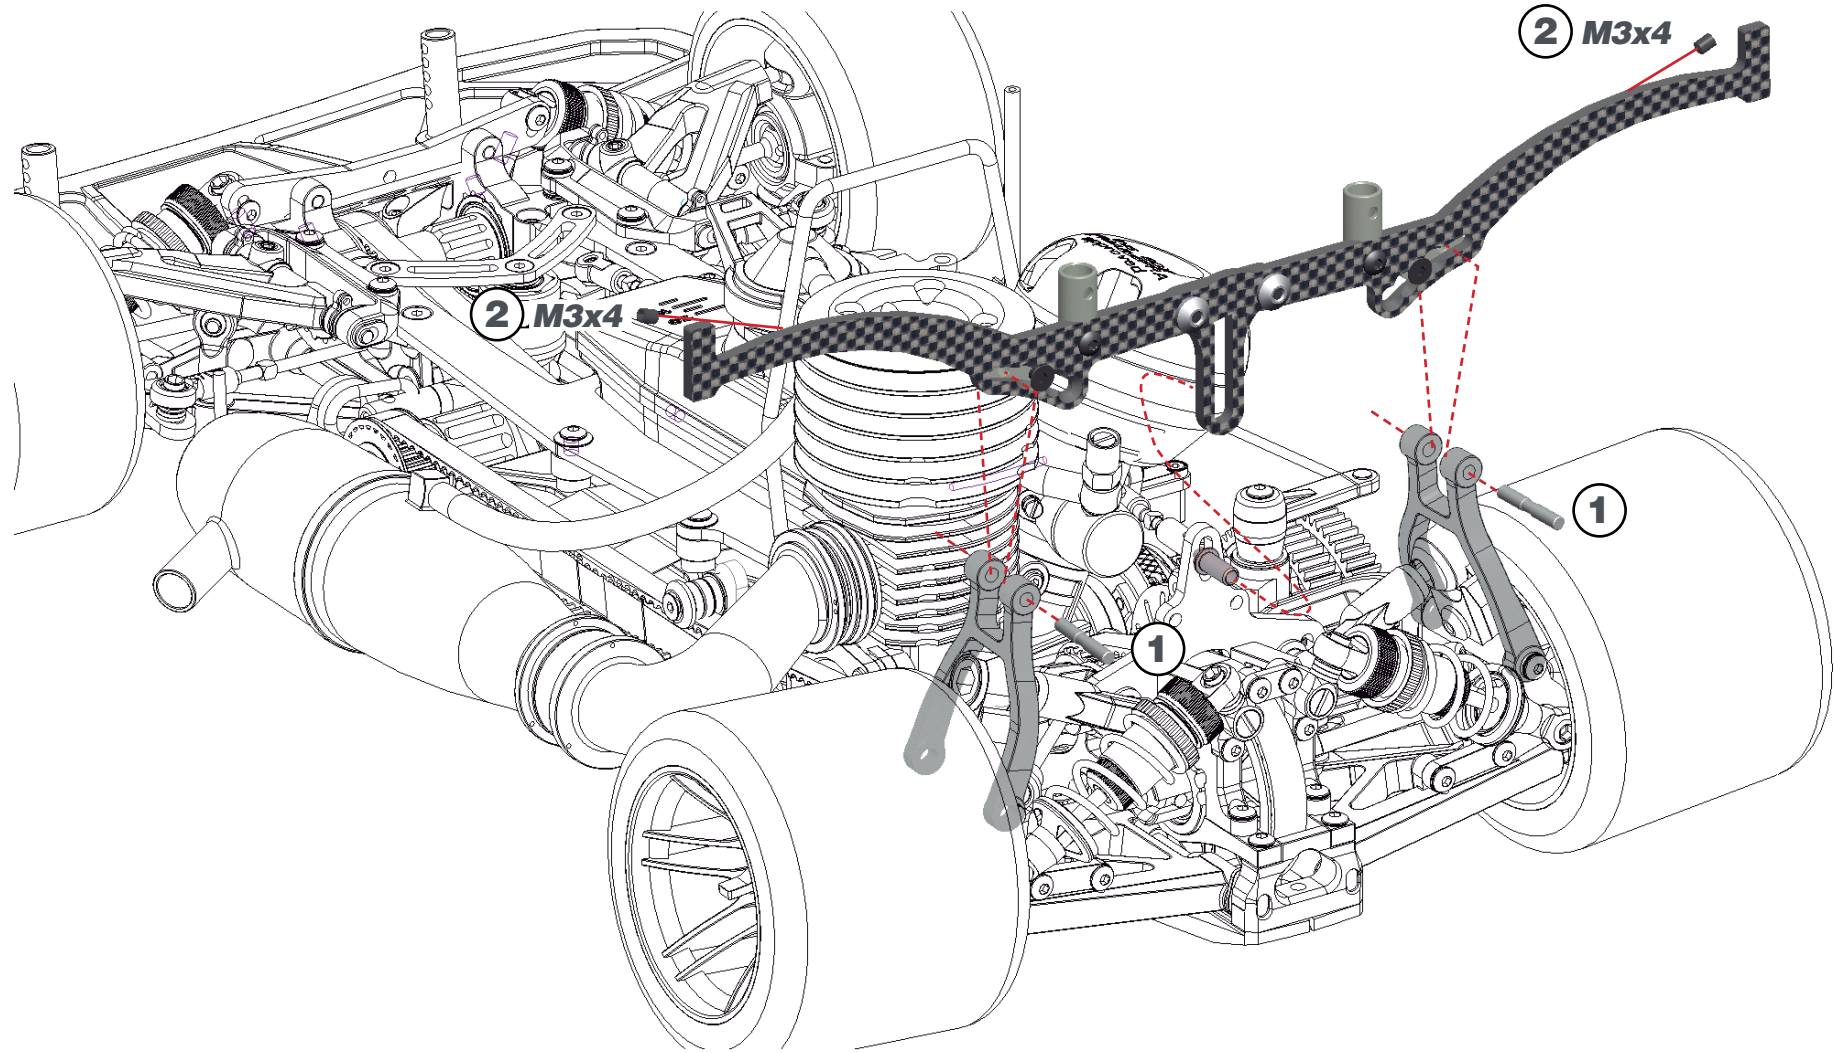

○ □  
M3x4

