


X20'24

1/10 SCALE ELECTRIC TOURING CAR

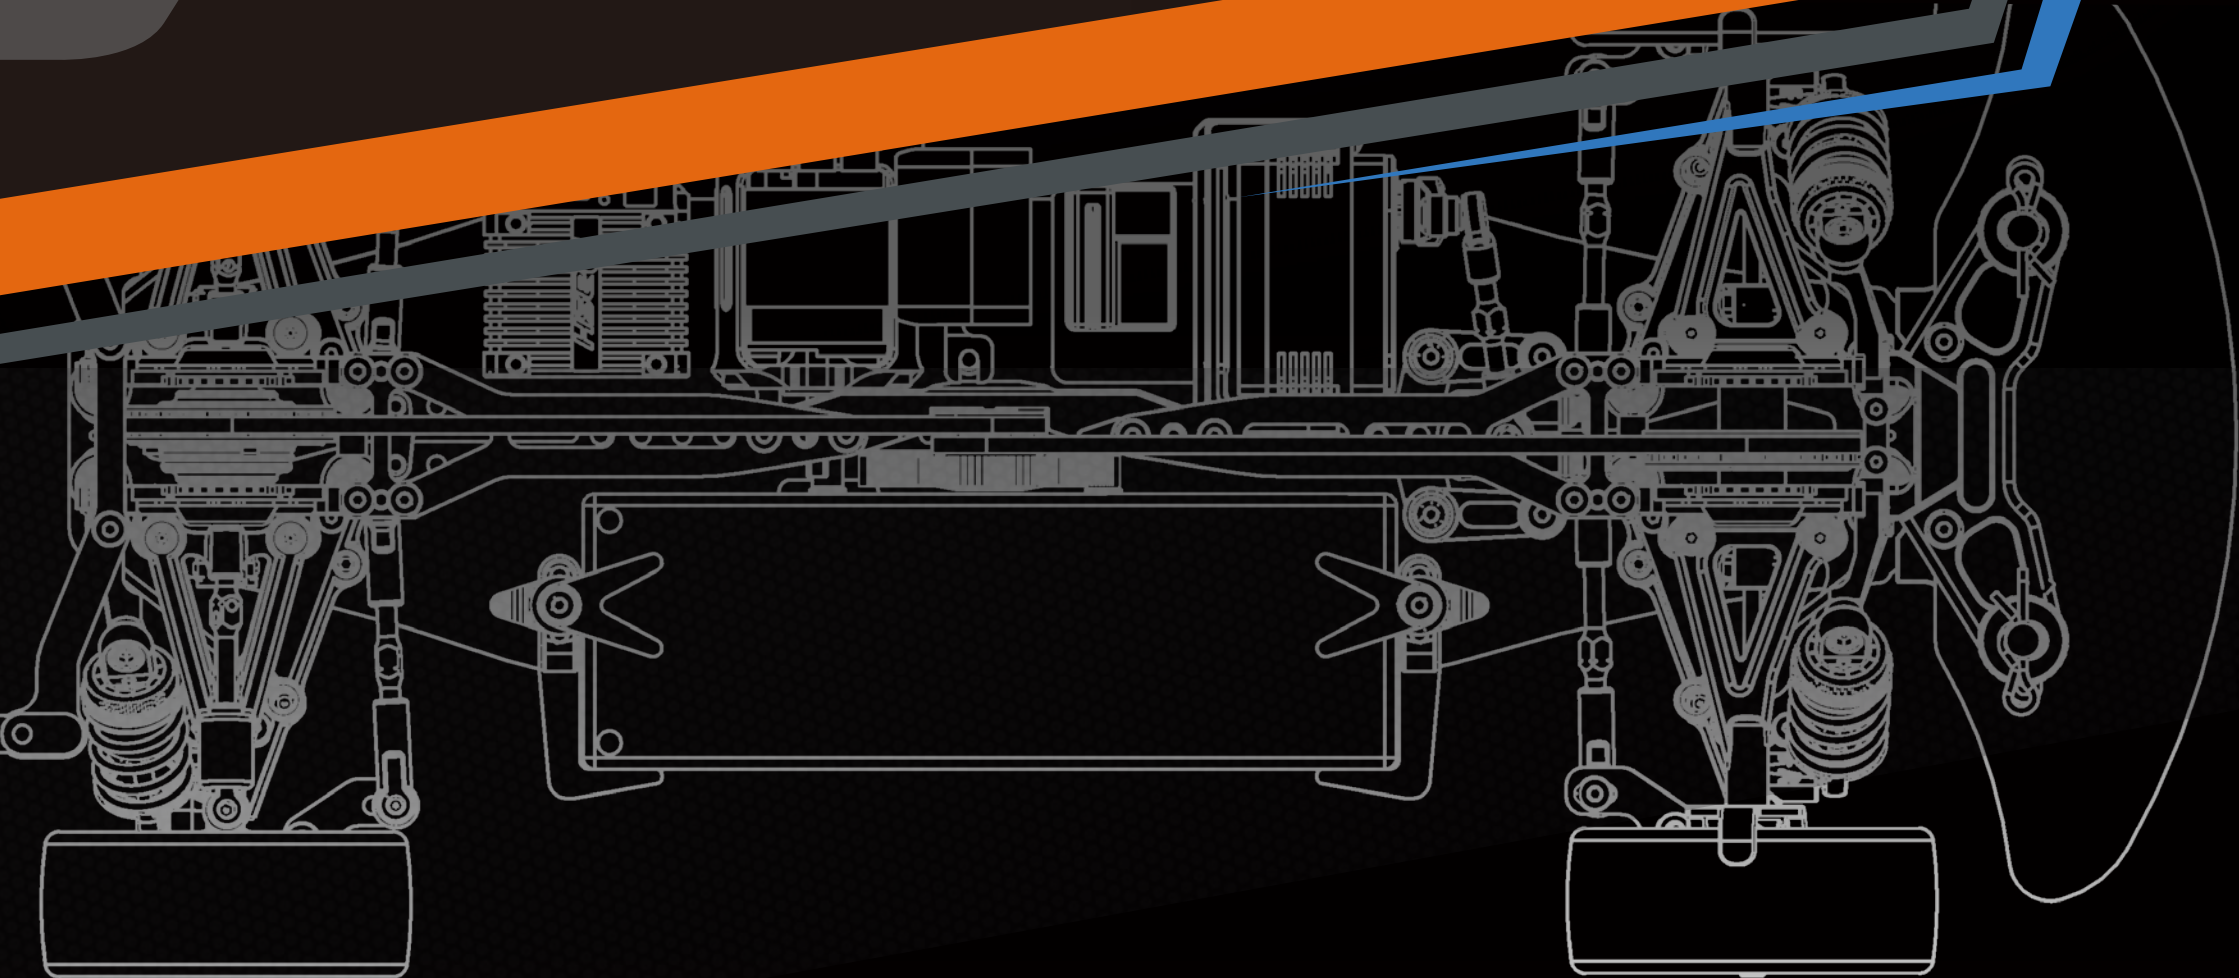

SERPENT

INTRODUCTION

Thank you very much for selecting this Serpent rc car and thus become a member of the ever growing worldwide Serpent racing family. Serpent started in 1980 and has been growing its product-line and fan-base ever since.

The Serpent X20'24 mEdius is a state of the art 1/10 scale 4WD touringcar which will give you the true Serpent racing experience. The assembly manual will guide you through all the steps to complete the car, so you can hit the track with a good base-set-up soonest. The Serpent design department succeeded to create a superbly performing car combined with eas of assembly and maintenance. The high quality standards of all parts and hardware will make racing your Serpent car a very rewarding activity!

Through our team, website and social media we will keep you up-to-date on all developments of the Serpent cars. We hope to meet you on the track and through our various media! Enjoy the drive!

Team Serpent
Multiple World Champions

INSTRUCTIONS

Serpent's long tradition of excellence extends to the instruction manuals, and this instruction manual is no exception. The easy-to-follow layout is richly illustrated with 3D-rendered full-color images to make your building experience quick and easy. Following the instructions will result in a well-built, high-performance race-car that will soon be able to unleash its full potential at the racetrack. The kit includes bags, with bagnumbers, which refer to the same step in the manual. Open only the indicated bag(s) per step and finish that part of the assembly. Remaining parts will be needed lateron in the assembly process.

PLASTIC PARTS

The Serpent moulded parts are very durable and hard. When assembling longer screws in new composite parts, make sure to use new hex bits in your (power) tools. Pre-threading also helps to avoid screw damage.

SETUP

In certain assembly steps you need to make basic adjustments, which will give you a good initial setup for your Serpent X20'24 mEdius. Fine-tuning the initial setup is an essential part of building a high-performance racecar like your Serpent

EXPLODED VIEWS AND PARTS LIST

The exploded views and parts lists for the X20'24 mEdius are presented in the Reference Guide section in the back of this manual. The exploded views show all the parts of a particular assembly step along with the Serpent part number and hotlink to the Serpent website. Partnumbers in orange indicates that this part is an optional. Optionals part names and numbers are showed below.

CUSTOMER SERVICE

Serpent has made a strong effort to make this manual as complete and clear as possible. Additional info may be published in our website: www.serpent.com or you may ask your dealer or the Serpent distributor for advice, or email Serpent direct: info@serpent.com. The Serpent Facebook, Twitter and Youtube pages give additional means of support and communications.

SAFETY

Read and take note of the 'Read this First section' before proceeding to assemble the car-kit. This car-kit is intended for persons aged 16 or older.

READ THIS FIRST!

- This is a highly technical hobby product, intended to be used in a safe racing environment. This car is capable of speeds in excess of 80 km/h or 50mph. Please follow these guidelines when building and operating this model.
- Parental guidance is required when the builder/user of this car is under 16.
- Follow the building instructions. If in doubt, contact your dealer or importer.
- Be sure to use the proper tools when assembling the car. Always exercise caution when using electric tools, knives and other sharp objects.
- Be careful when using liquids like lubrication oil, fuel or glue. Do not swallow.
- Follow the manufacturer's instruction in case you experience irritation after using the product.
- Be careful when operating the car. Stay away from any rotating parts such as wheels, gears and transmission. Stay away from motor, engine and exhaust pipe system or speedo during and immediately after use, as these parts may be very hot. We advise to use protective hand cloves.
- Only operate this car in a safe environment, like a special racing track or a closed parking lot. Avoid using this car on public roads, crowded places or near infants.
- Before operating this car, always check the mechanical status of the car. Also check that the transmitter and receiver frequencies correspond and are not used by any other racer at the same time. Check that the batteries of the transmitter and receiver- are fully charged.
- After use, always check all the mechanics of the car. We advise to clean the car immediately after use, and inspect the parts for wear or fractures. Replace when necessary. Do not use water, methanol, thinner or other solvents to clean the car.
- Empty the fuel tank (depending on model) if needed and disconnect the receiver battery.
- Store the car in a dry and heated place to avoid corrosion of metal parts.
- Avoid using this car in wet conditions as the water will cause corrosion on the metal parts and bearings and these parts will cease to function properly. If driven in the wet, ensure that all the electric equipment is waterproofed and after use, that all moving parts are dried immediately.

CONTENTS Front & Rear assembly

• DIFF ASSEMBLY.....	4
• SOLID AXLE ASSEMBLY.....	5
• DJC ASSEMBLY.....	6
• CVD ASSEMBLY.....	7
• FRONT & REAR ASSEMBLY.....	9
• MOTORMOUNT ASSEMBLY.....	12
• REAR ASSEMBLY.....	14
• FRONT ASSEMBLY.....	19
• ANTIROLLBAR ASSEMBLY.....	22
• STEERING ASSEMBLY.....	23
• CENTRAL ASSEMBLY.....	26
• SHOCK ASSEMBLY.....	29
• BUMPER ASSEMBLY.....	32
• FINAL ASSEMBLY.....	34
• EXPLODED VIEWS.....	38
• TEAM SERPENT NETWORK.....	49

LINES DESCRIPTION

Each step contains a variety of numbers, lines, and symbols. The numbers represent the order in which the parts should be assembled. The lines are described below.



Step number; the order in which you should assemble the indicated parts



Length after assembly



Assembly path of one item into another



Group of items (within lines) should be assembled first



Direction the item should be moved



Glue one item to another



Press/Insert one item into another



Connect one item to another



Gap between two items

ICONS DESCRIPTION

Each step contains a variety of symbols described below.



Carefull, read and check very well.



Apply a small amount of cyano glue. Use wear protection for eyes and hands.



Detail view to explain assembly or order of parts better.



Default set-up: This symbol indicates the default setup.



Grease: apply a small amount of grease to the parts shown.



Left and right parts should be assembled in the same way.



Thread lock: apply a small amount on the parts shown. Before to apply the threadlock, make sure to degrease the parts very well, as otherwise the threadlock will not work.



Silicone oil: use the indicated silicone oil for the shocks and differentials.



Parts or items not included in the kit.





Optional part, not standard in the kit.

STEP 1

DIFF BAG

1.1

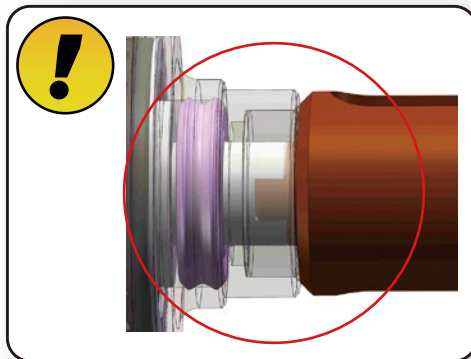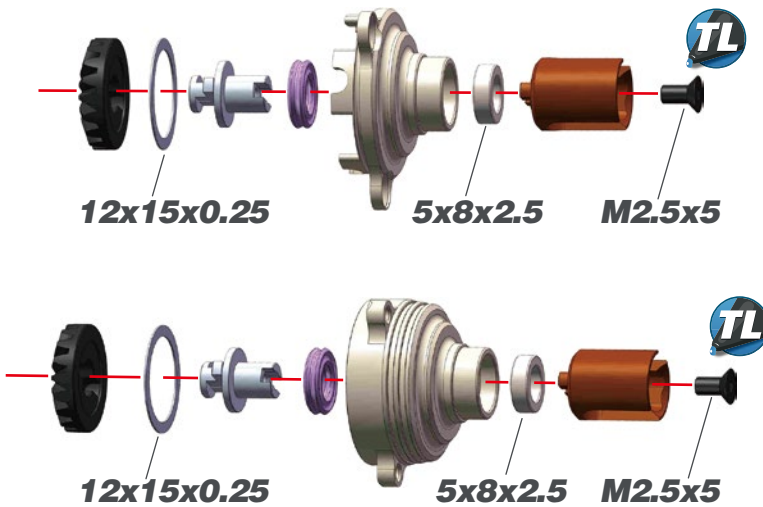

1.2





AMOUNT OF OIL IN THE DIFFS

Use a digital scale to measure the exact amount of oil in the diff.

Differential weight with volume compensators = 8.4 grams






1.3

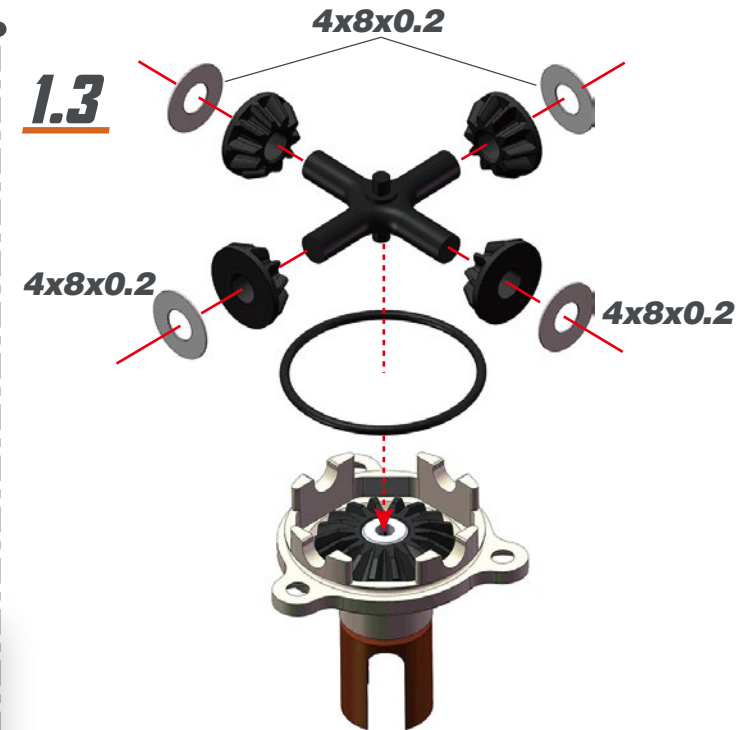


STEP 1

1.4

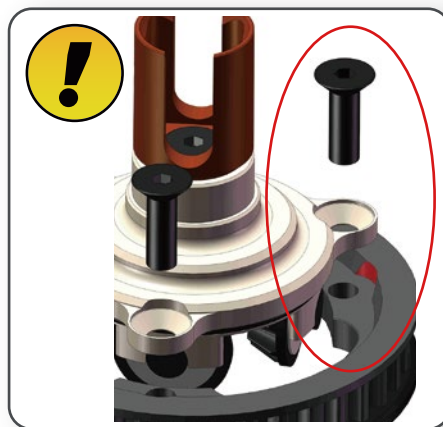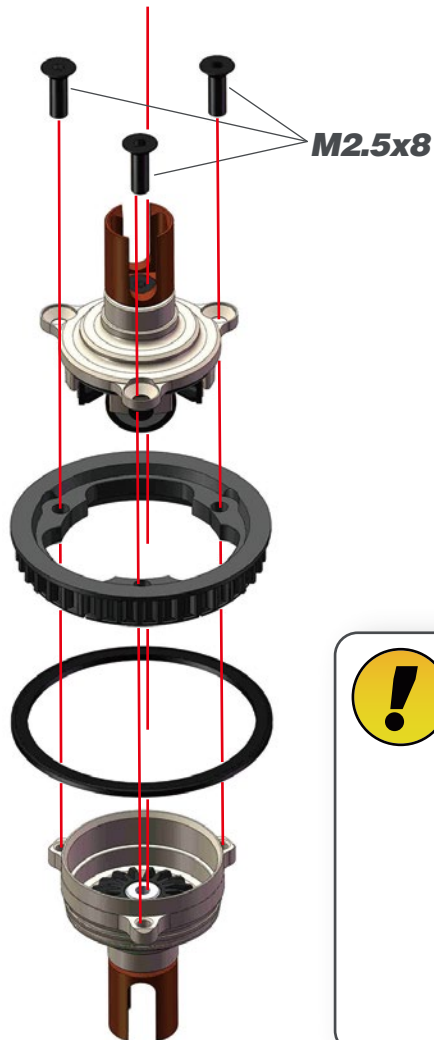

STEP 2


SOLID AXLE BAG

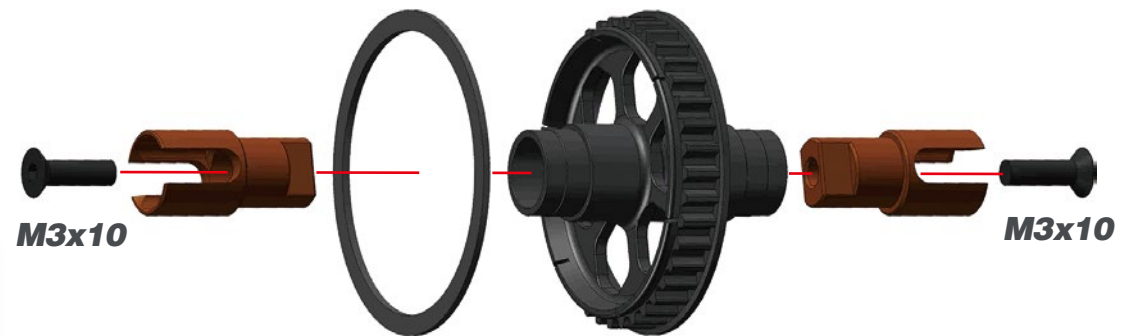

STEP 3

DJC BAG

3.1

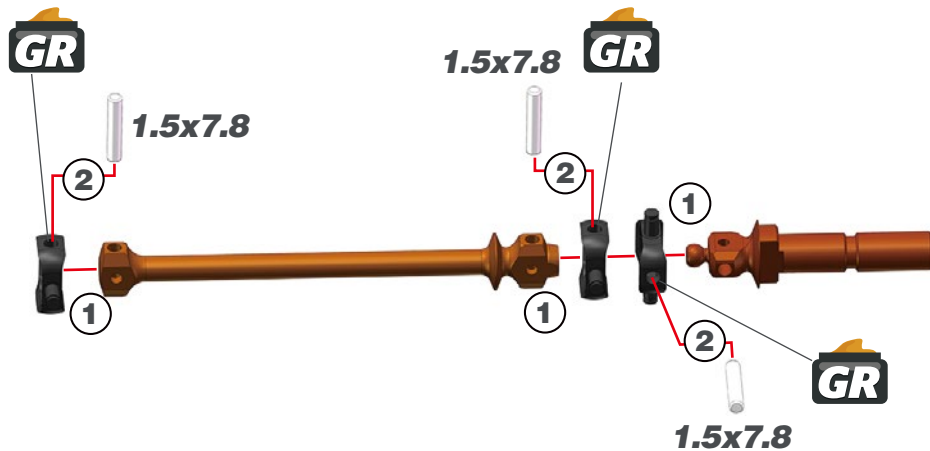

OPT




402070 DJC driveshaft BB alu (2)

1.5x7.8


3.2



1.5x4x2

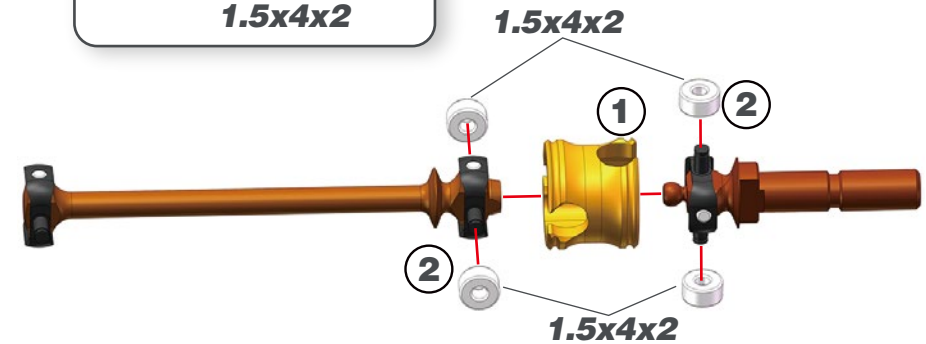

3.3

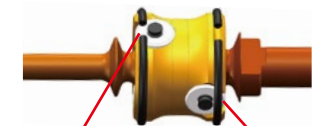

All bearing cover on outside




1.5x4x2

STEP 4

CVD BAG

4.1

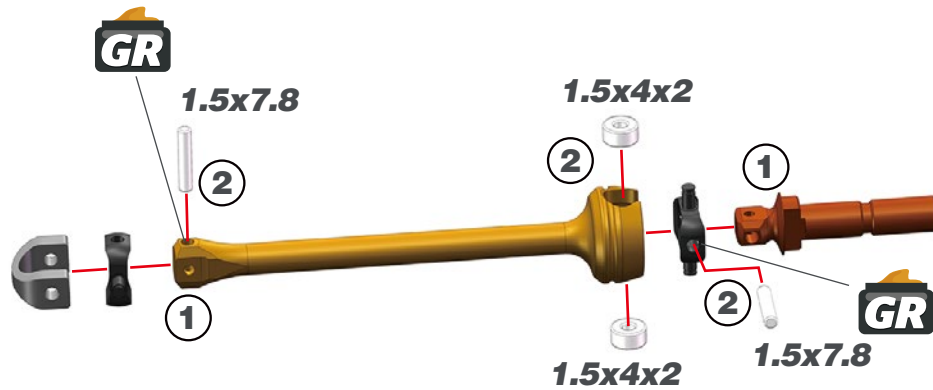


4.2




1.5x7.8


1.5x4x2

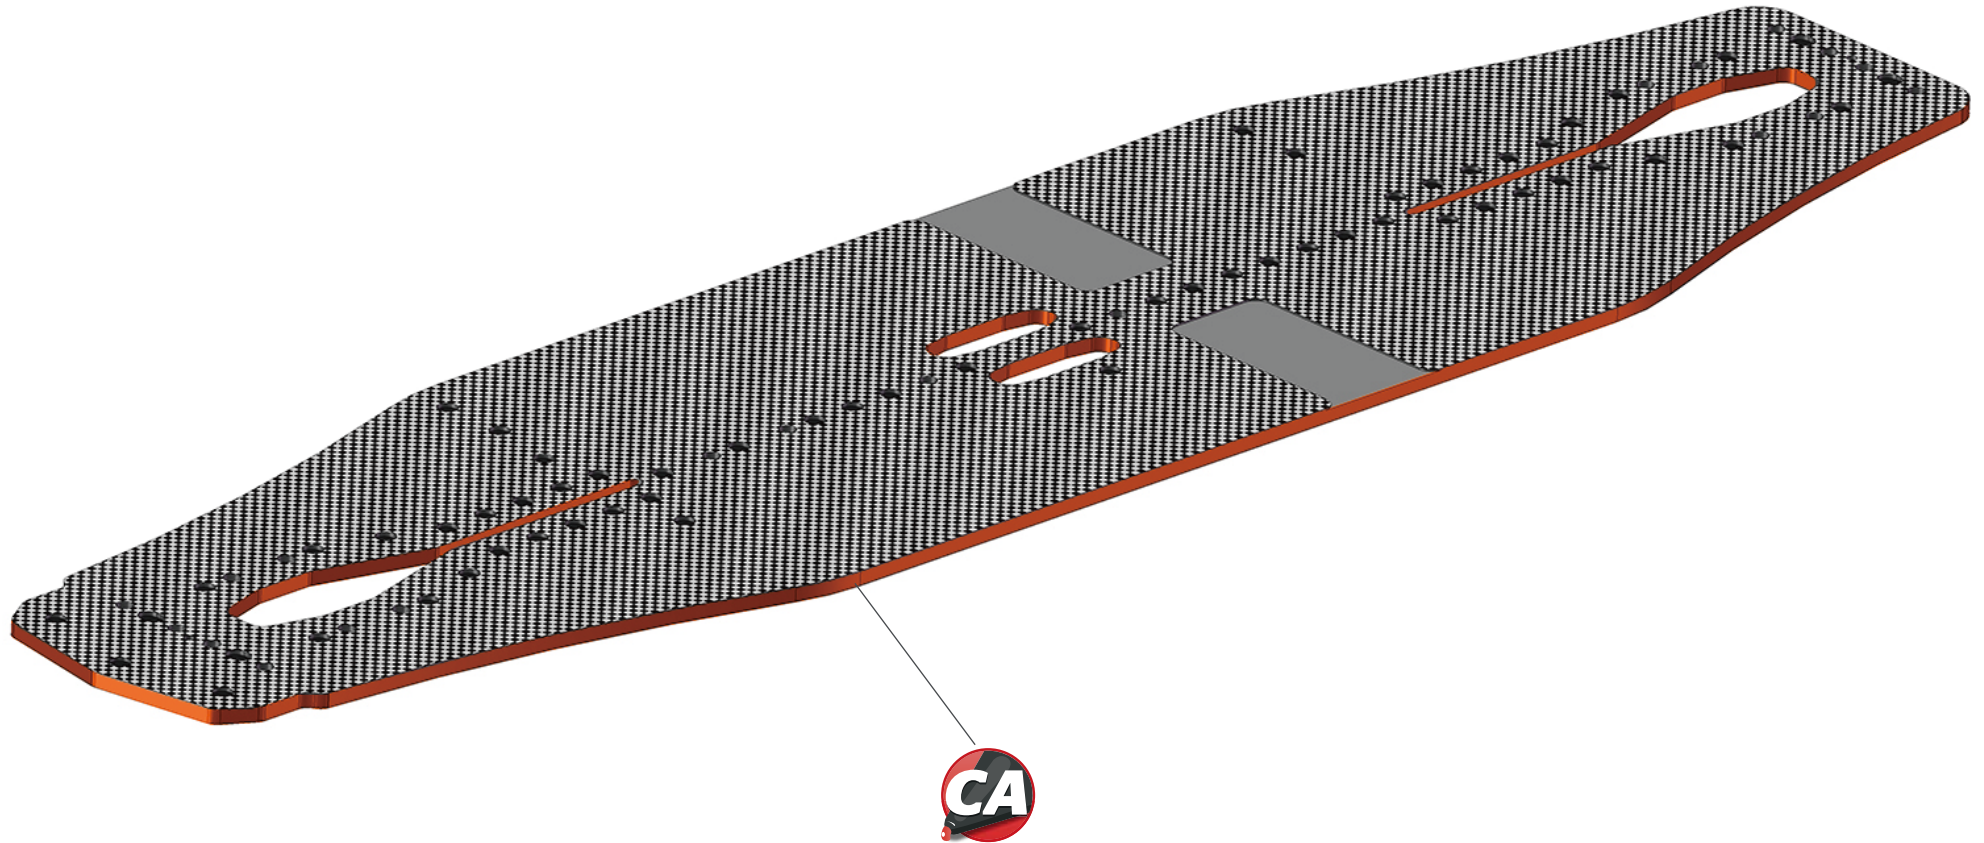


STEP 5

BAG 1

5.1 FRONT/REAR


4X

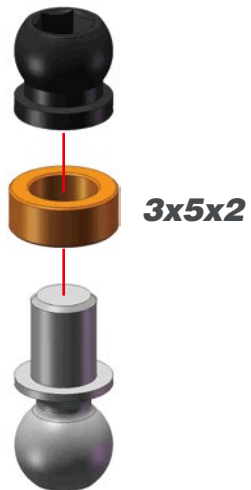





3x5x2



5.2 FRONT



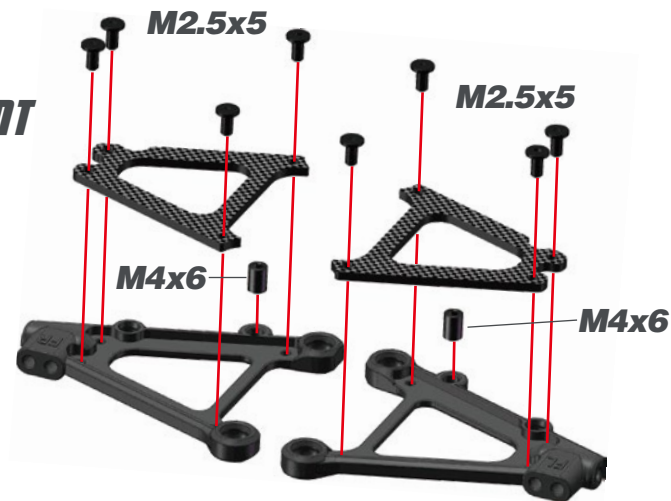


5.3 REAR

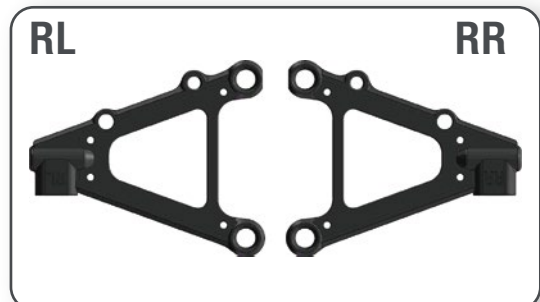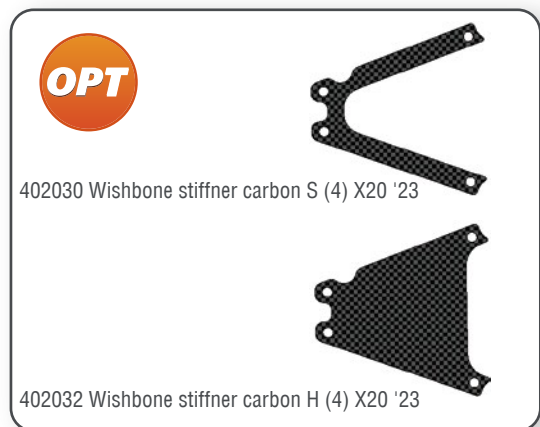
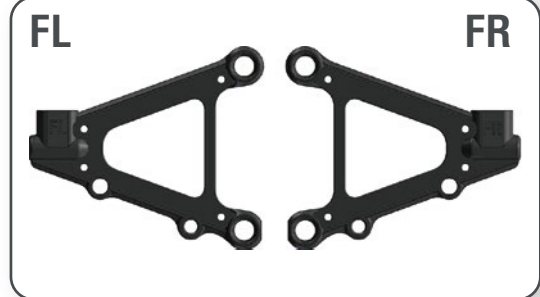


STEP 6

6.1 FRONT

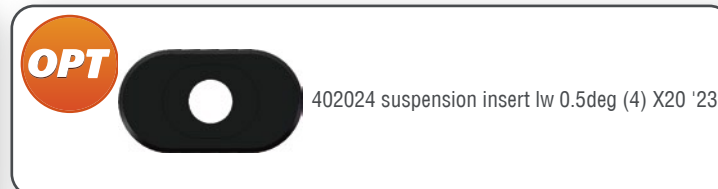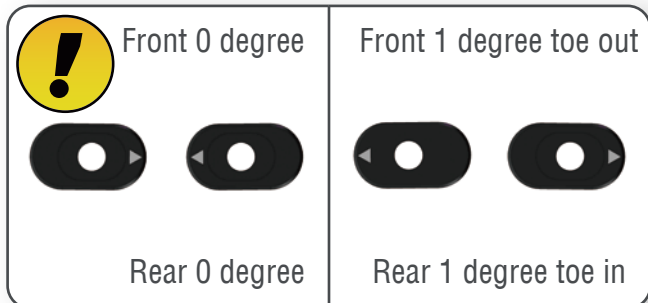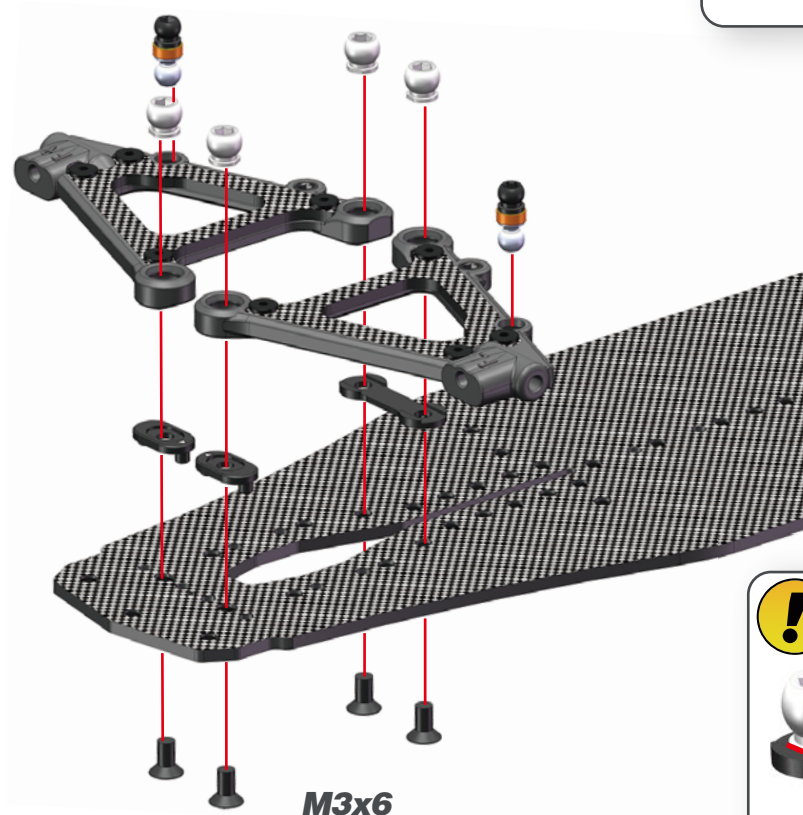



6.2 REAR

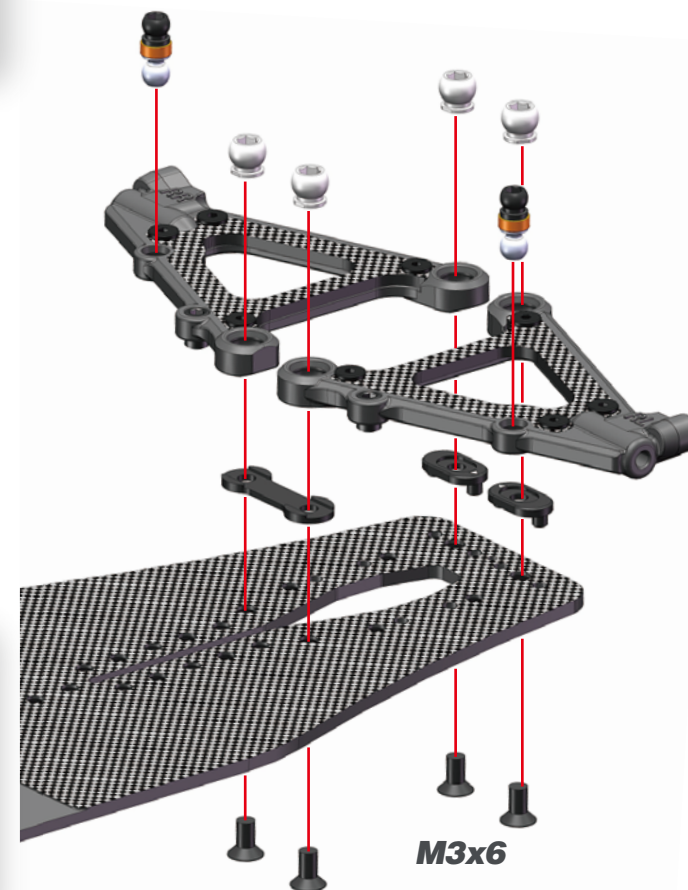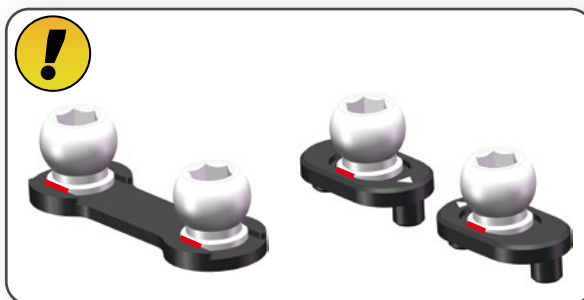


STEP 7

BAG 2

7.1 FRONT

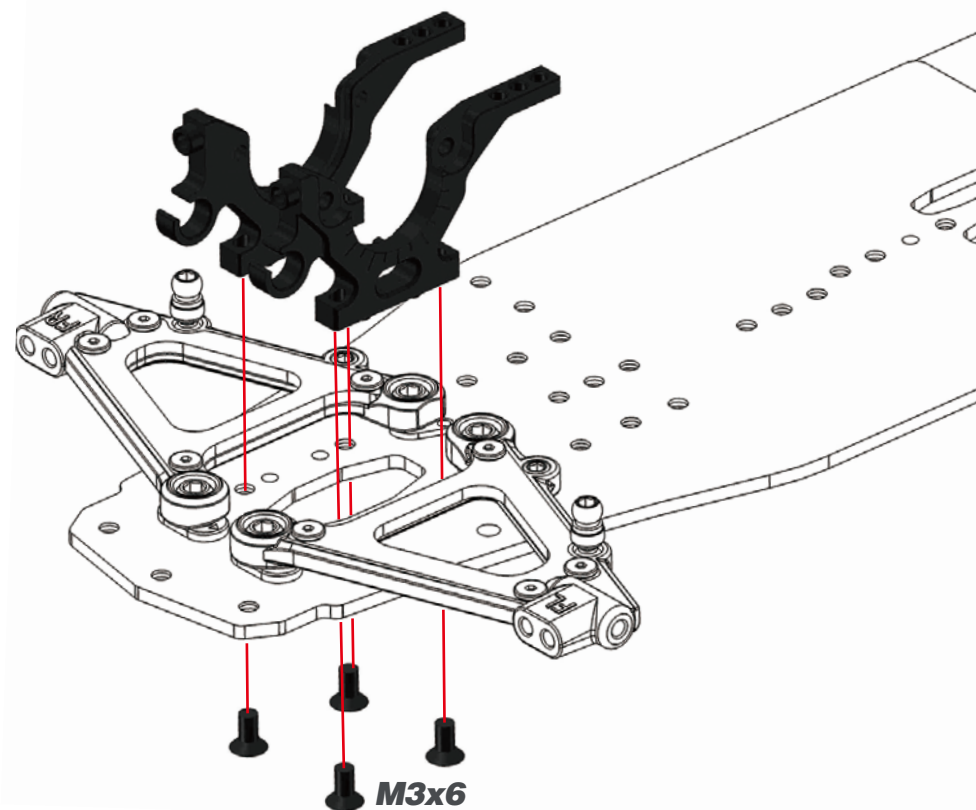


7.2 REAR


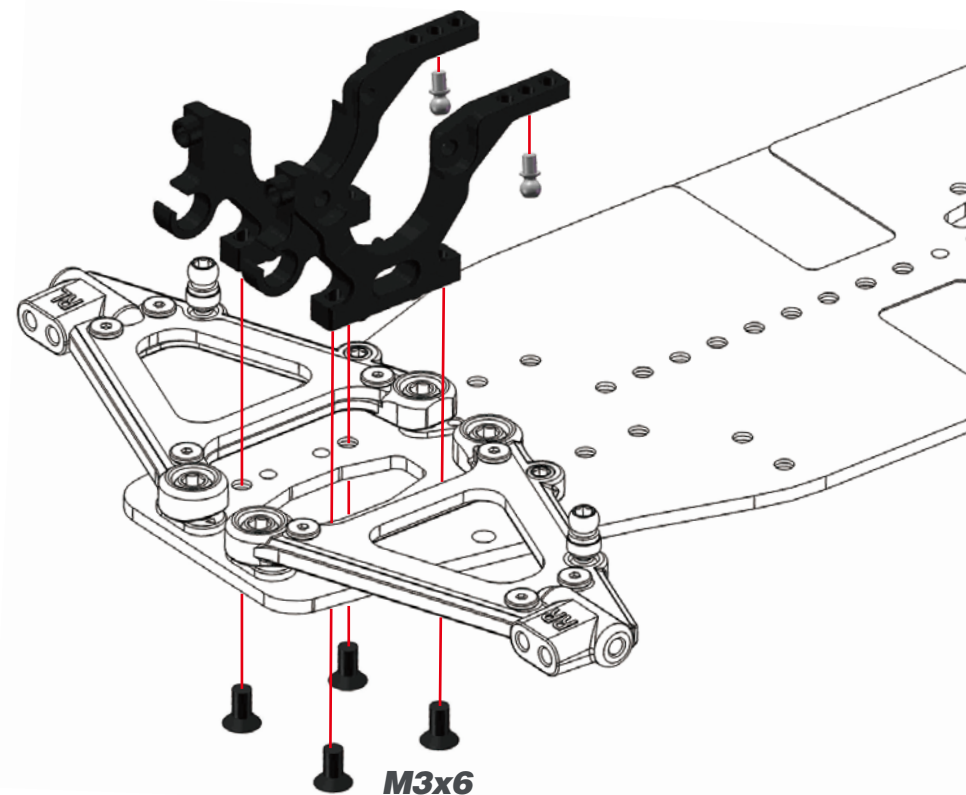


STEP 8




8.1

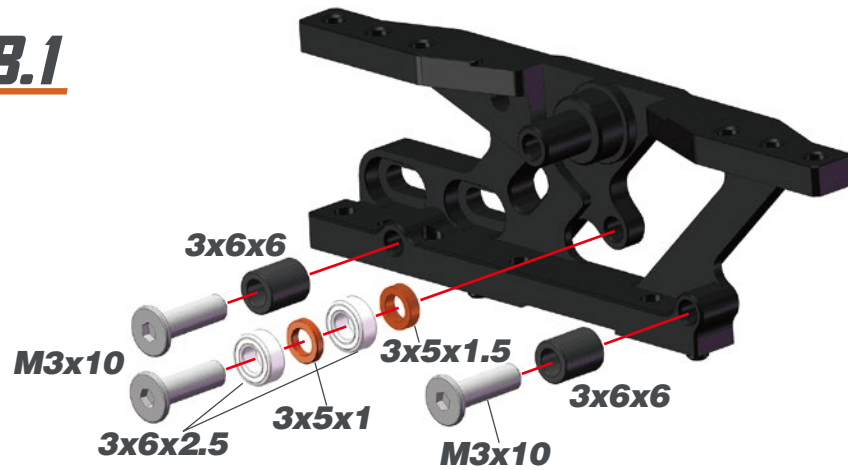

8.2

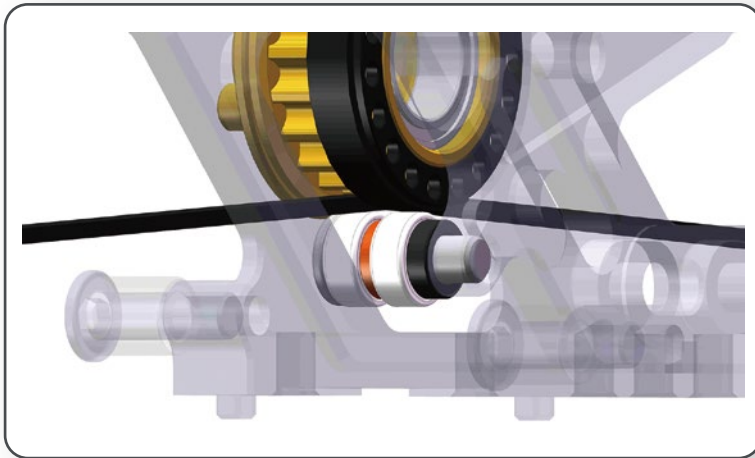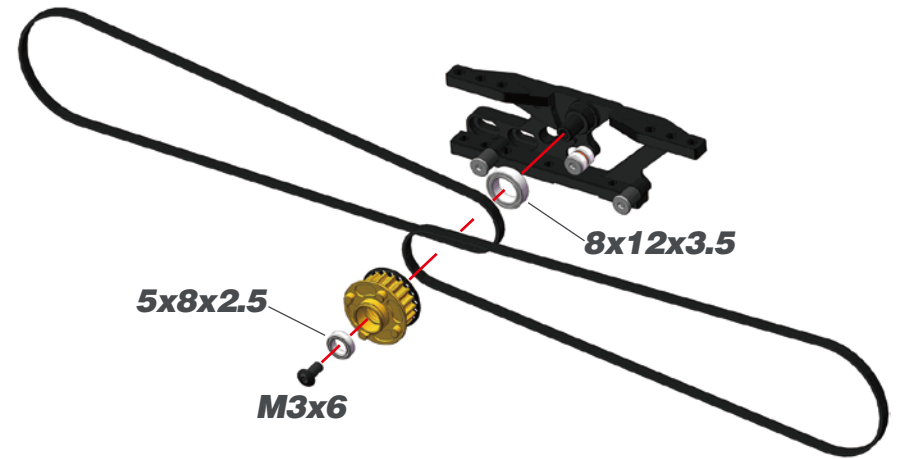

8.3

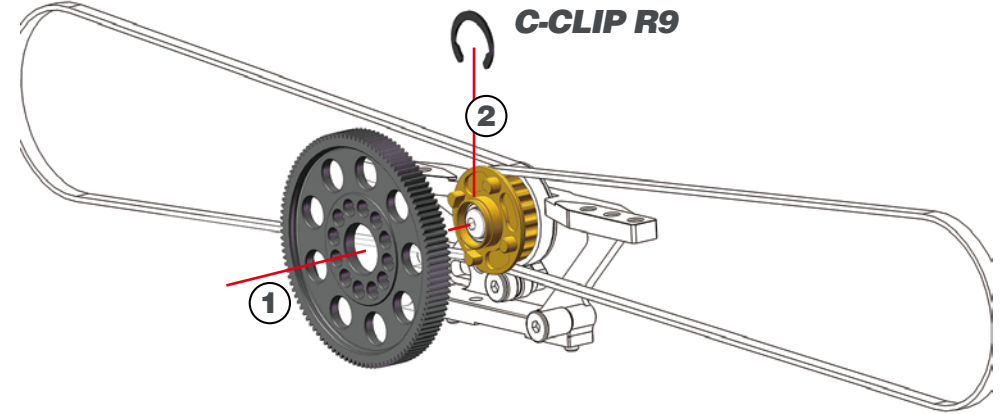


STEP 9

9.1




OPT




401917 Bearing excenter fr/rr (4) alu X20

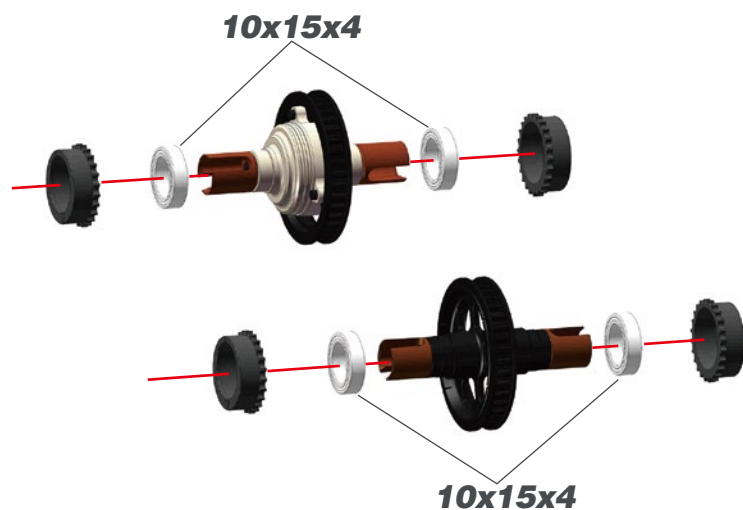

9.2

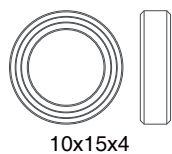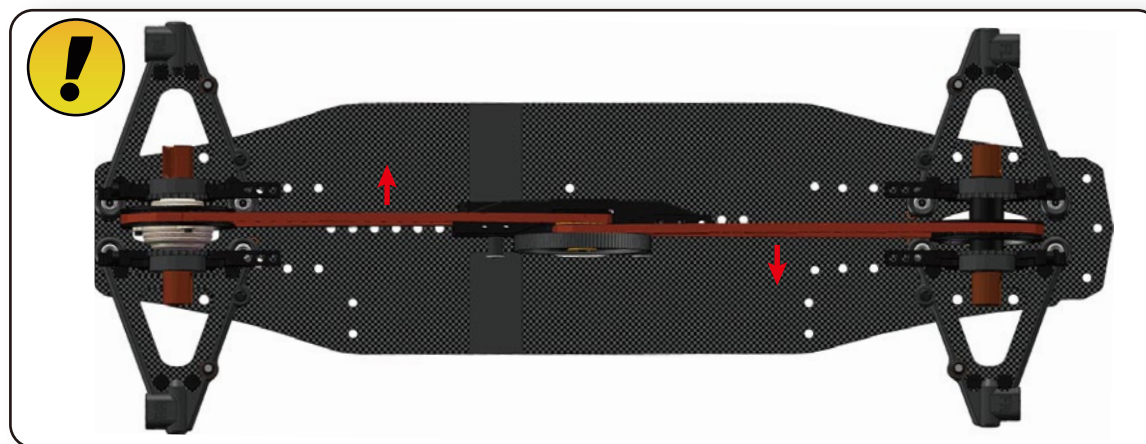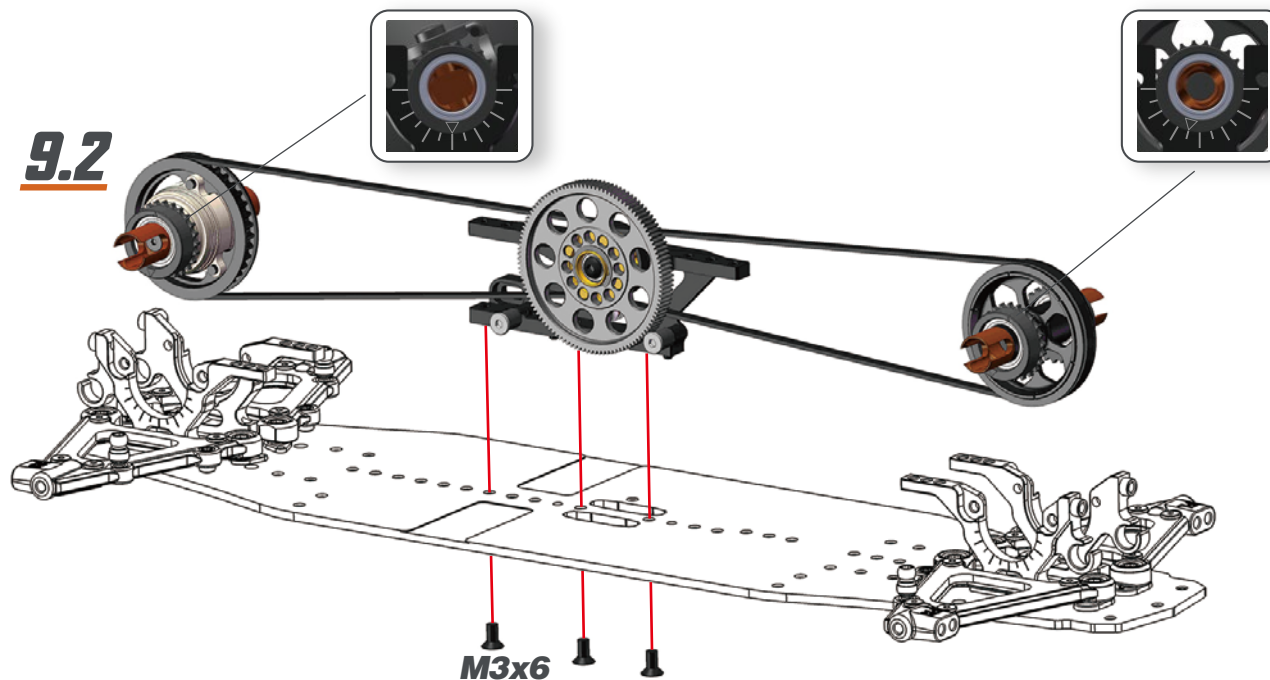


10x15x4




M3x6

10.1 REAR

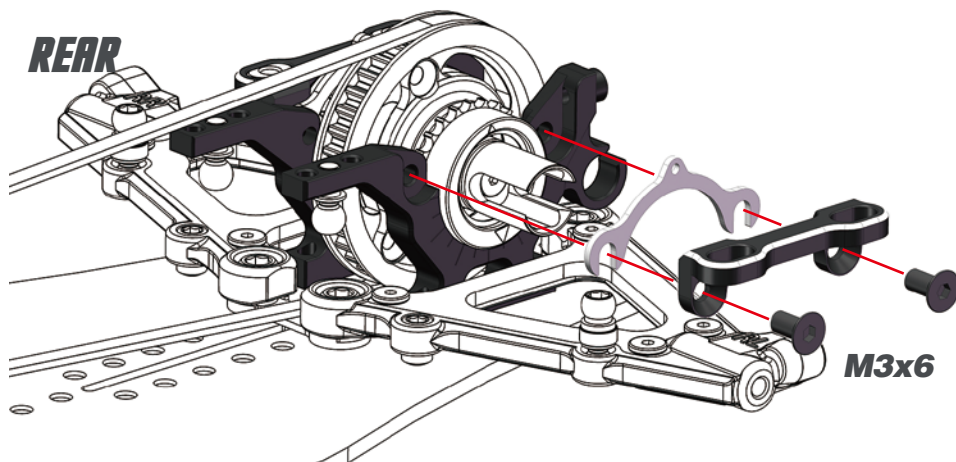


M3x6

10.2

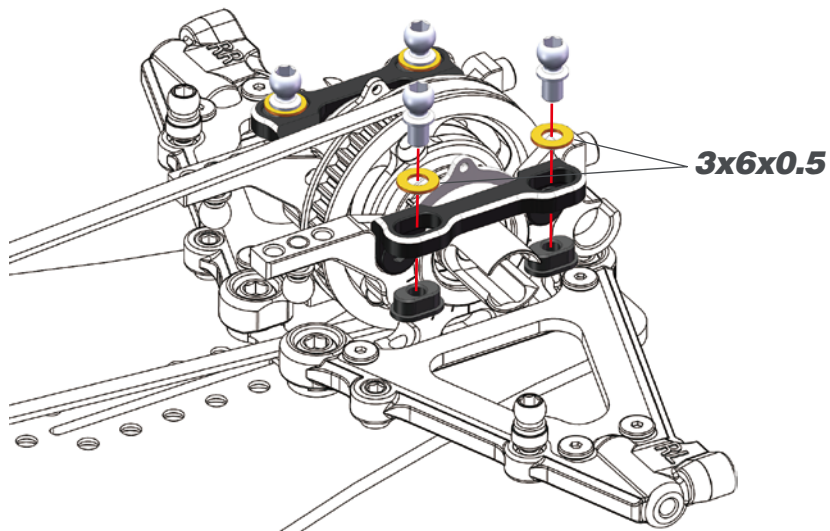

3x6x0.5

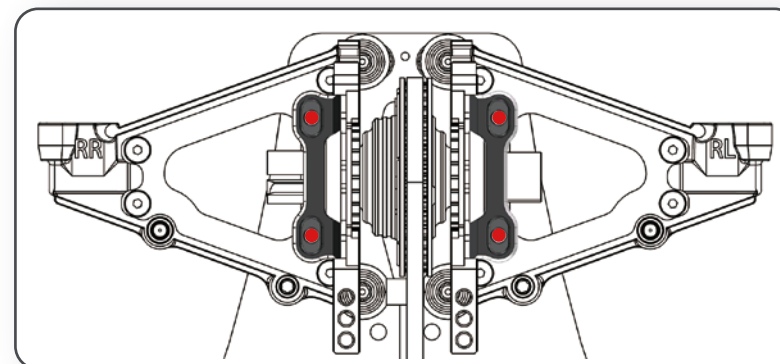

Lower arm 0 toe in	Rear	Lower arm 1 toe in
3°	OPT 5°	
2°	OPT 4°	
1°	OPT 3°	
✓ 0°		2° ✓
1°	OPT 1°	
2°	OPT 0°	
3°	OPT 1°	


PIVOTBALL M3x4

M3x6


3x6x0.5

STEP 11


11.1




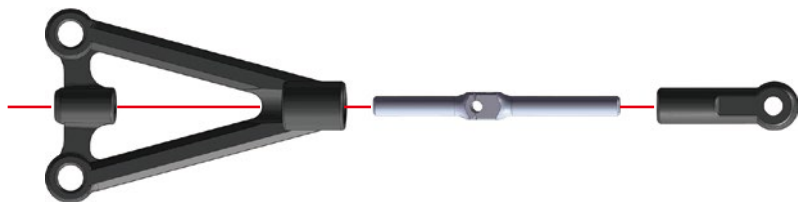


2X

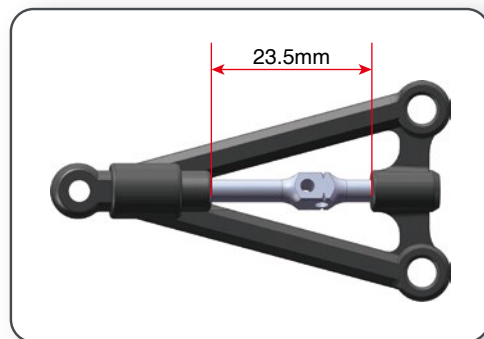


11.2

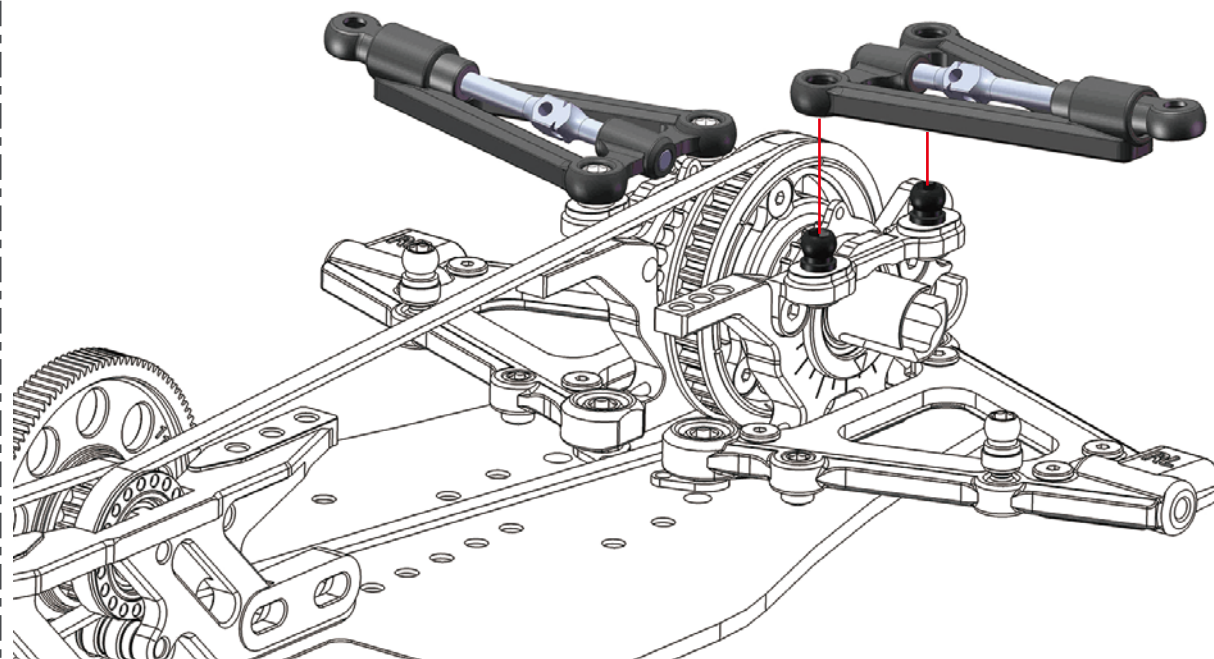
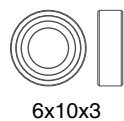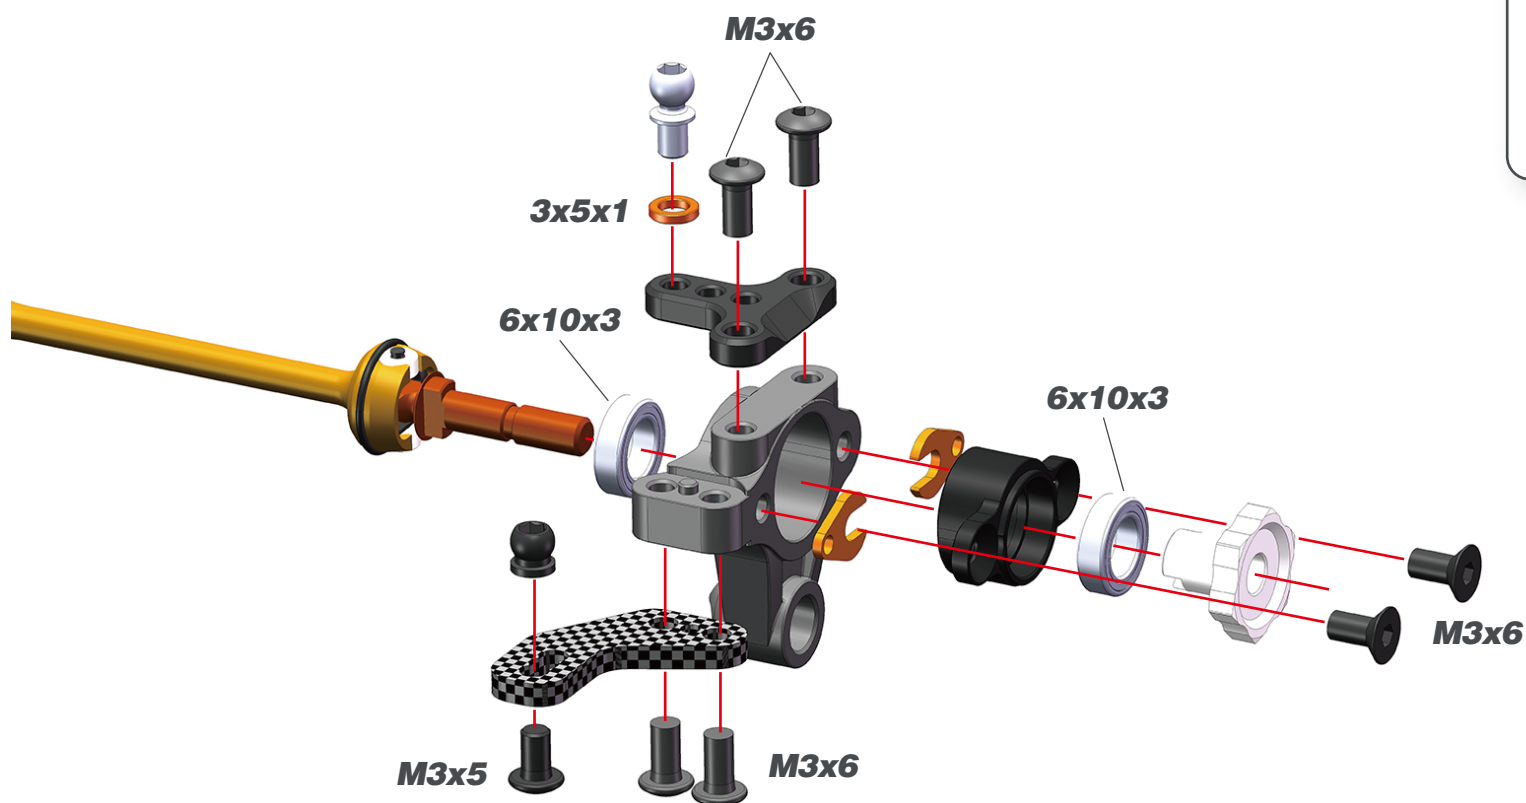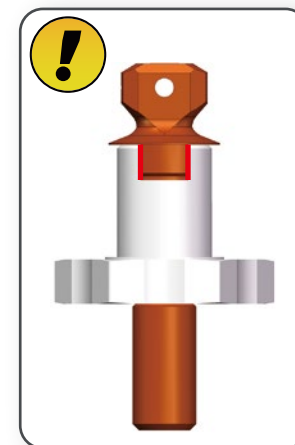
$$R=L$$


STEP 13



13.1

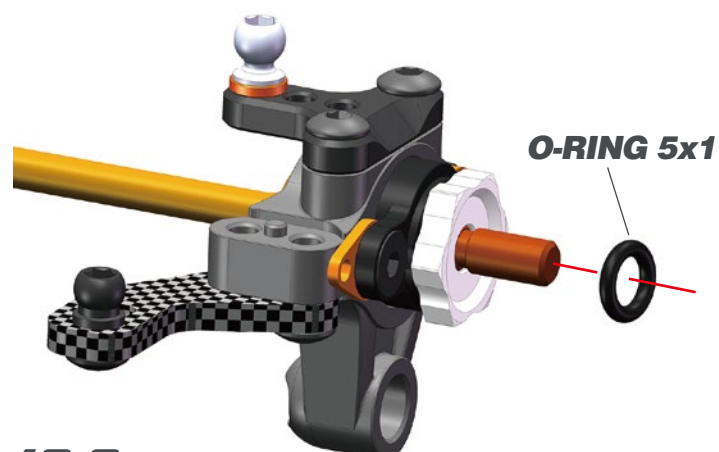



13.2



13.3

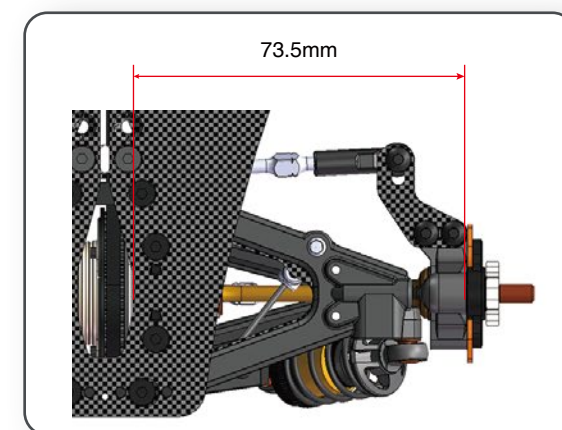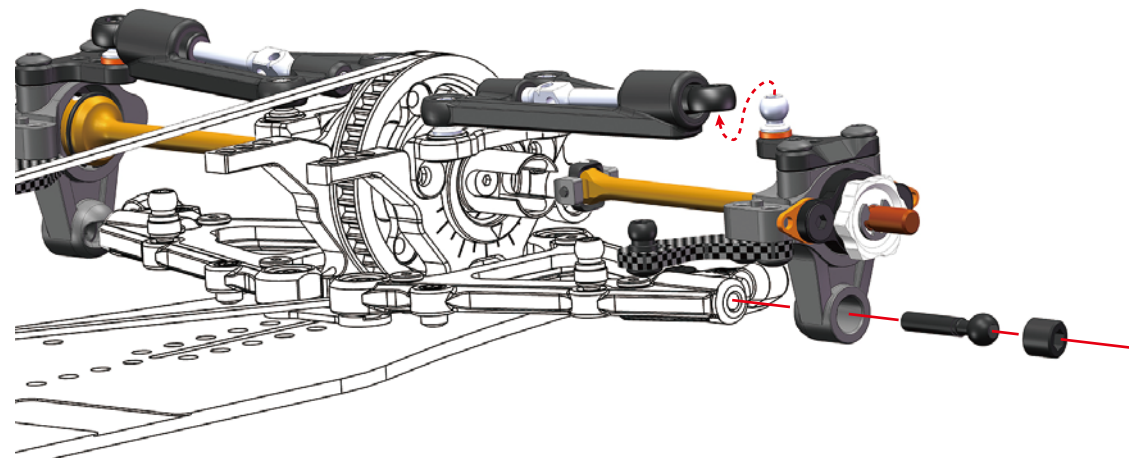


STEP 14

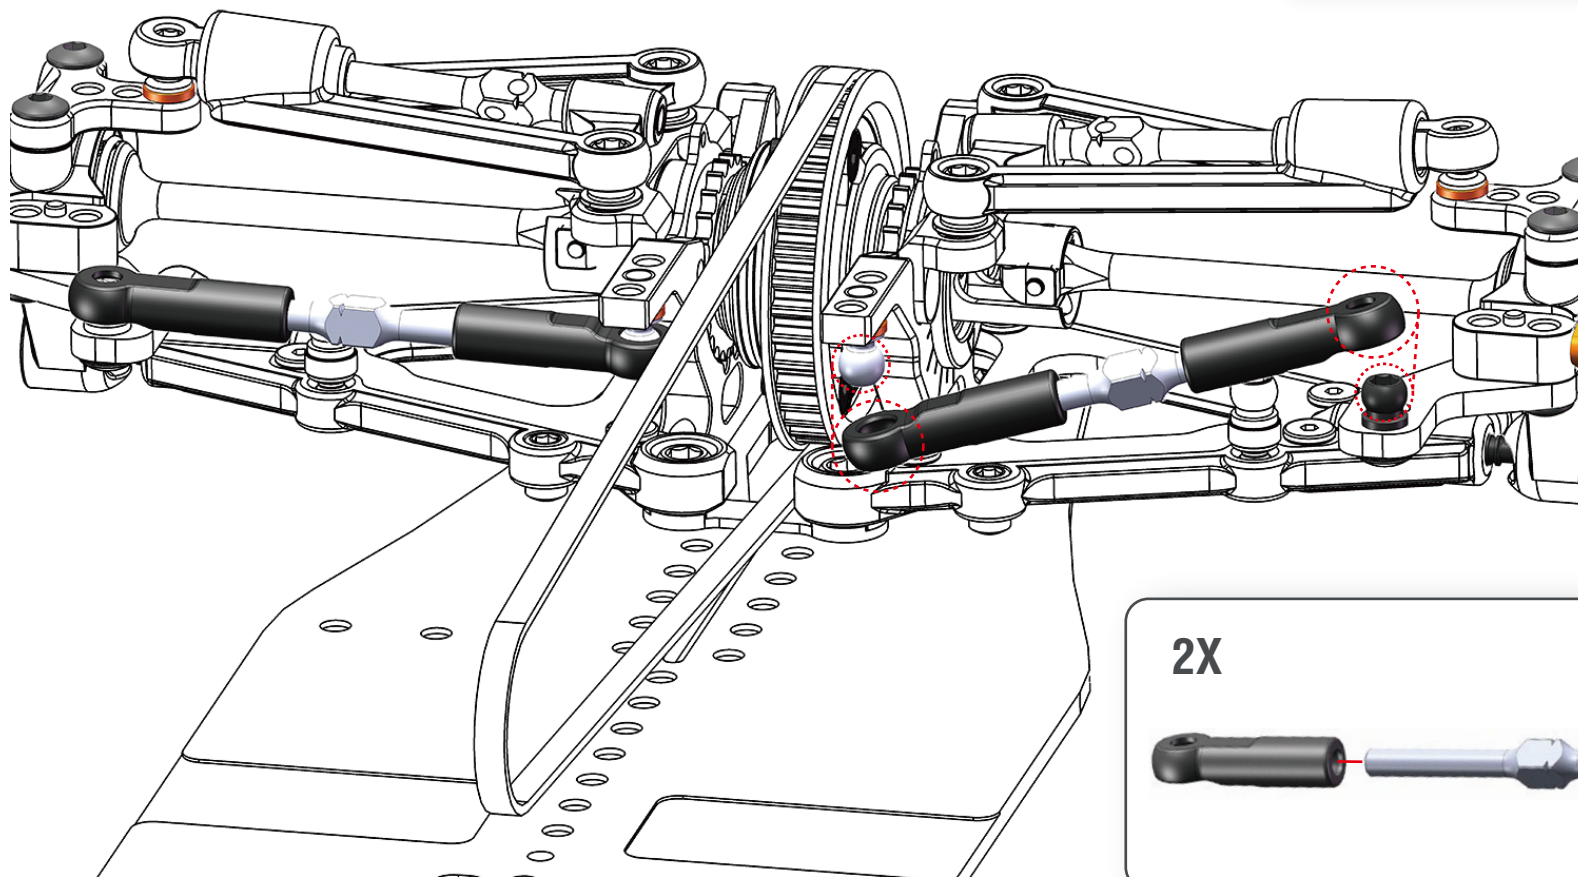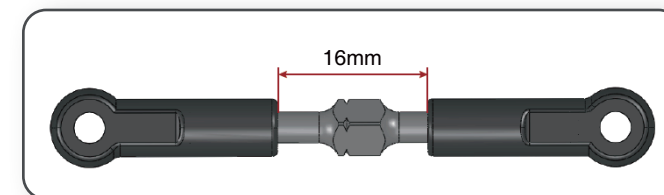



2X





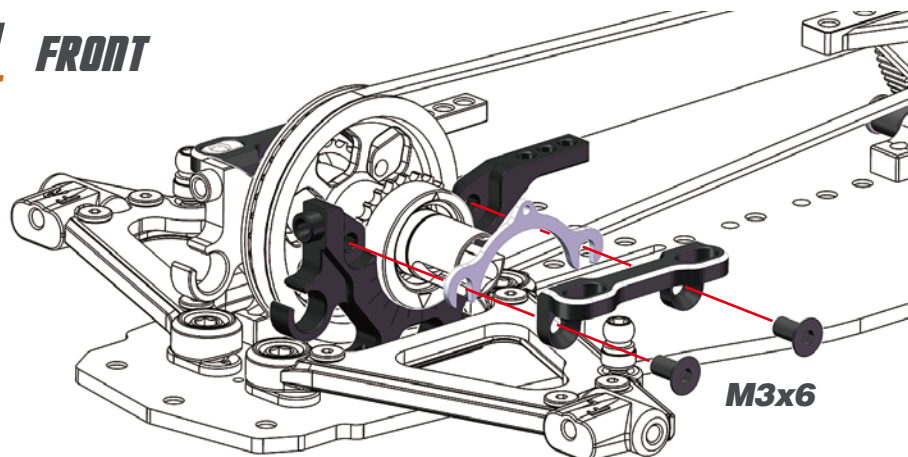

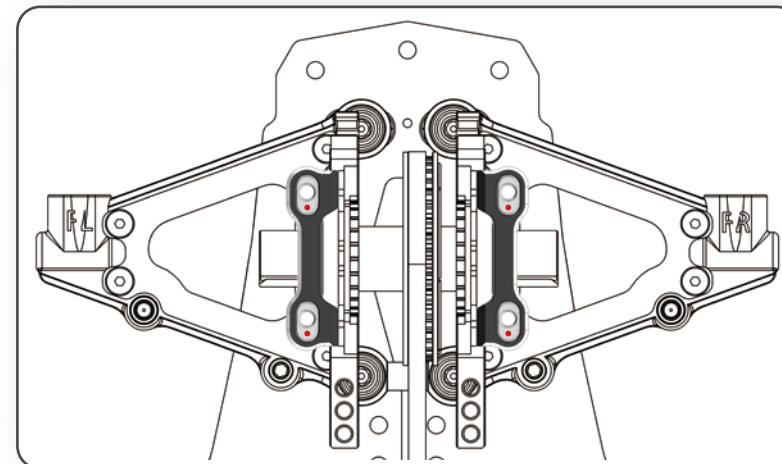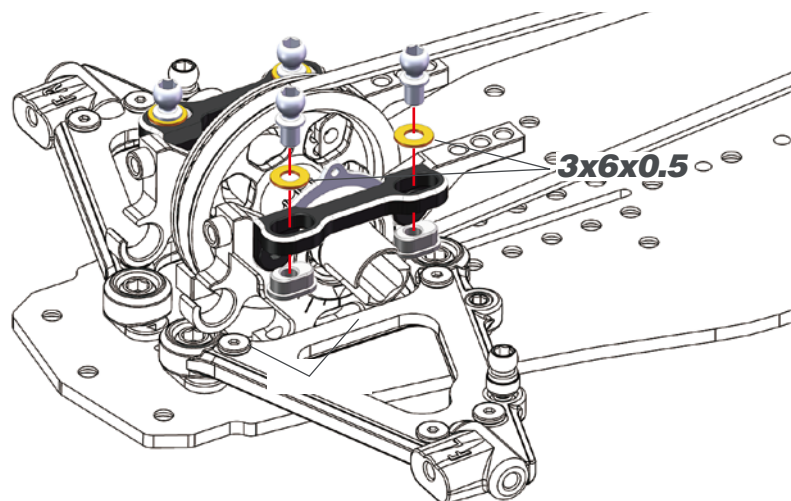


15.1 FRONT



15.2






Lower arm 0 toe, caster angle:	Front	Lower arm 1 toe, caster angle:
2°	 OPT	0°
3°	 OPT	1°
✓ 4°		2°
5°	 OPT	3°
6°		4° ✓
7°	 OPT	5°
8°	 OPT	6°

 PIVOTBALL M3x4

 M3x6

 3x6x0.5

STEP 16

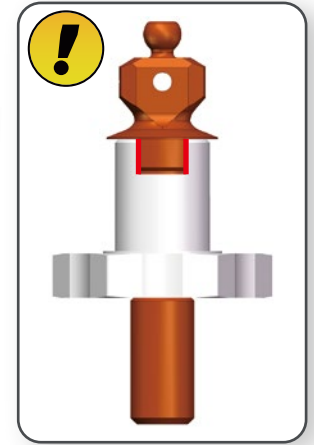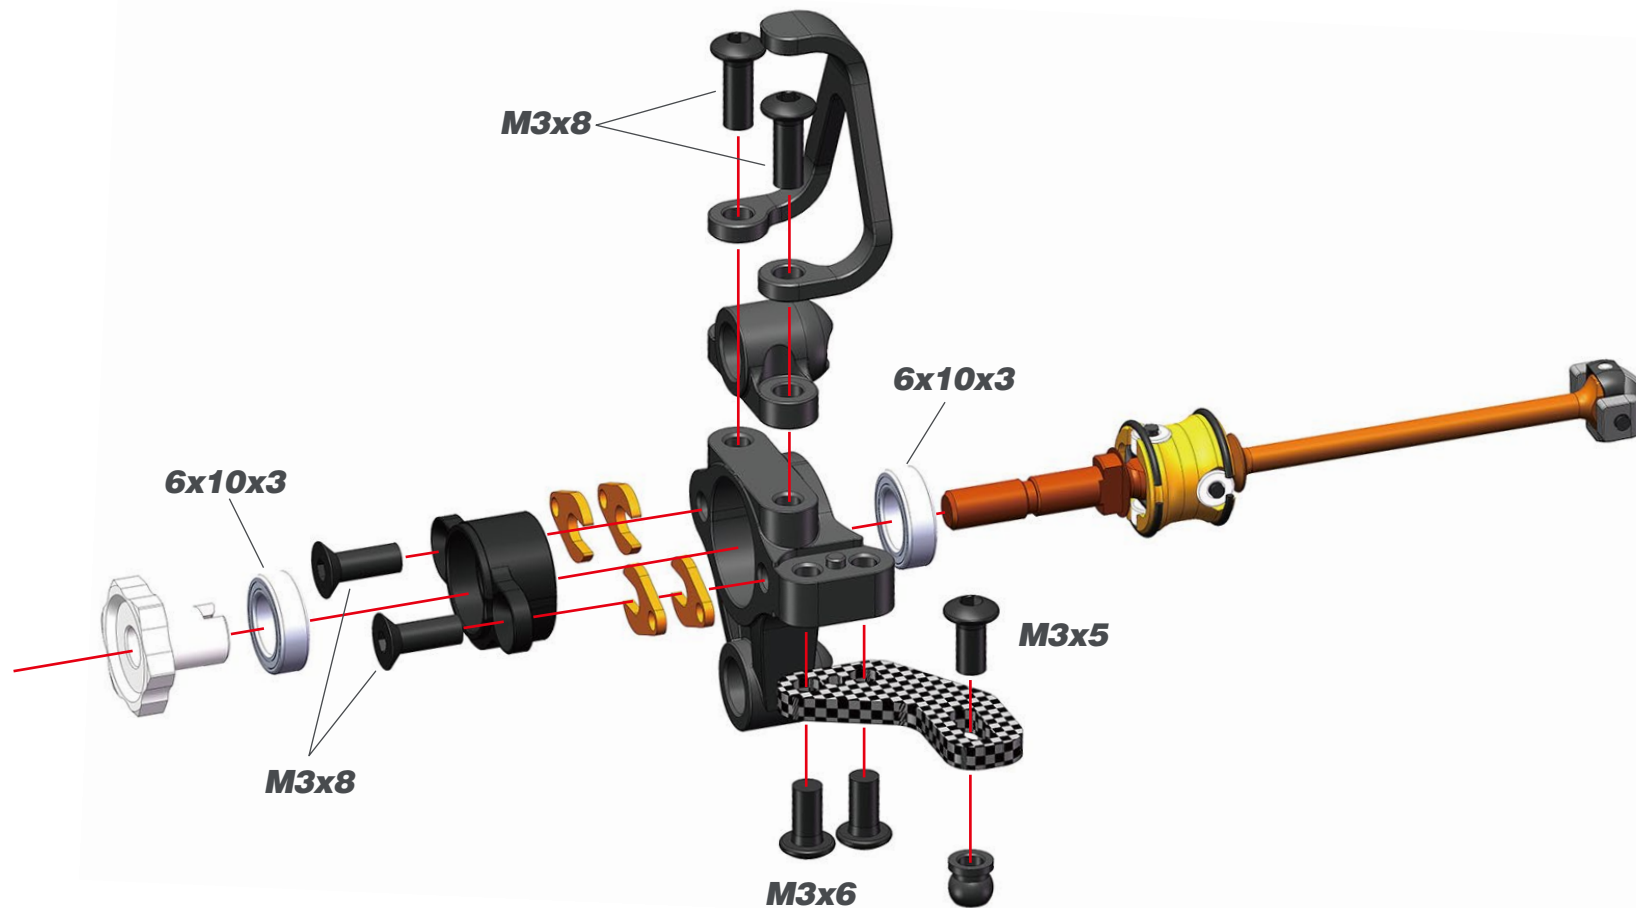


STEP 17

17.1




17.2

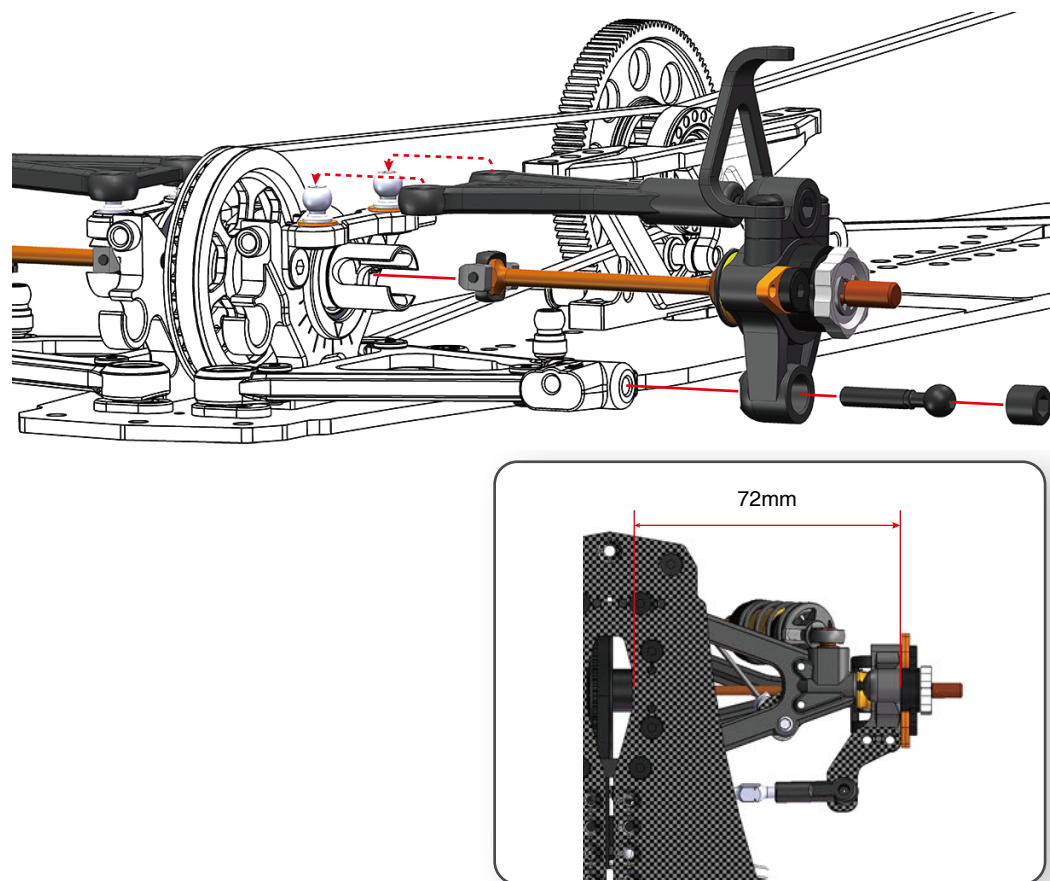


STEP 18 BAG 5


18.1 FRONT & REAR

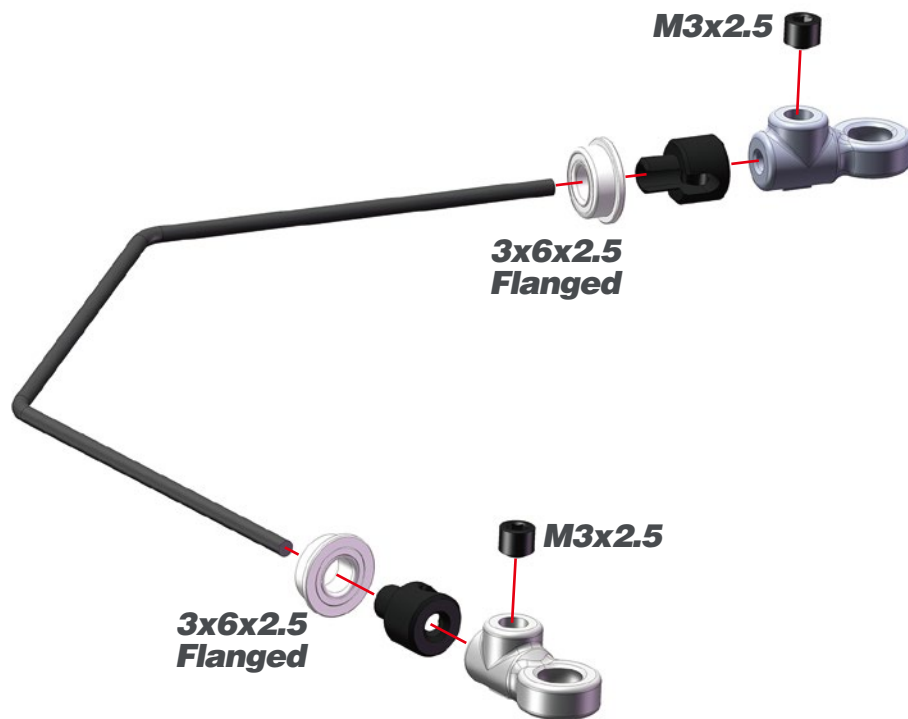



18.2 REAR

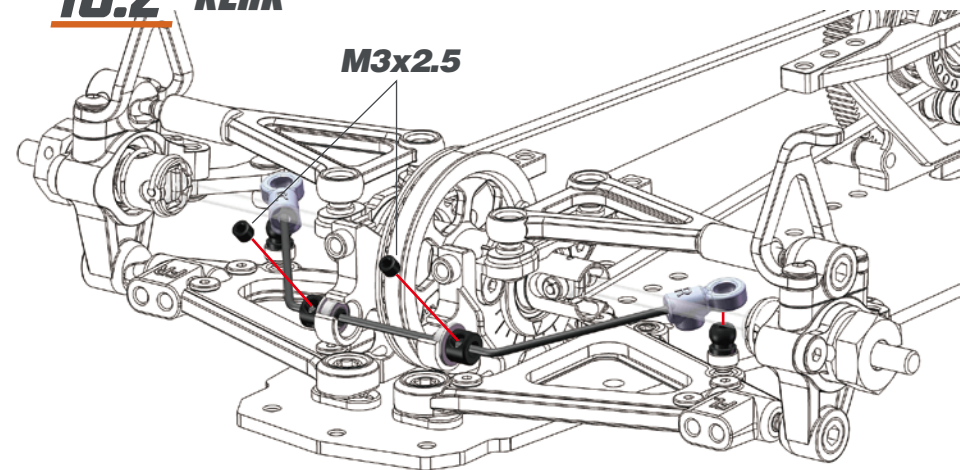

18.3 FRONT

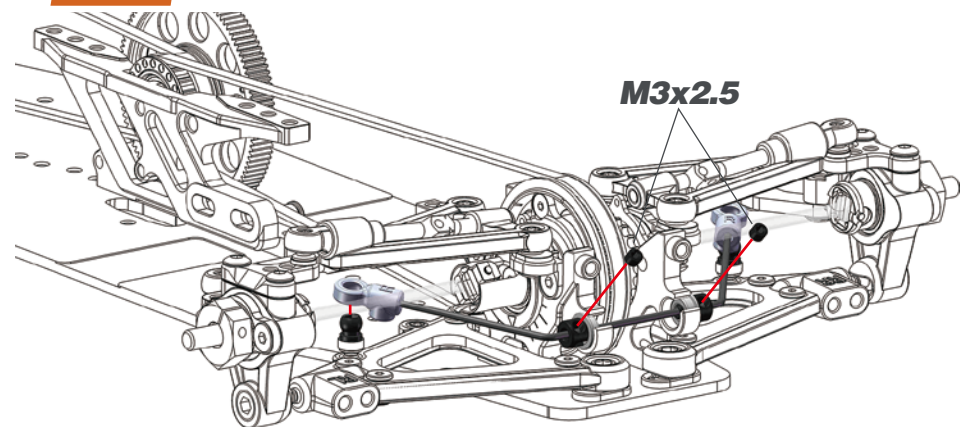

19.1

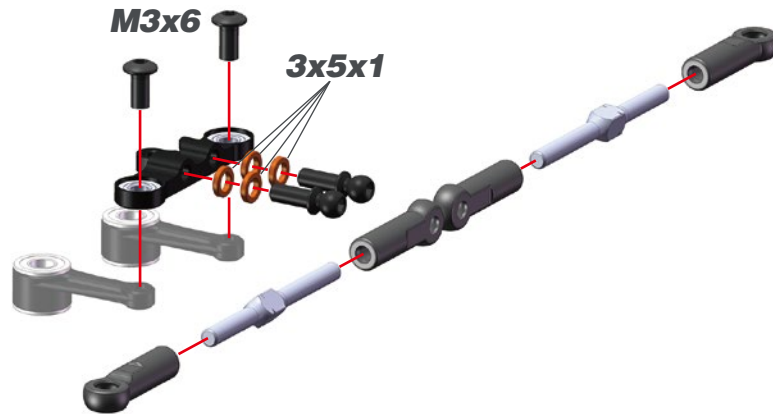
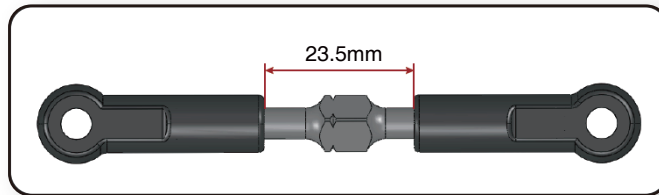


19.2

OPT



402099 Steering lever stiffener X20 '24

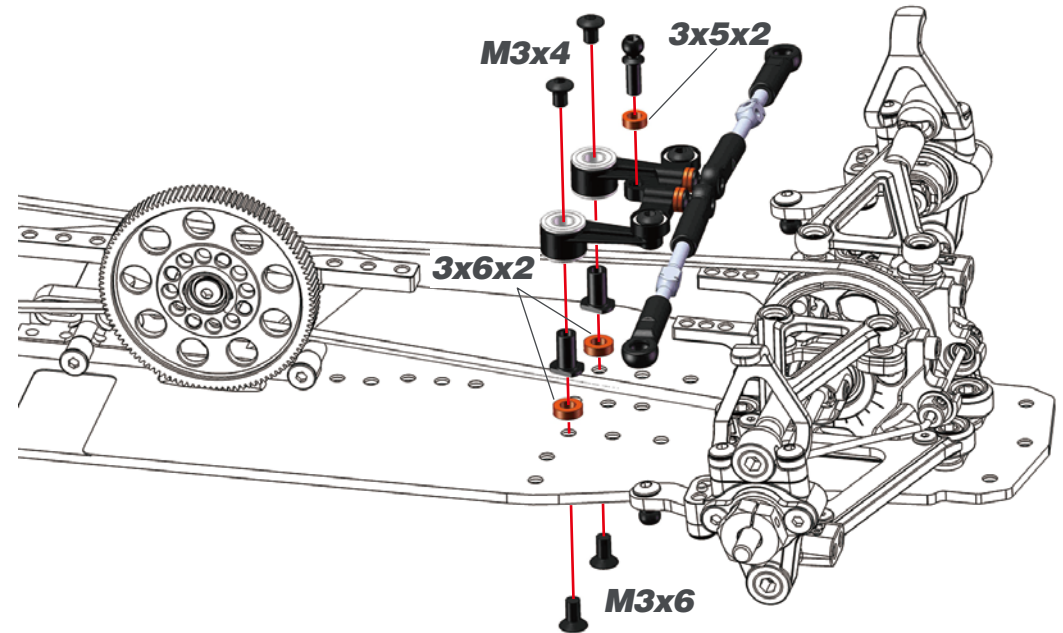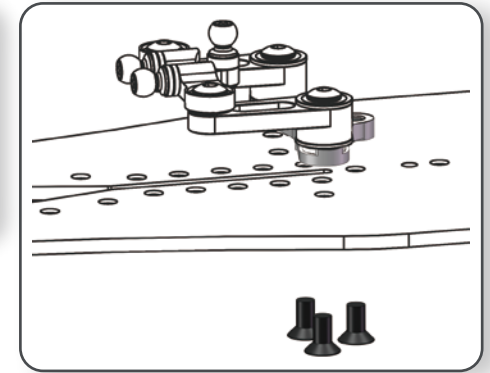






OPT



600290 Servo lever steering 23T alu


600291 Servo lever steering 24T alu

600292 Servo lever steering 25T alu

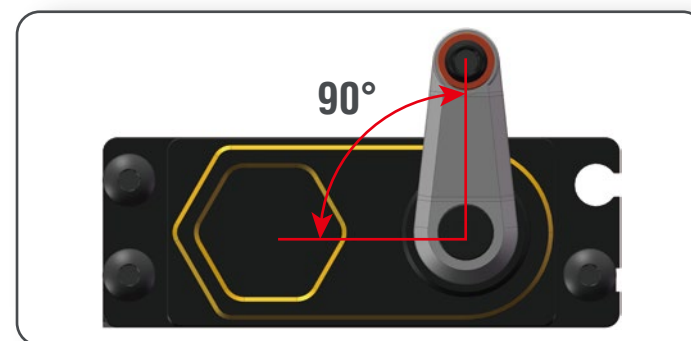


STEP 21


21.1

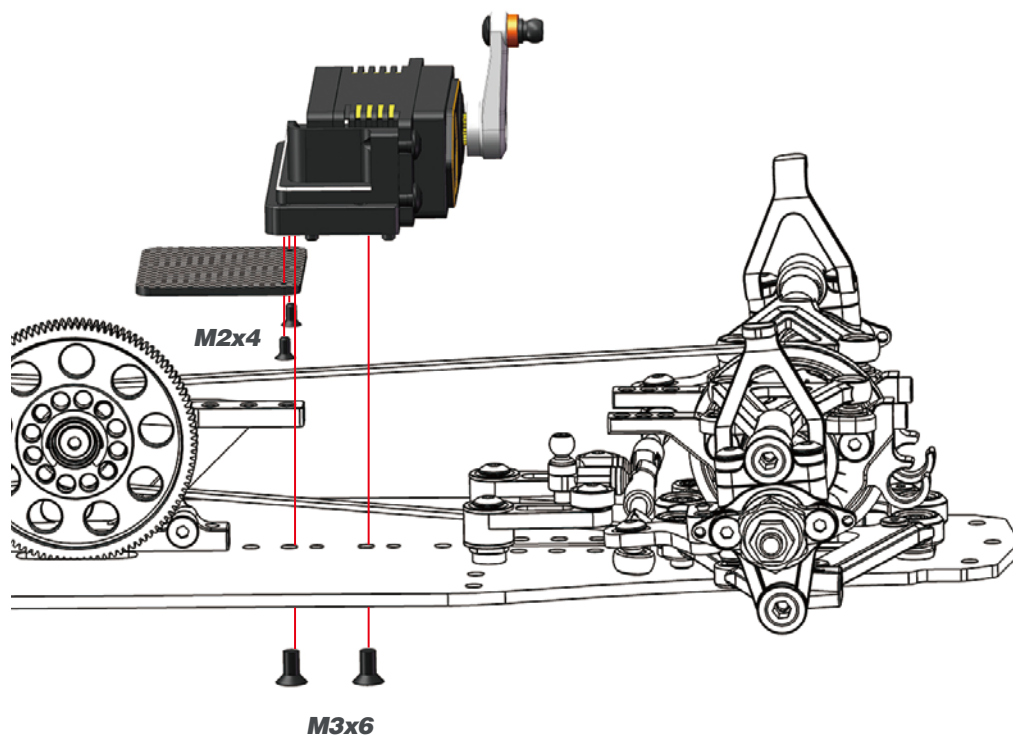



21.2

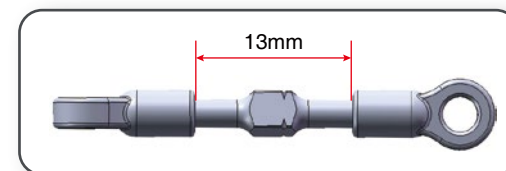

21.3

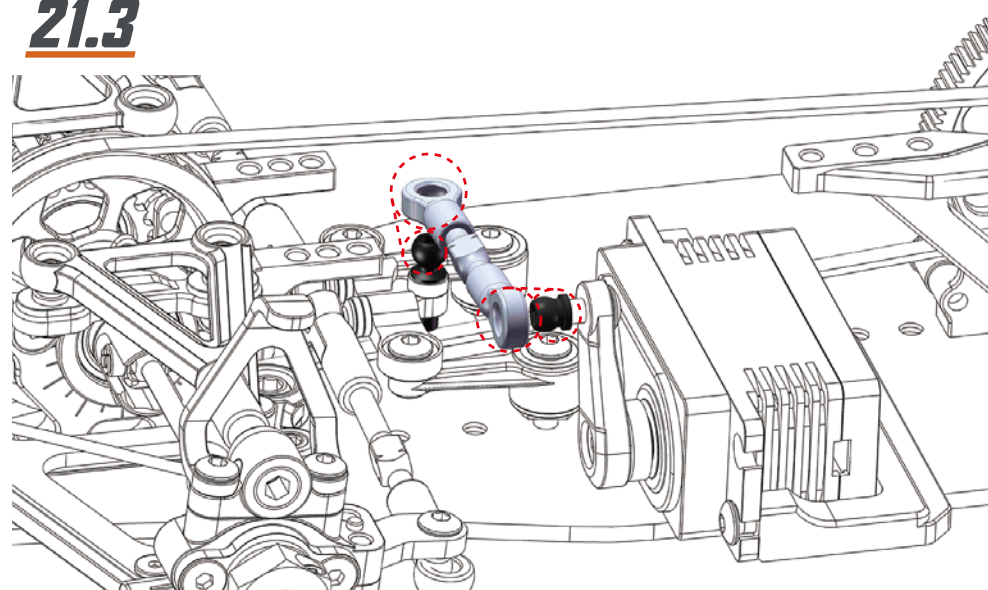




STEP 22 BAG 6

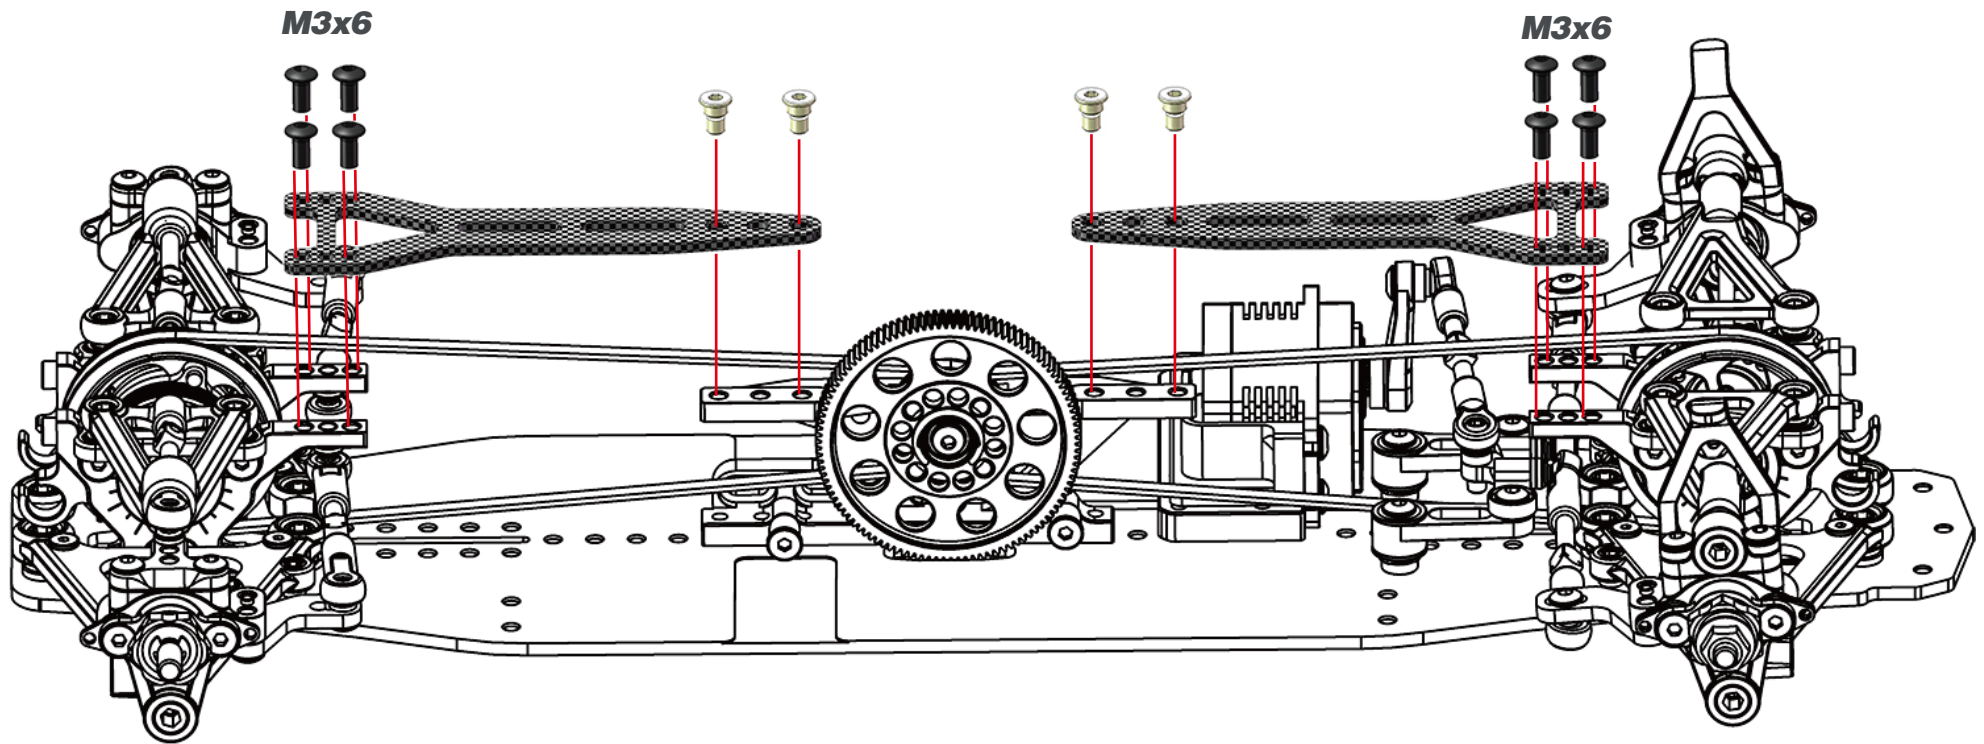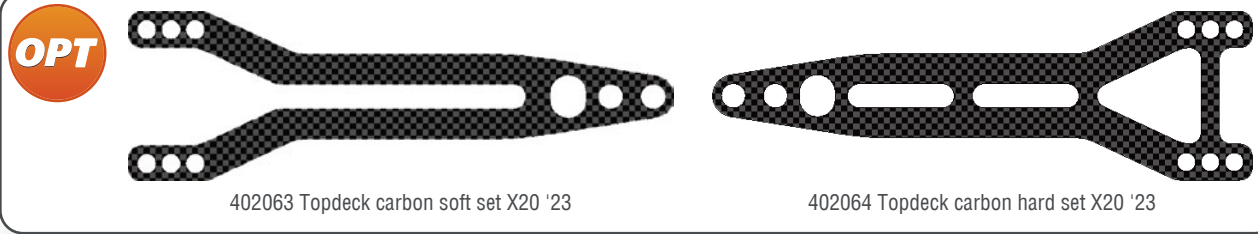



STEP 23

R=L

M3x16 Flanged

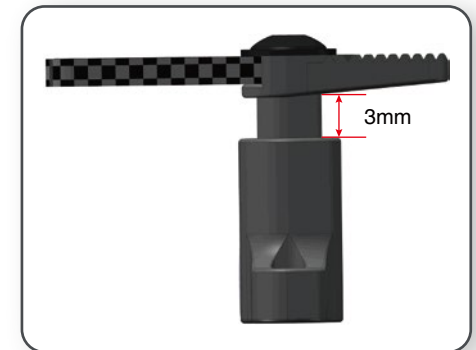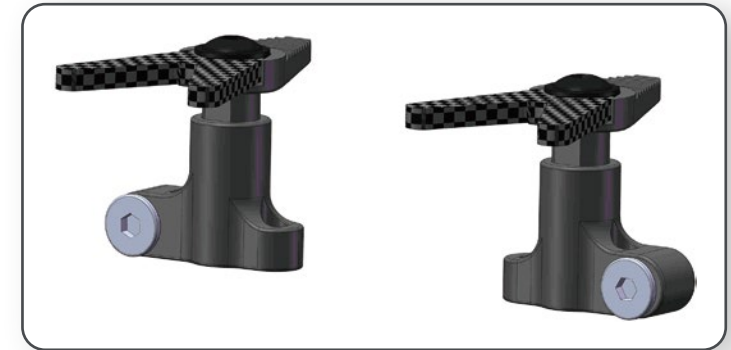

STEP 24

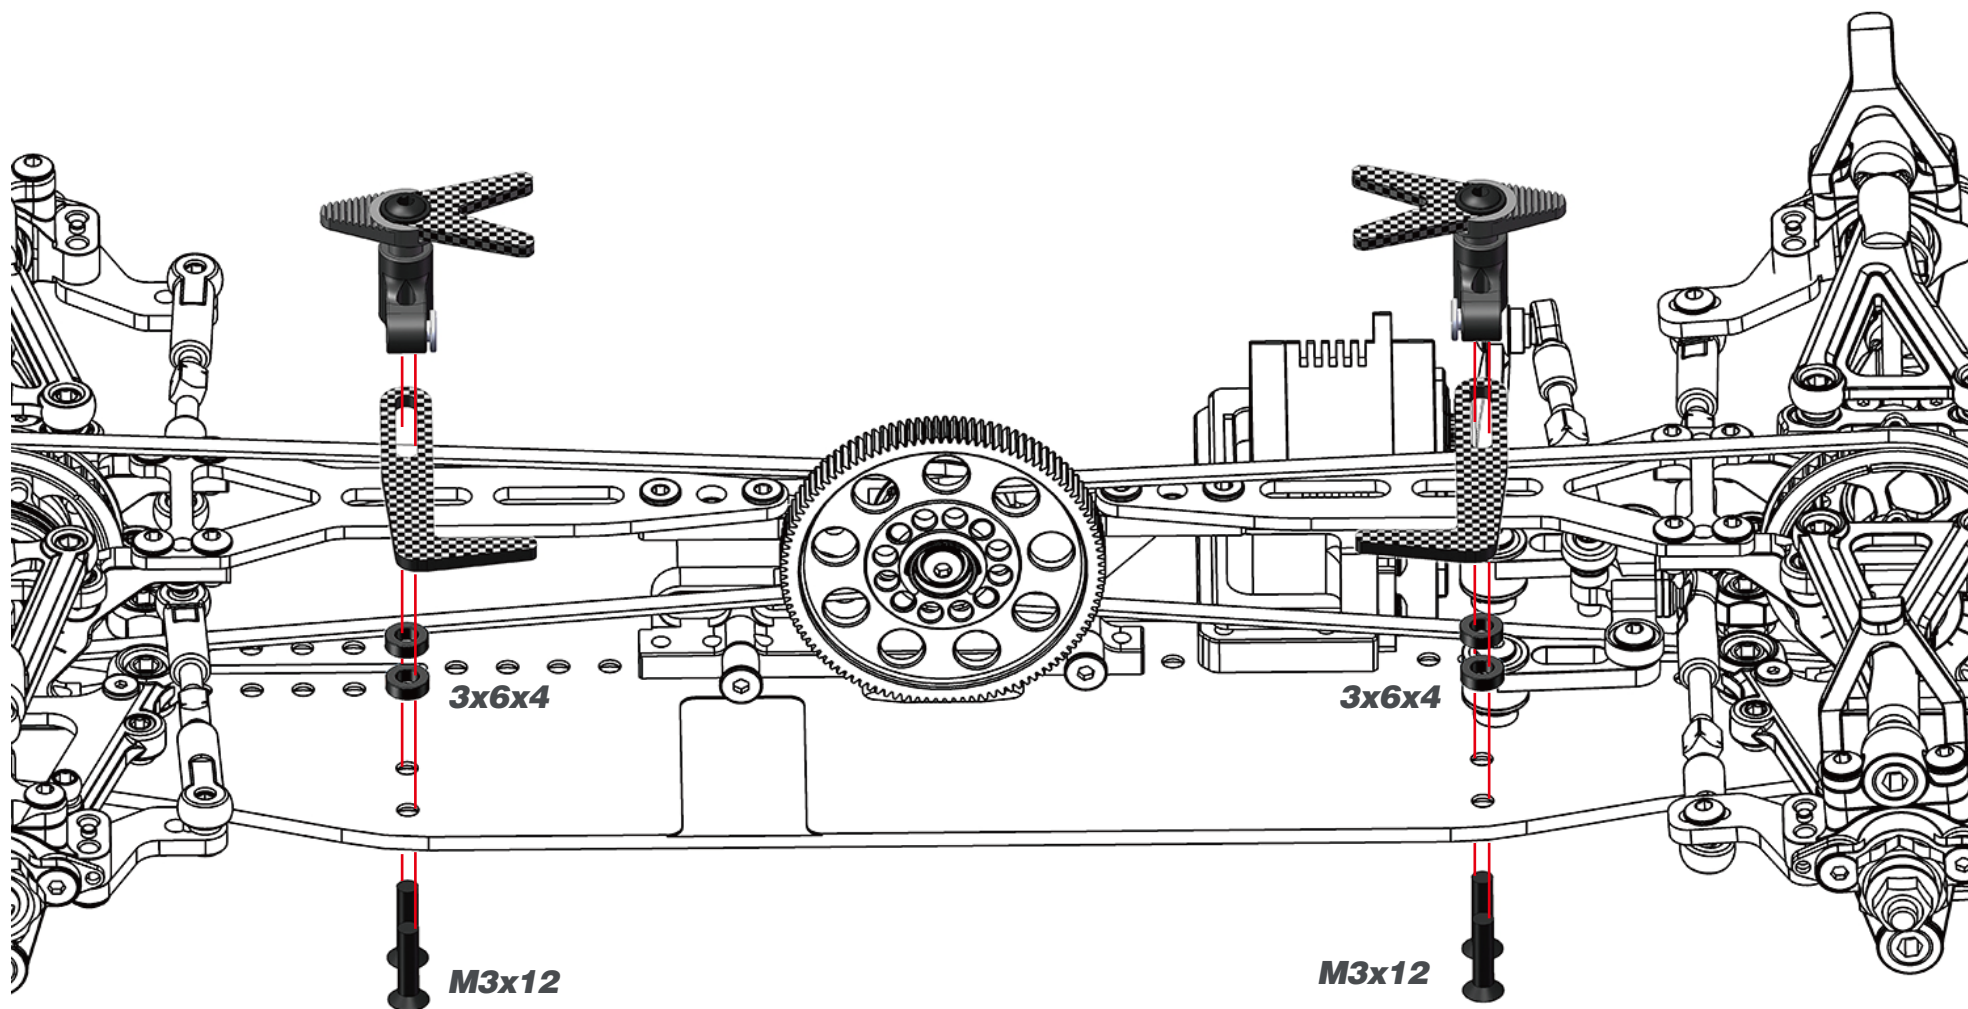

STEP 25 SHOCK BAG



25.1




25.2



25.3

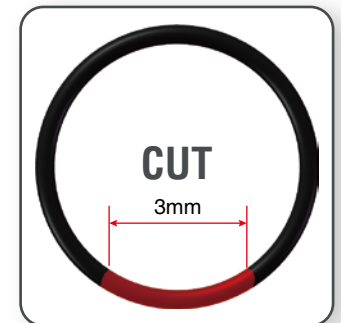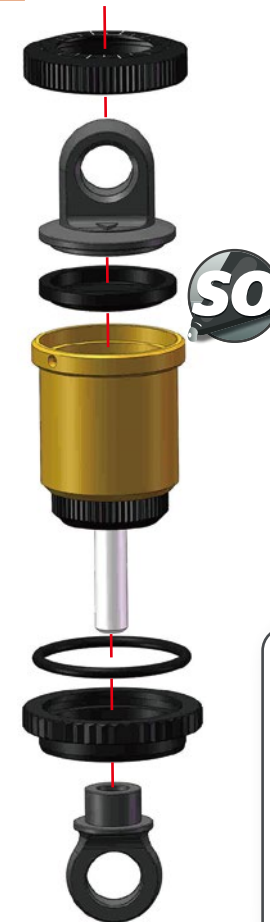

25.4

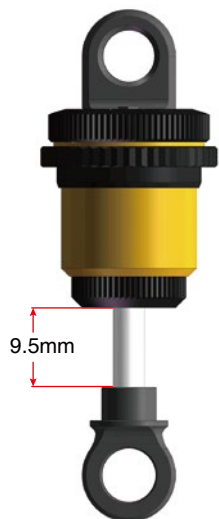

25.5



25.6

160130 is needed to have 5mm or less ride height (RH) but can also be used for a higher RH by turning the spring collar to push the spring down.



Use the low shock spring support 160130 as default
And the 160154 is also included as optional


OPT




160156 Shock spring support low onroad alu (4)

STEP 26 BAG 7


26.1 FRONT

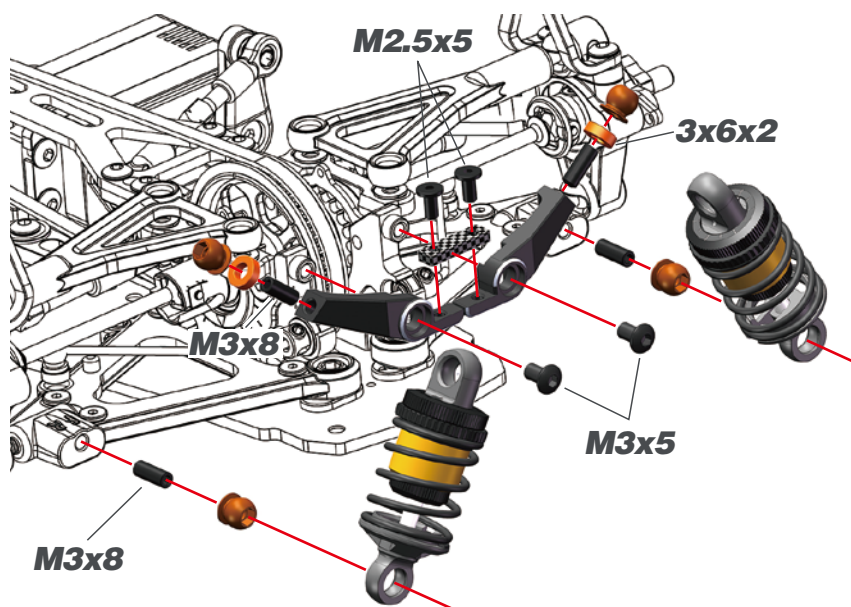

26.2 REAR

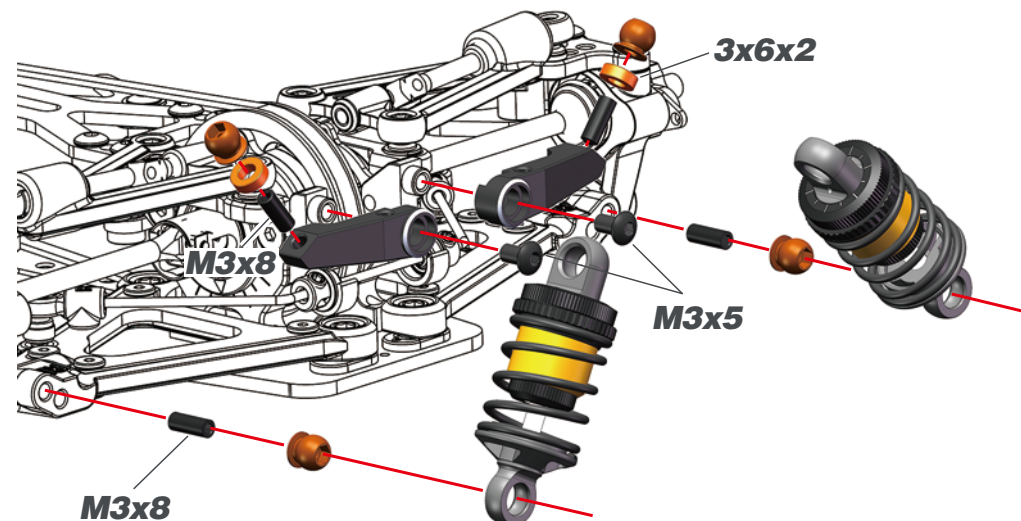

27.1

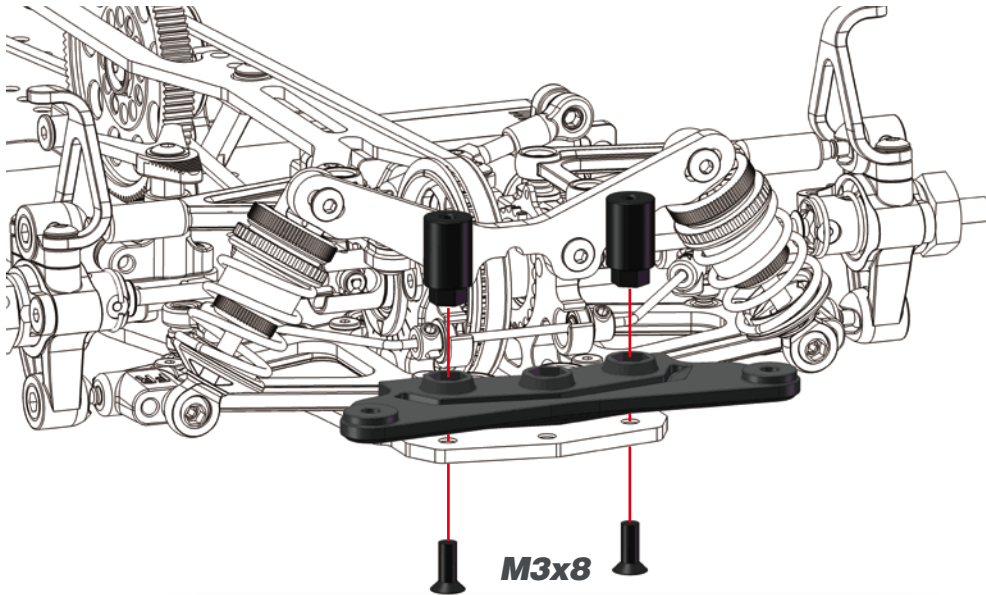

OPT




401954 Bumper top carbon X20 '21


OPT





401602 Body-height fine-tuner alu (4)



27.2

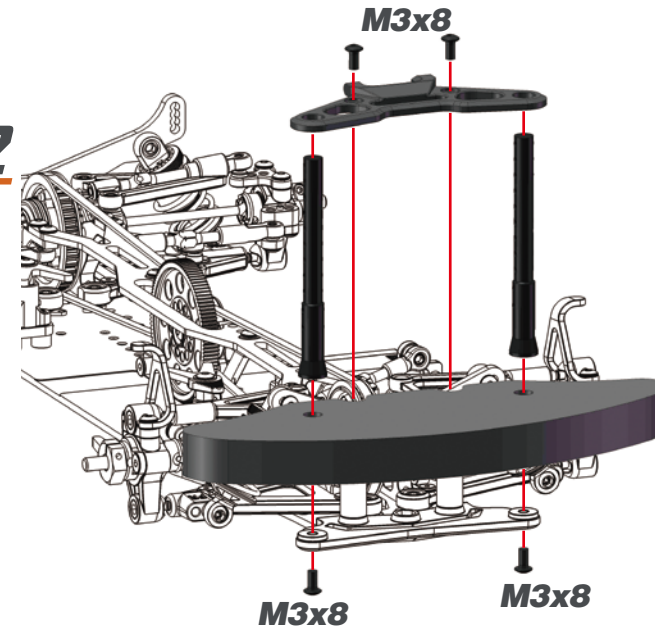


27.3

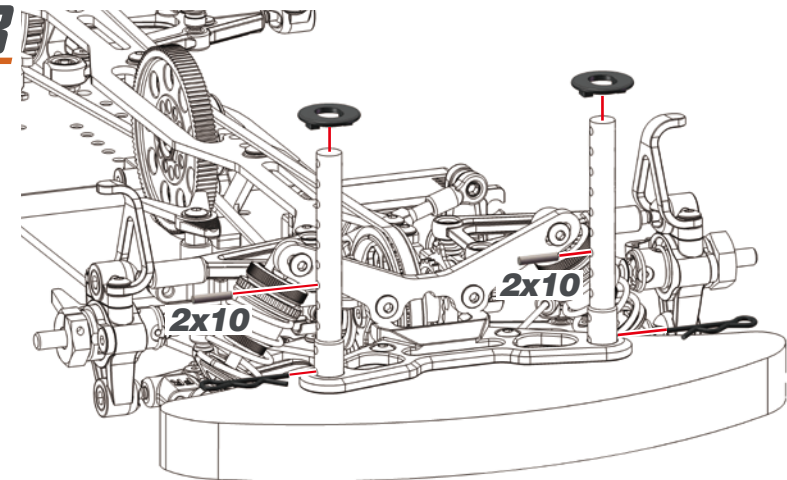



STEP 28

28.1

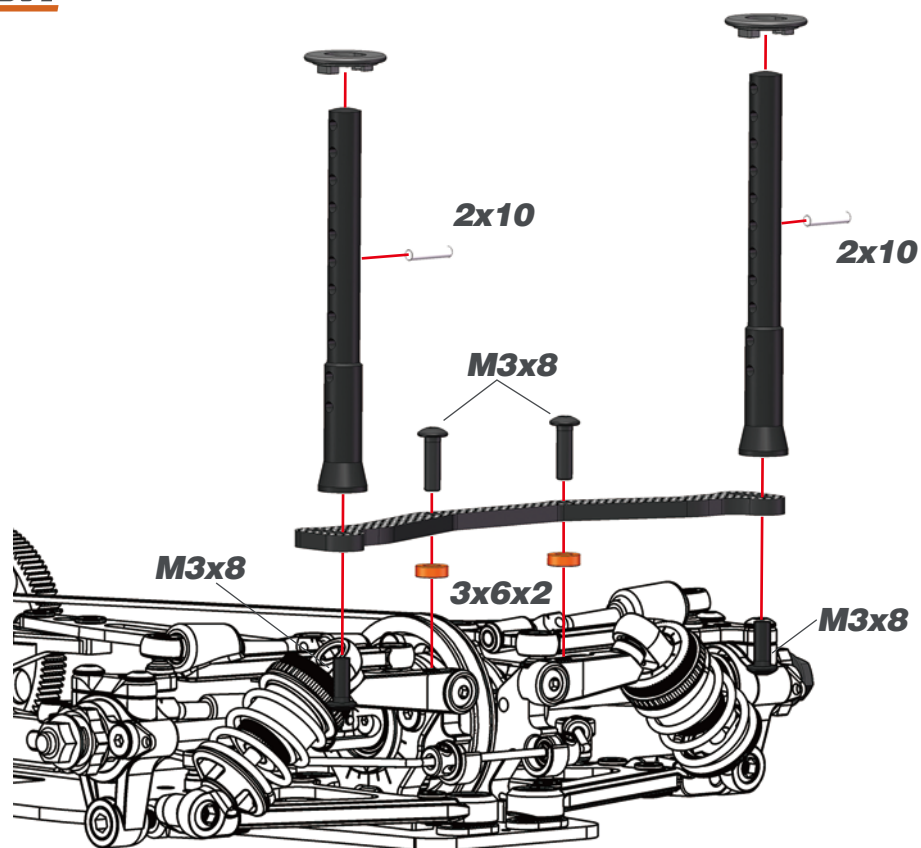


or

28.2

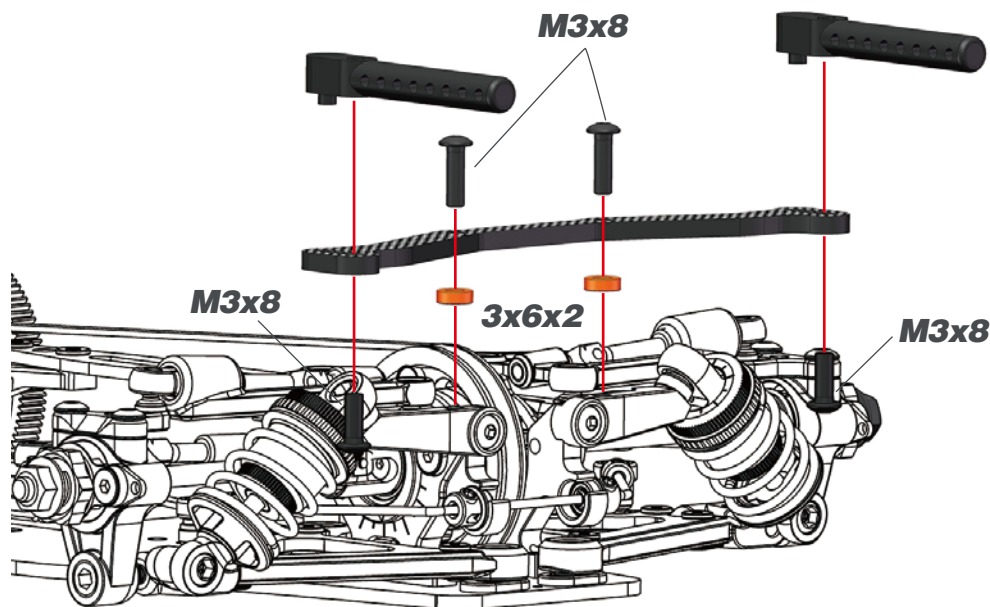


29.1

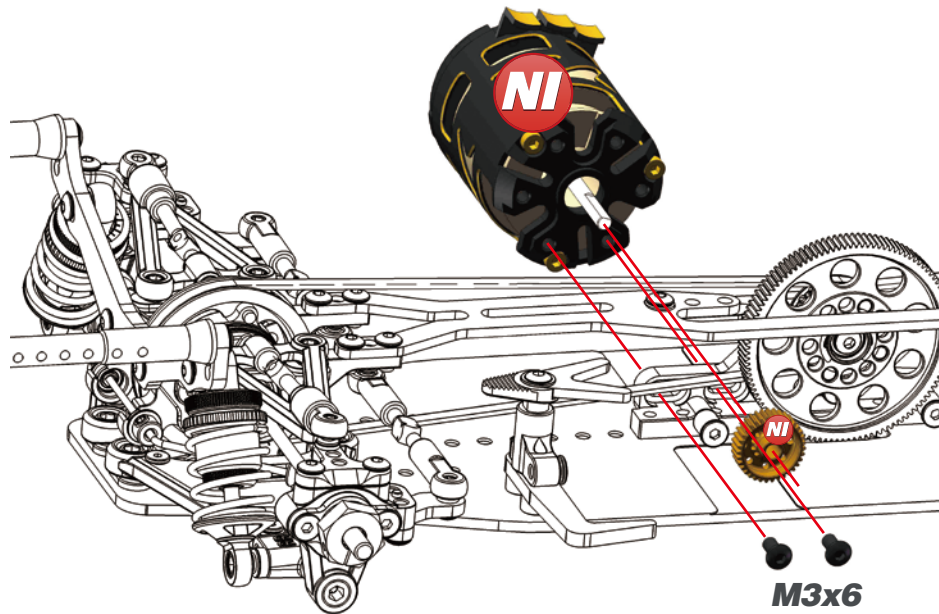

29.2




Lock the pinion screw from that way.


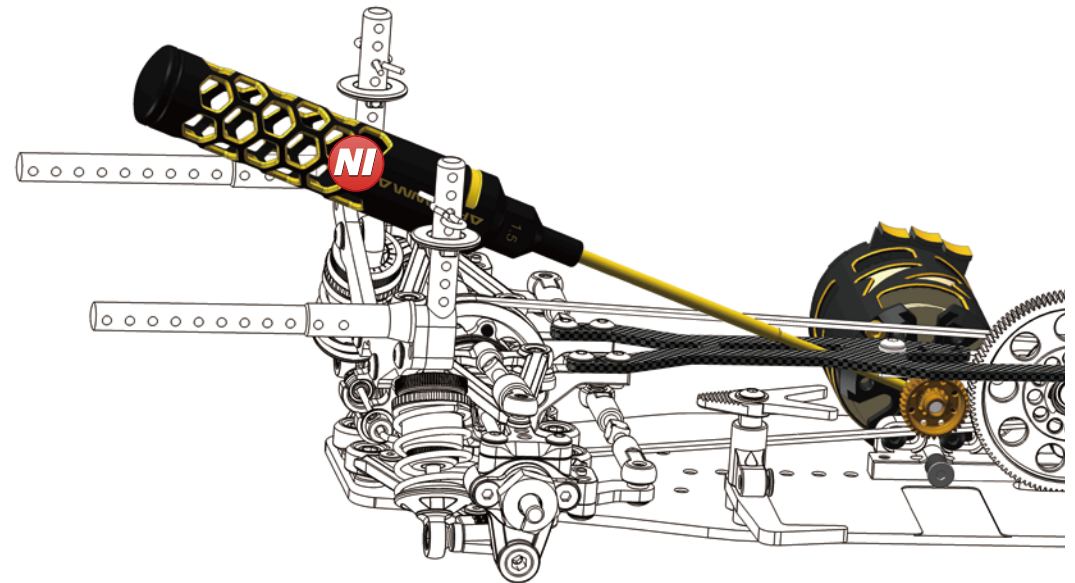


STEP 30

30.1

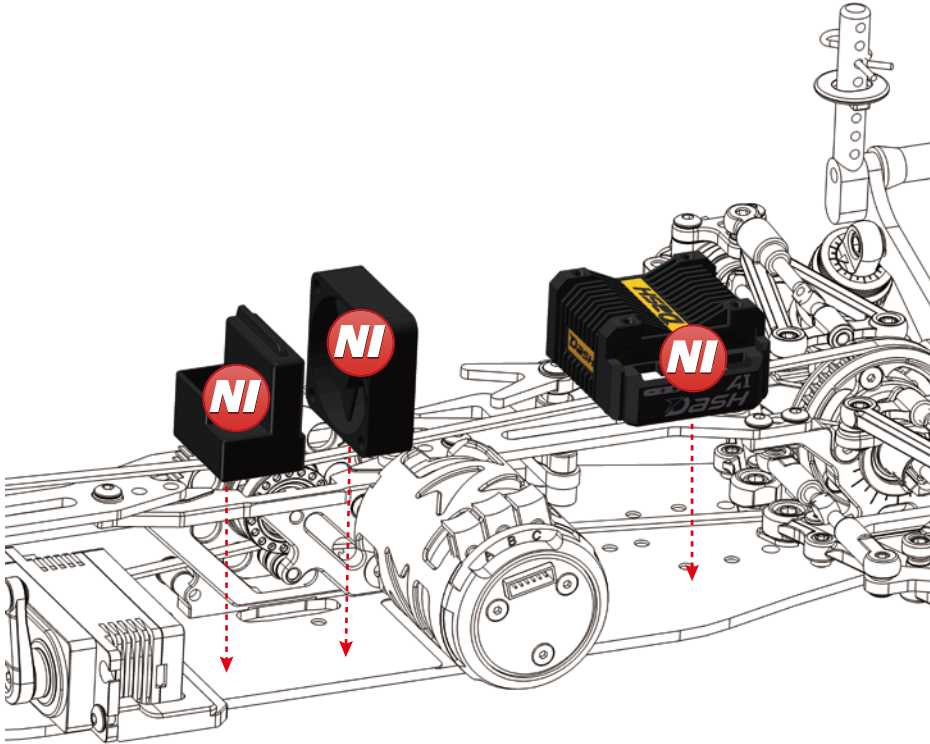


30.2

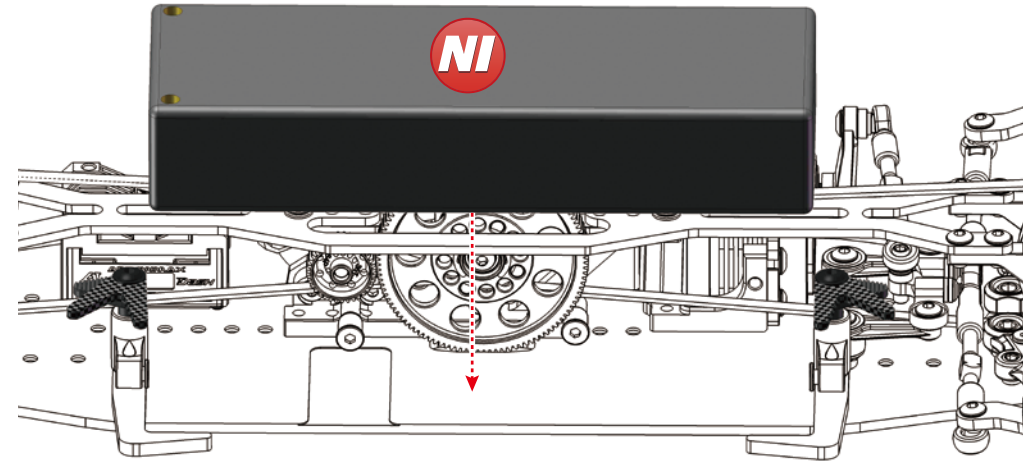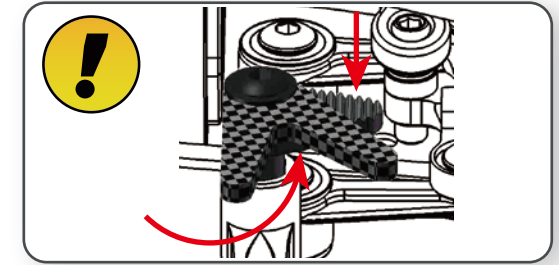



STEP 31

31.1

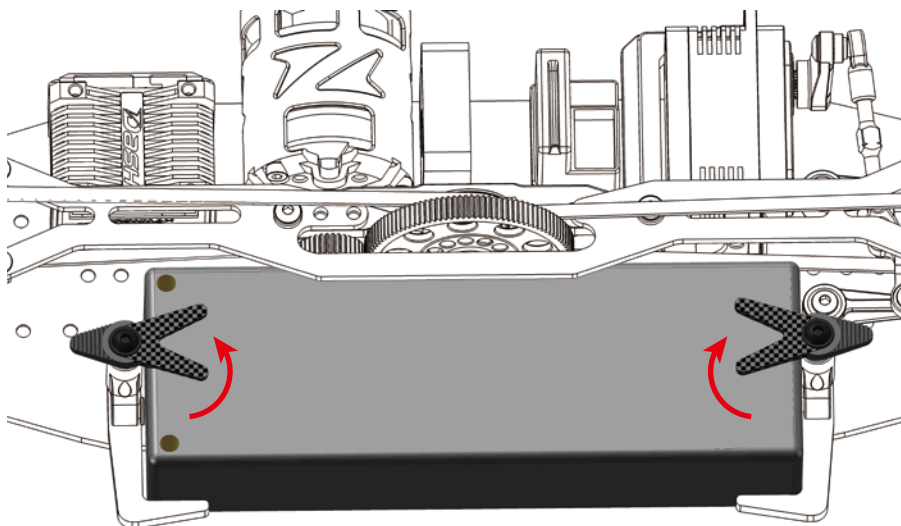

31.2

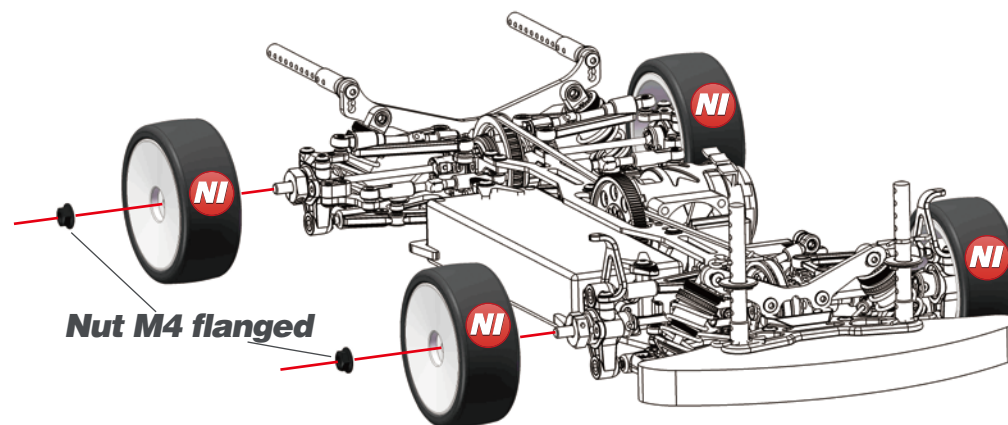

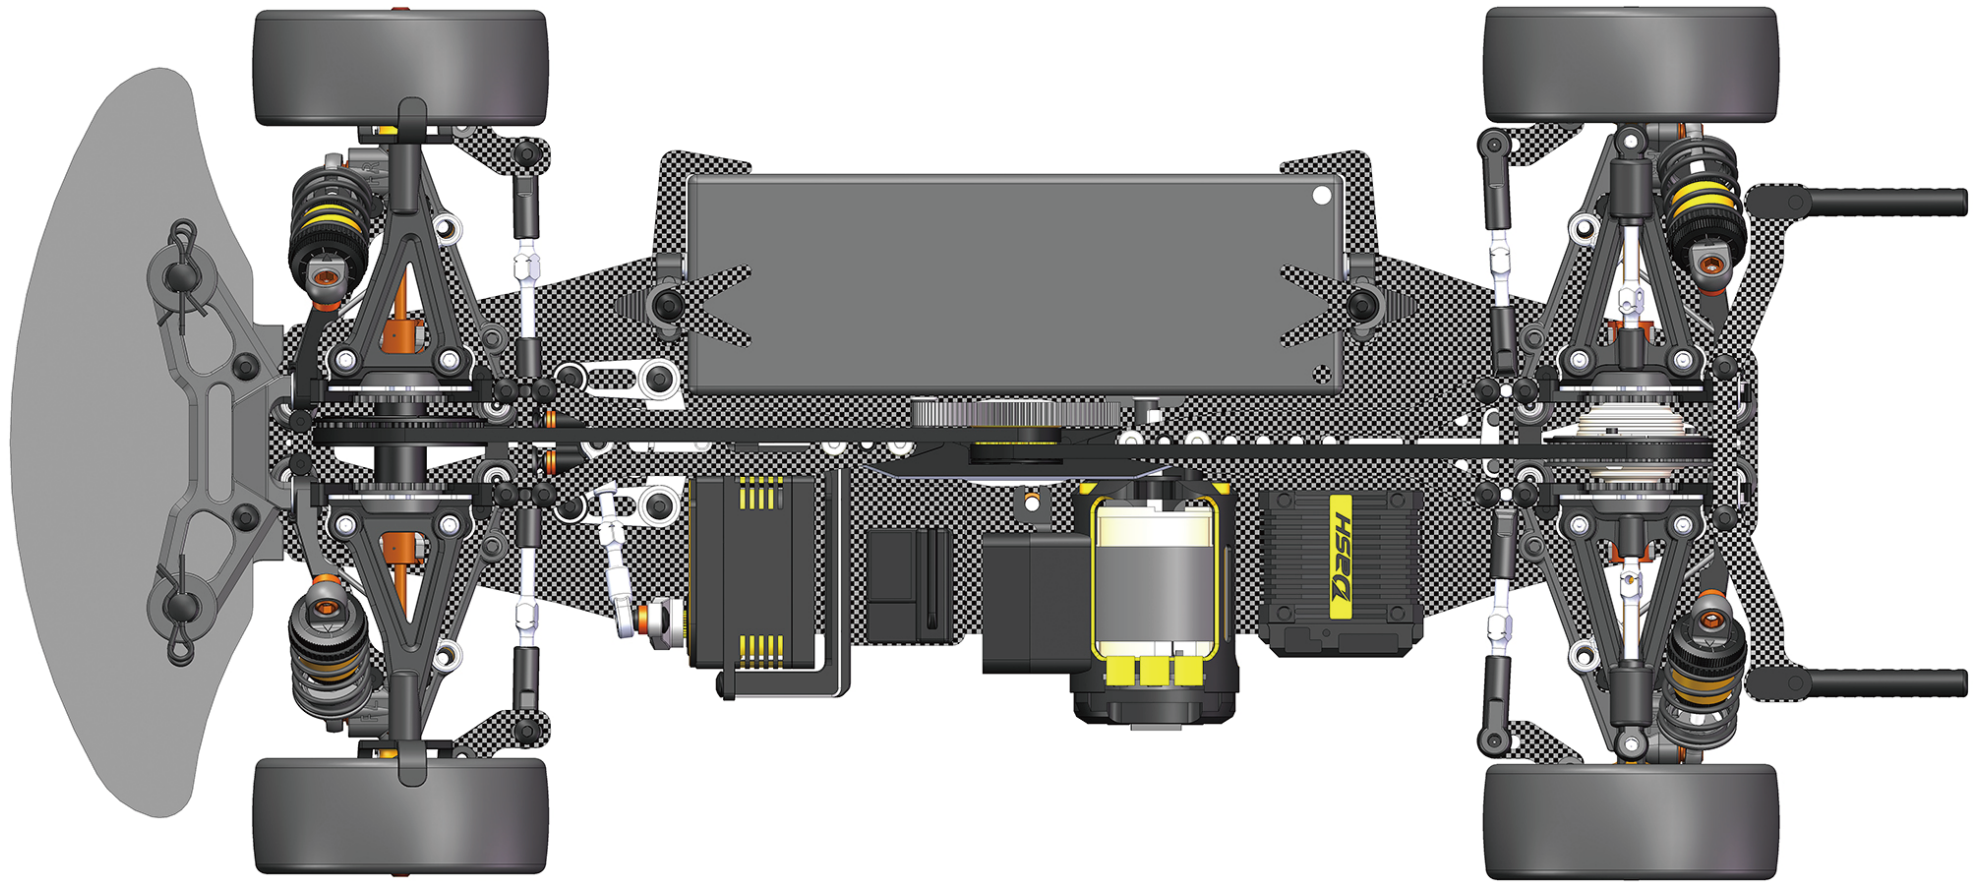




- | | |
|--------|--|
| 402030 | Wishbone stiffner carbon S (4) X20 '23 |
| 402032 | Wishbone stiffner carbon H (4) X20 '23 |
| 402098 | Chassis alu X20 '24 |




- | | |
|--------|----------------------|
| 120010 | Spur gear 64P / 112T |
| 120012 | Spur gear 64P / 114T |
| 120013 | Spur gear 64P / 106T |

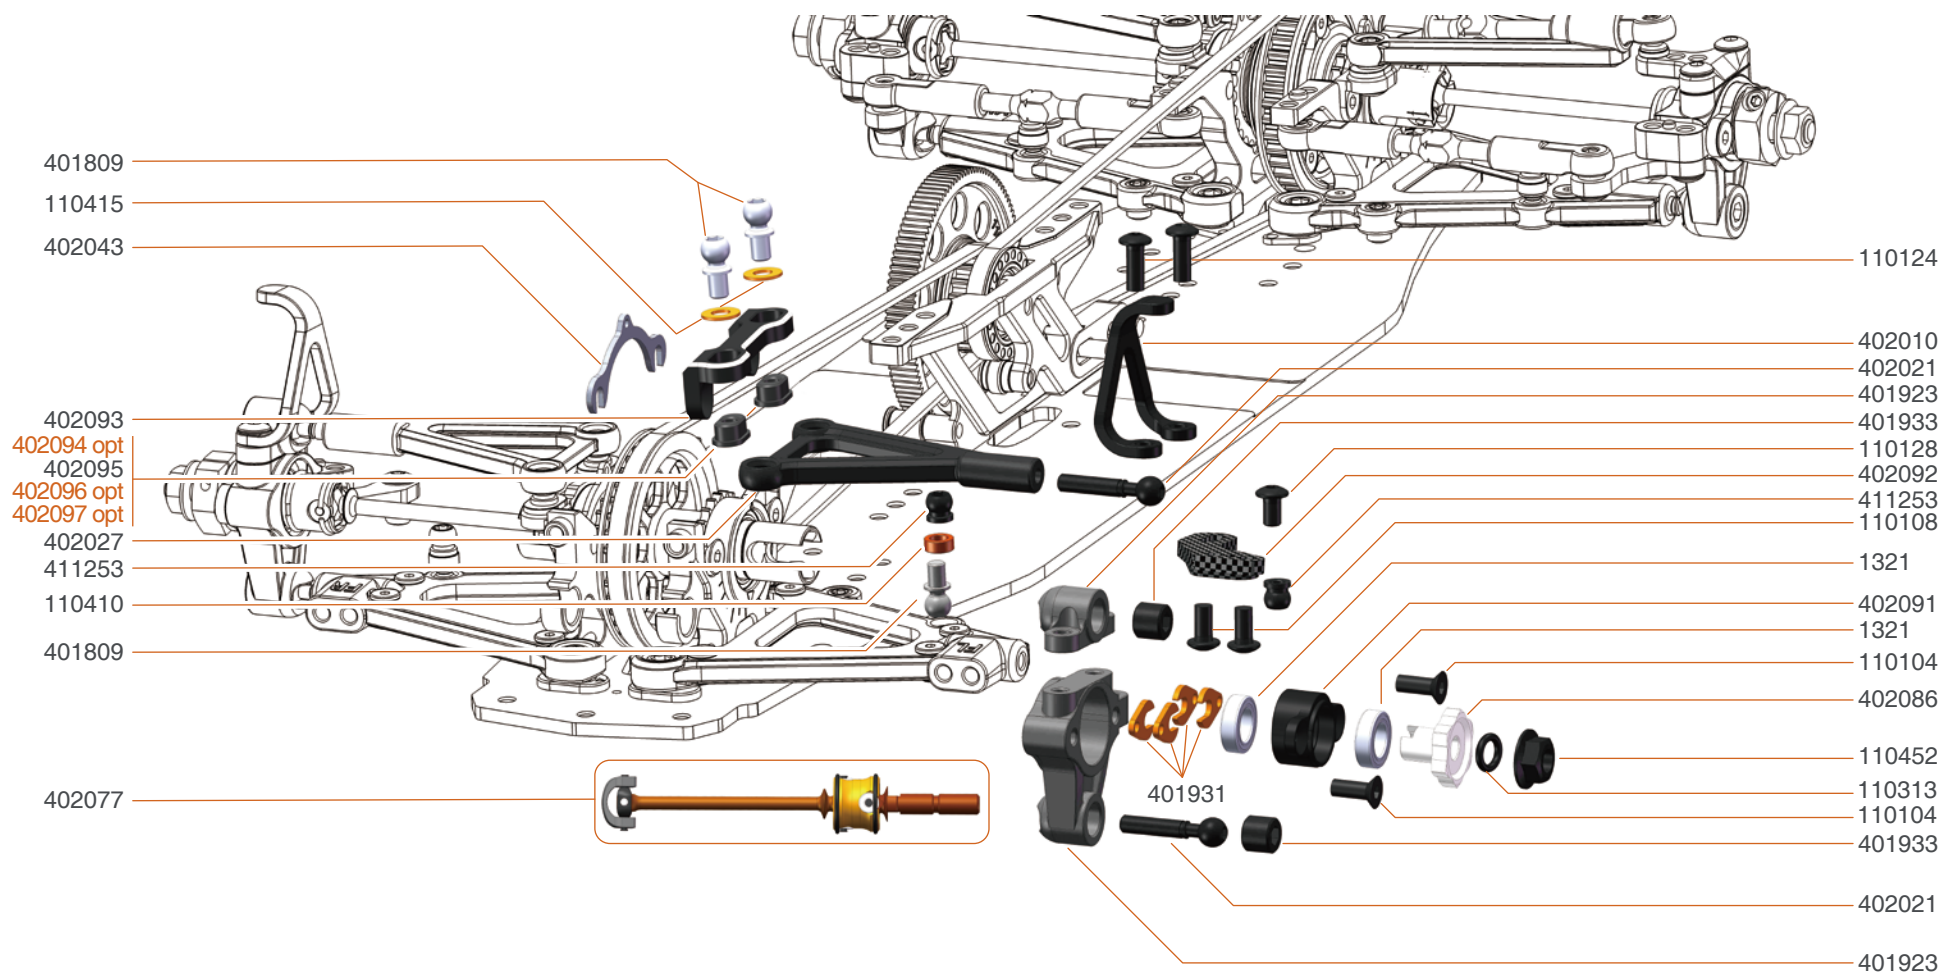


- 402094 Caster insert 0 (4) X20 '24
- 402096 Caster insert 2 (4) X20 '24
- 402097 Caster insert 3 (4) X20 '24




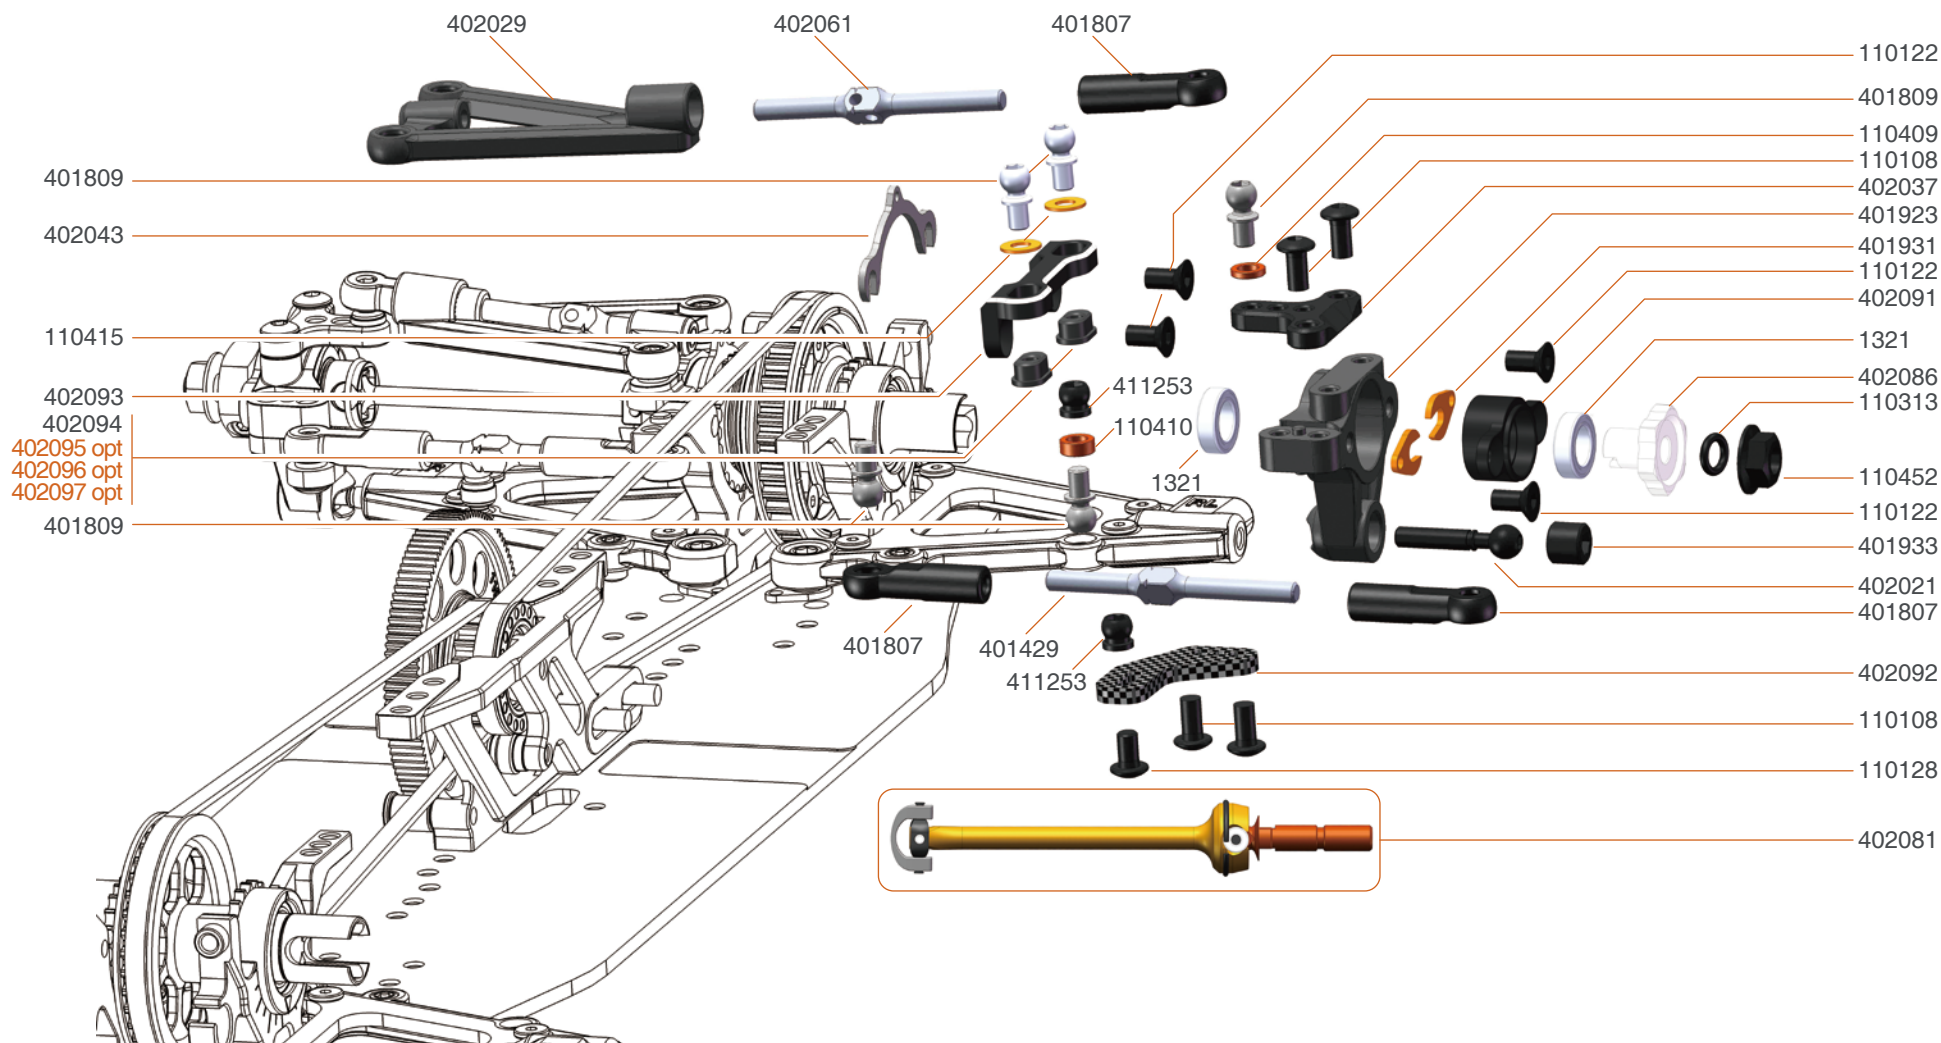

- 402095 Caster insert 1 (4) X20 '24
- 402096 Caster insert 2 (4) X20 '24
- 402097 Caster insert 3 (4) X20 '24

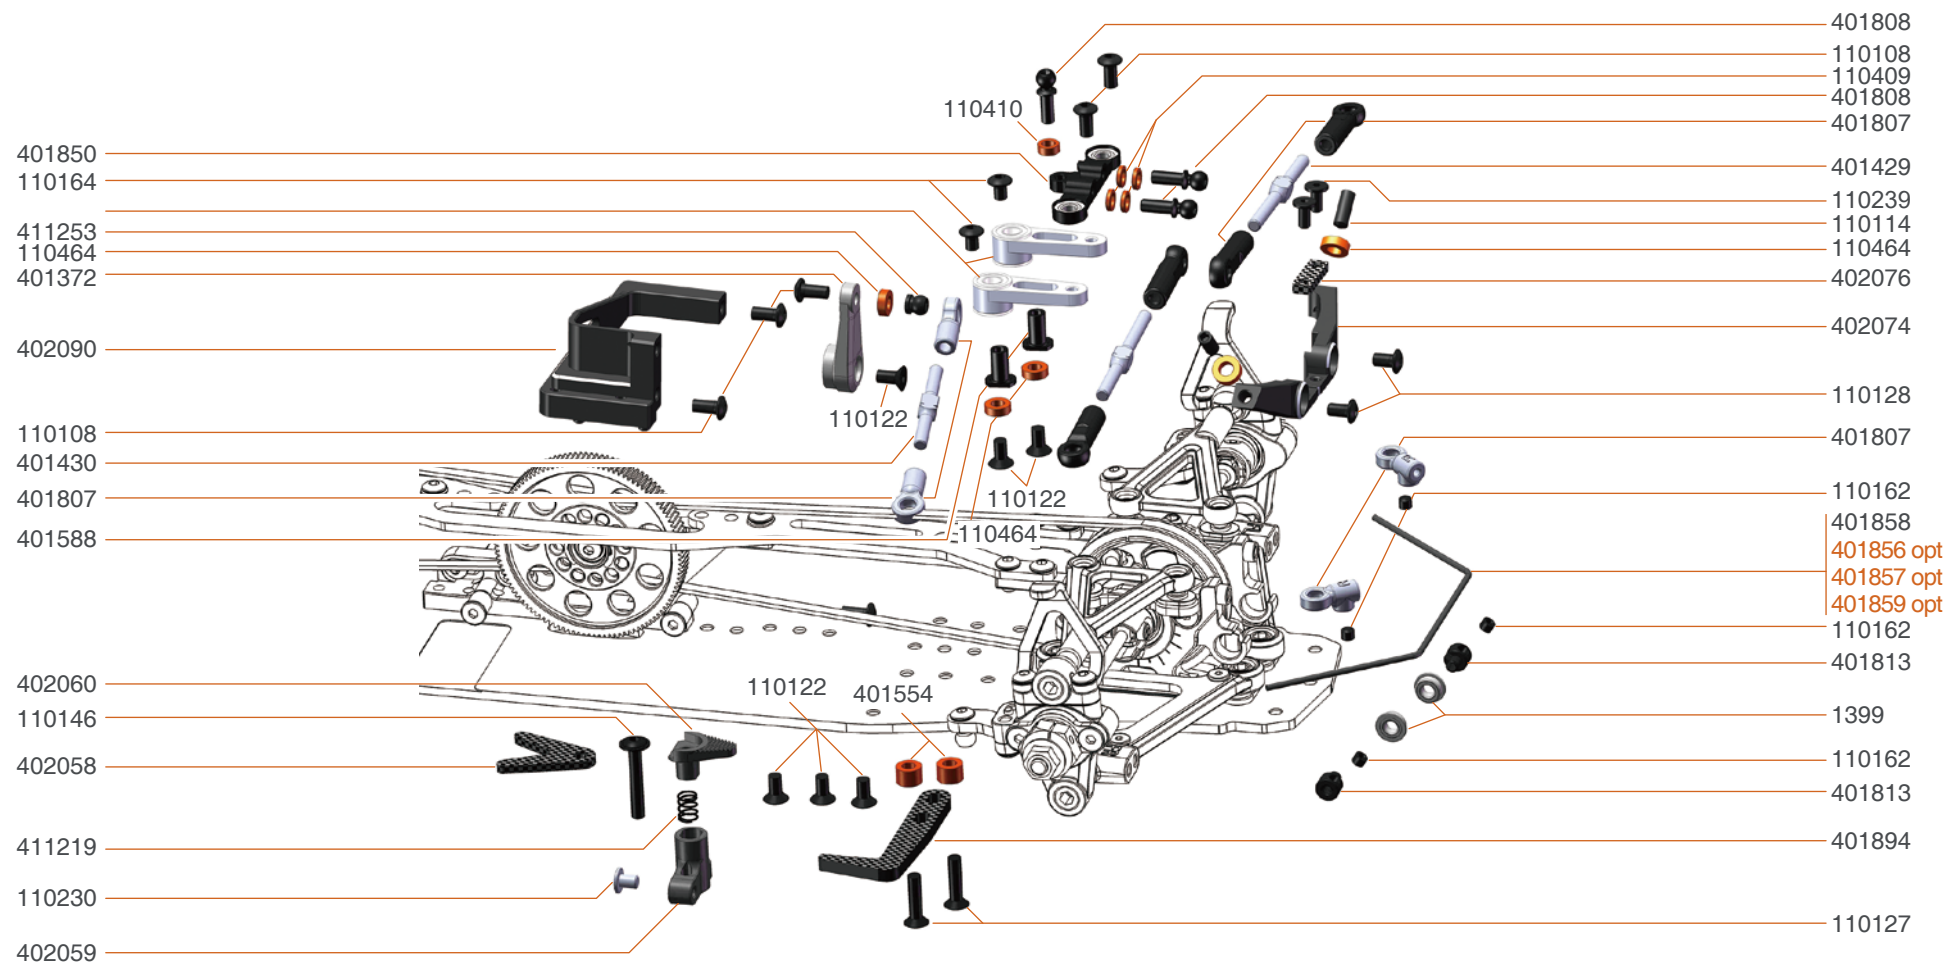


401856 Antirollbar 1,2mm X20
 401857 Antirollbar 1,3mm X20
 401859 Antirollbar 1,5mm X20

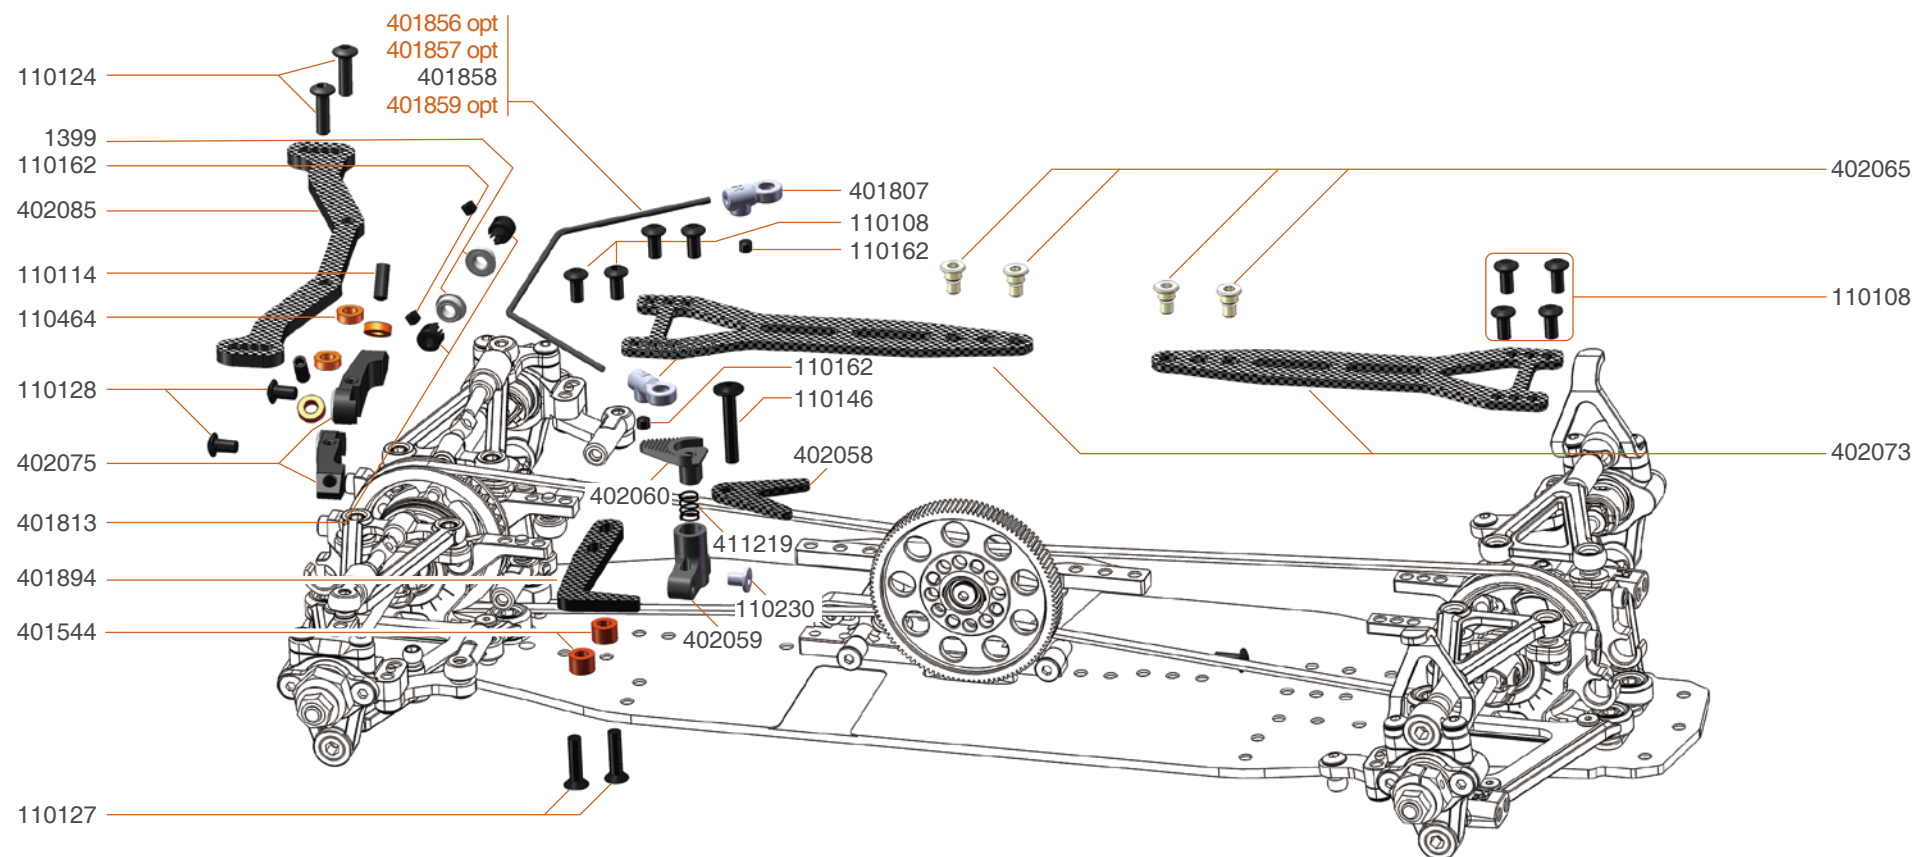


401856 Antirollbar 1,2mm X20
 401857 Antirollbar 1,3mm X20
 401859 Antirollbar 1,5mm X20

402063 Topdeck carbon soft set X20 '23
 402064 Topdeck carbon hard set X20 '23

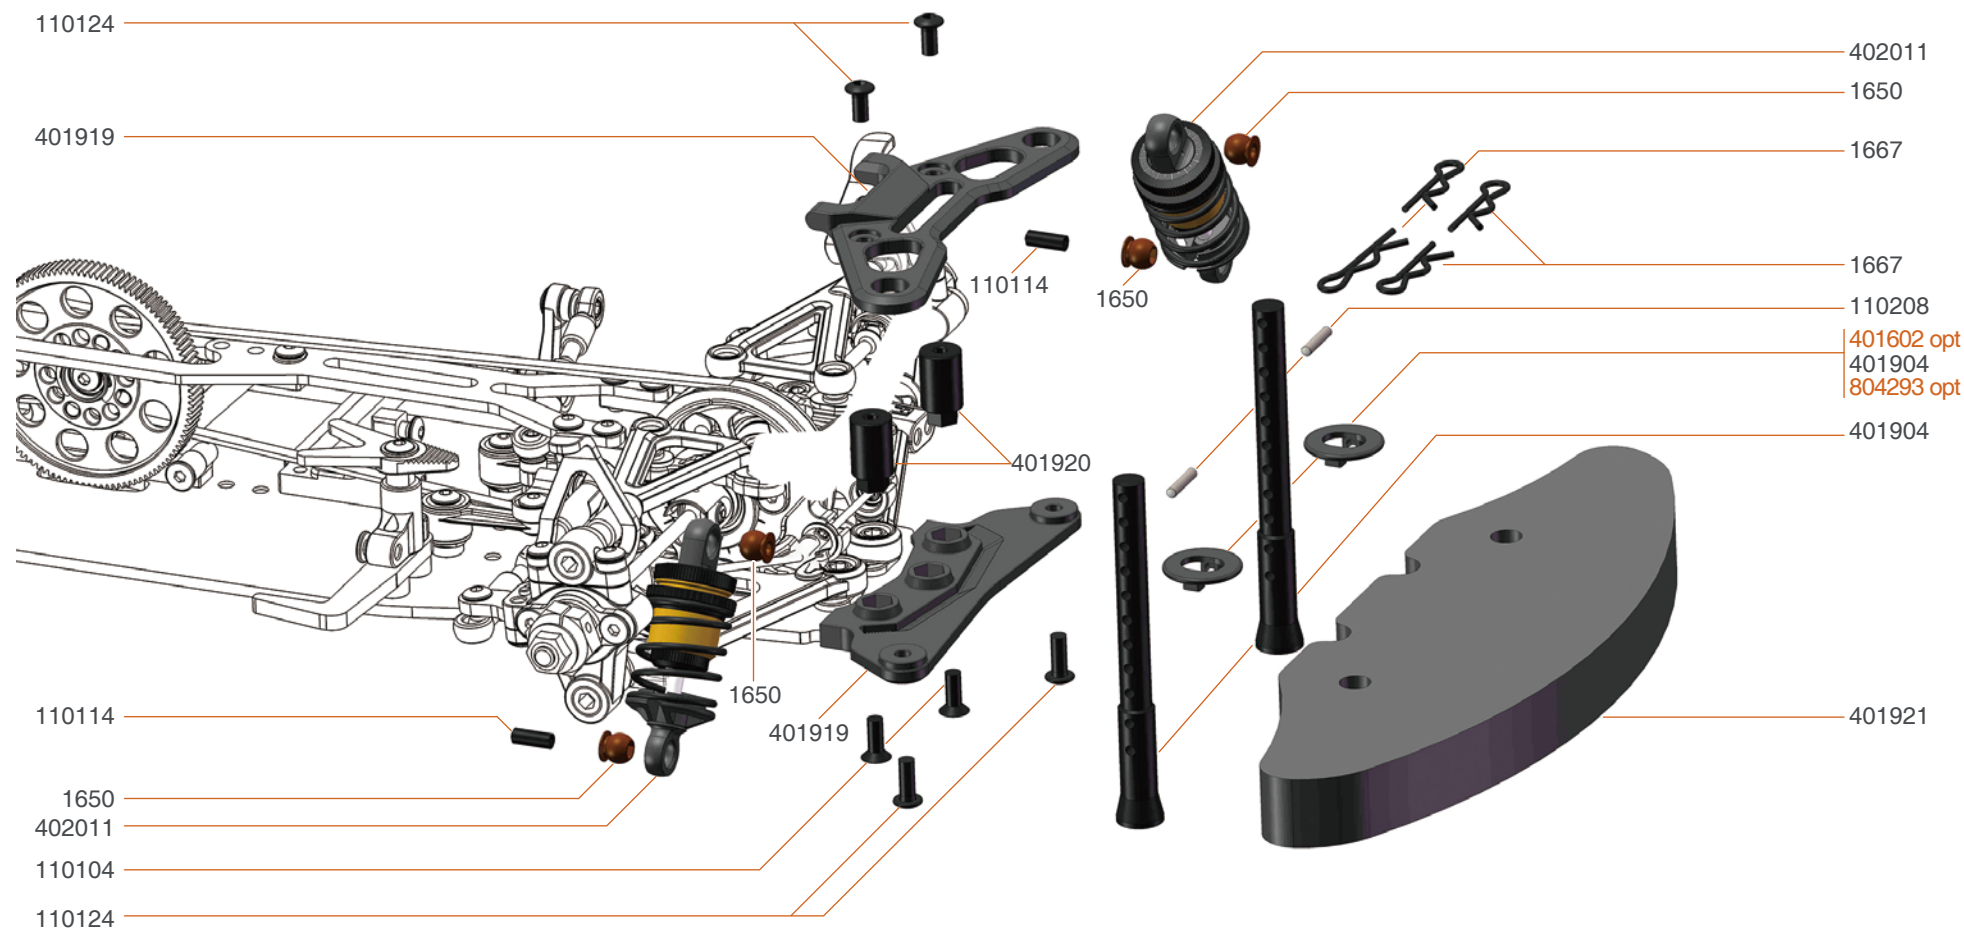


- 401997 Bumperset carbon X20 '21
- 401602 Body-height fine-tuner alu (4)
- 804293 Body support washers med + high (5+5)

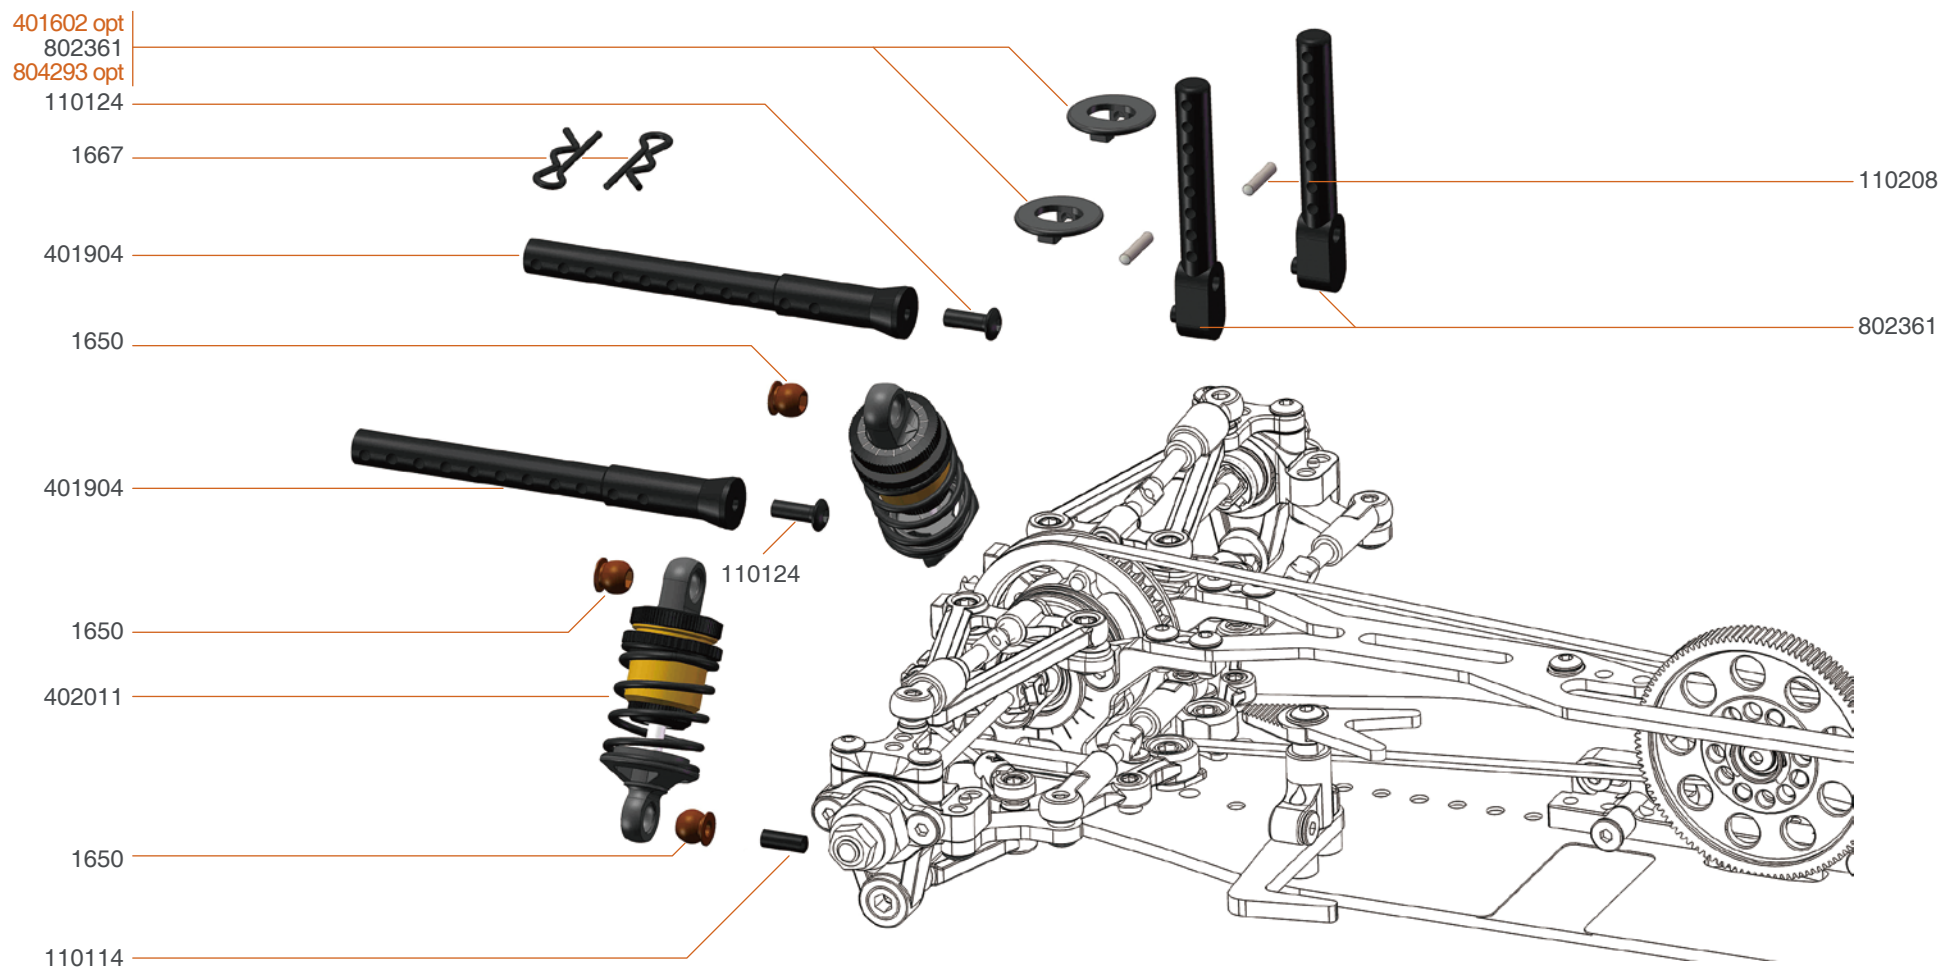


- 401602 Body-height fine-tuner alu (4)
804293 Body support washers med + high (5+5)



402077 DJC BB driveshaft set (2) X20 '24
402081 CVD BB driveshaft set (2) X20 '24

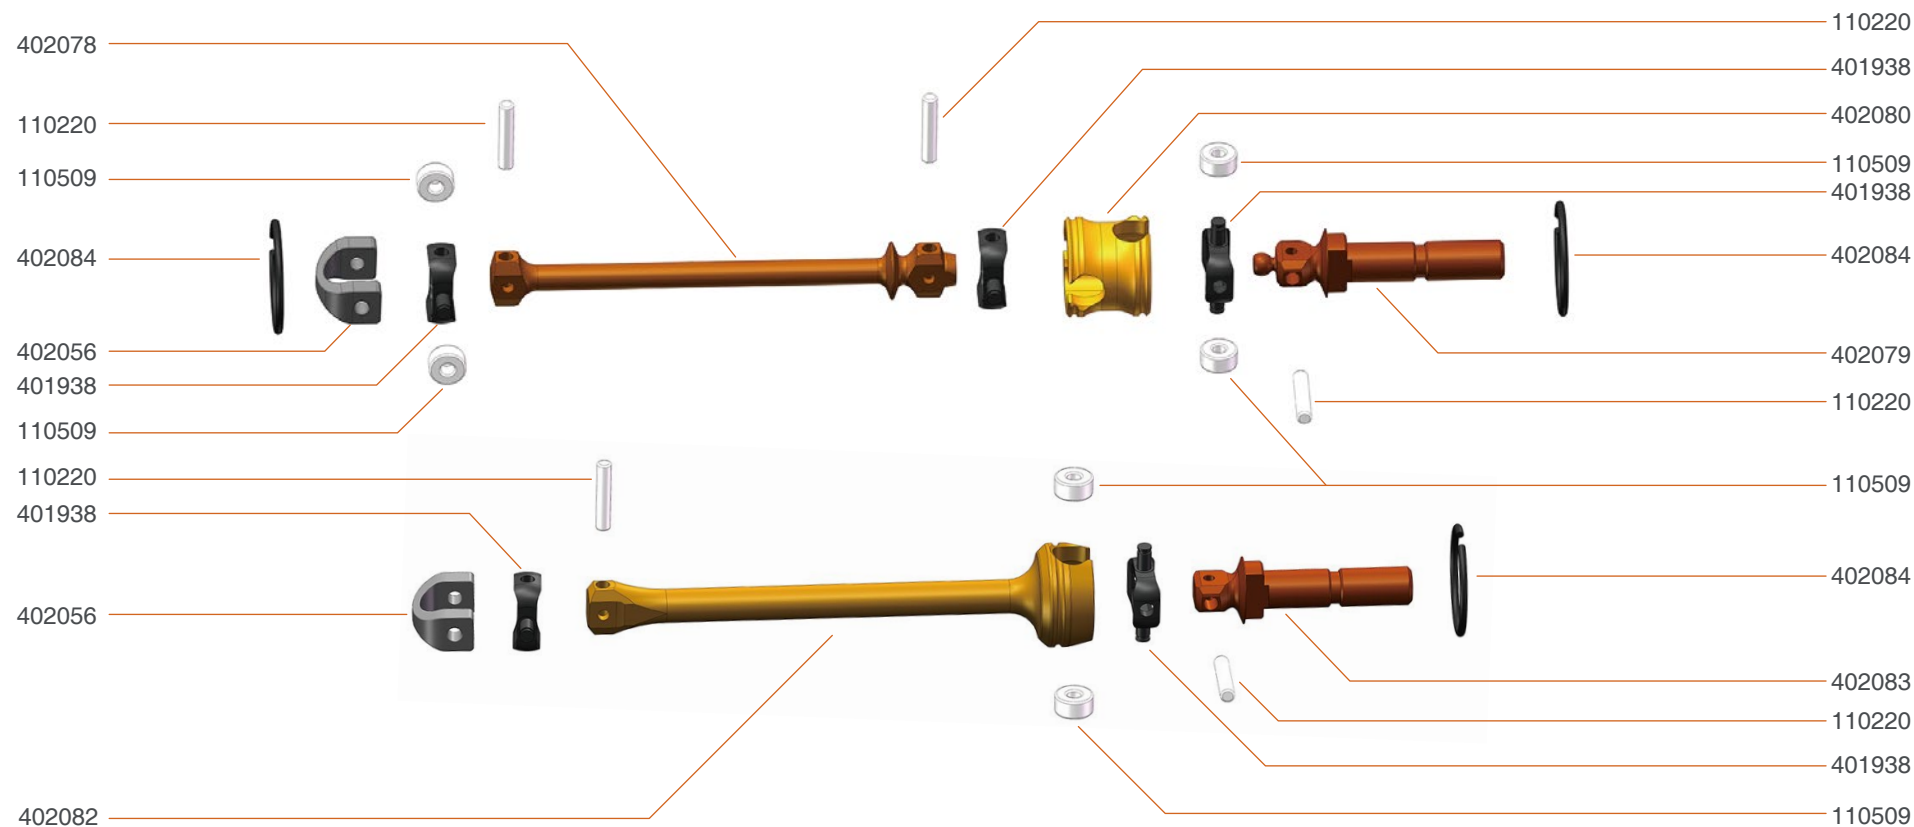

402011 Shockset (2) X20 '23

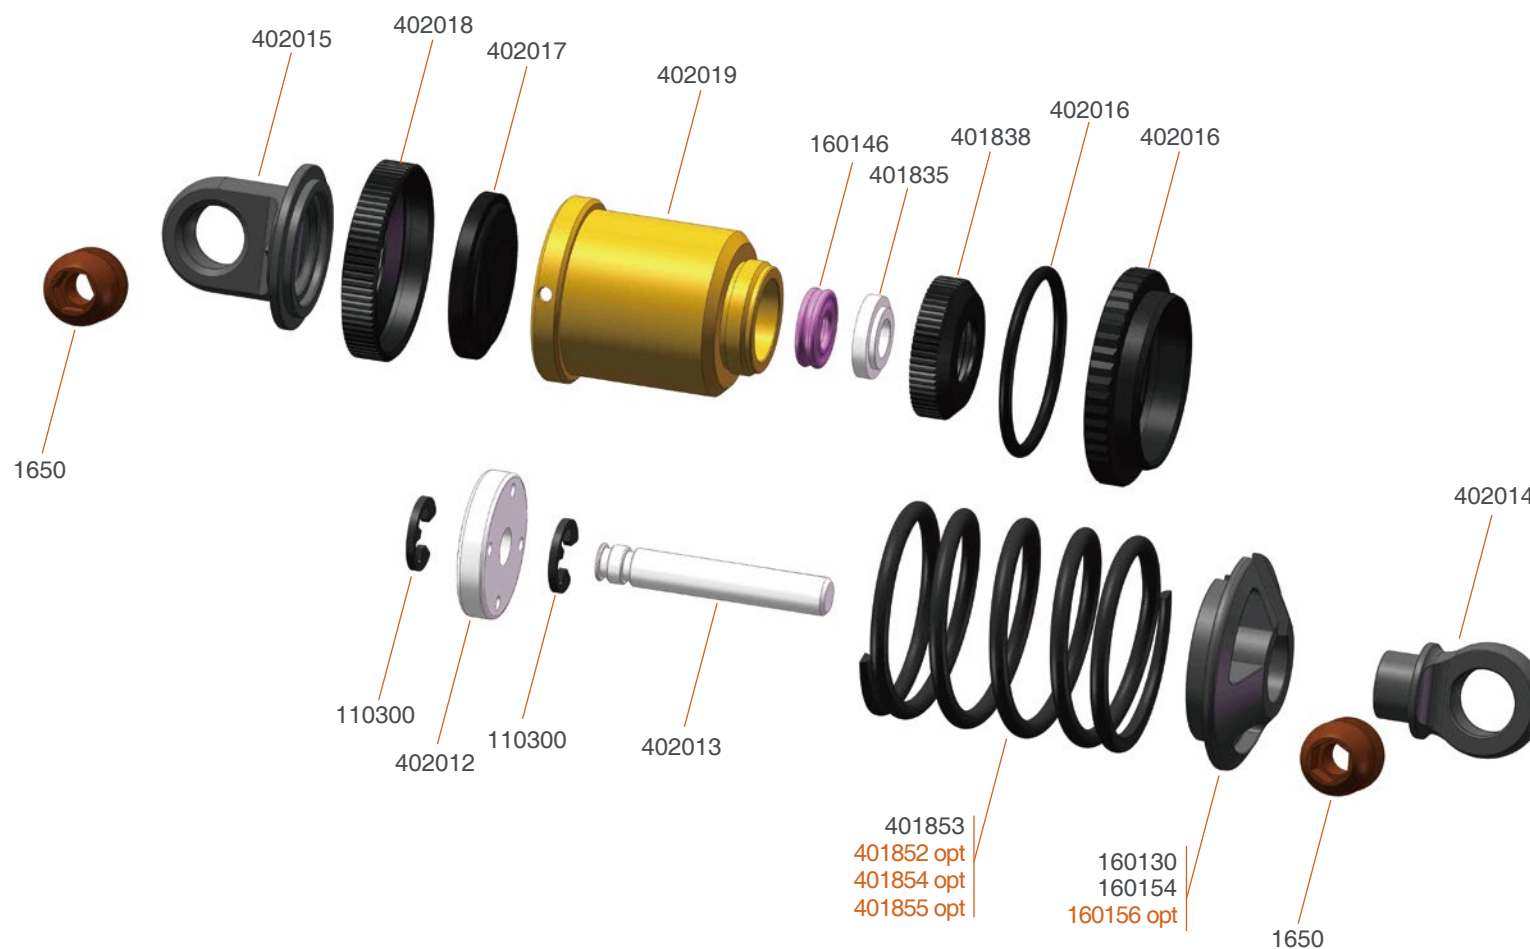

- 401852 Spring fr/rr 2,5 (2)
- 401854 Spring fr/rr 2,7 (2)
- 401855 Spring fr/rr 2,8 (2)
- 160156 Shock spring support low onroad alu (4)

402044 Geardiff set alu X20 '23



401784 Seal 5x9x2 diff (2)



TEAM SERPENT NETWORK

X20' 24 SPARE PARTS



X20' 24 OPTIONALS PARTS



SERPENT TOOLS



SERPENT MERCHANDISING



SERPENT WEBSITE AND BLOG

www.serpent.com

www.teamserpent.com

www.dragon-rc.com

SERPENT PROMO PAGES <http://promo.serpent.com>

SERPENT SOCIAL MEDIA



www.facebook.com/SerpentMRC



www.youtube.com/user/SerpentMRC

INSTRUCTION MANUAL



Manual Medius X20 '24 carbon #98742-2

SERPENT